

PROMAC®

07-2017

Drill Press

Säulenbohrmaschine

BX-840VADTL

Perceuse à colonne




CE

Schweiz / Suisse
JPW (TOOL) AG
Tämperlistrasse 5
CH-8117 Fällanden Switzerland
www.promac.ch

France
TOOL France / PROMAC
57, rue du Bois Chaland, Z.I. du Bois Chaland
case postale 2935 FR-91029 Evry Cedex
www.promac.fr

Parts Breakdown For BX-840VADTL Drill Press

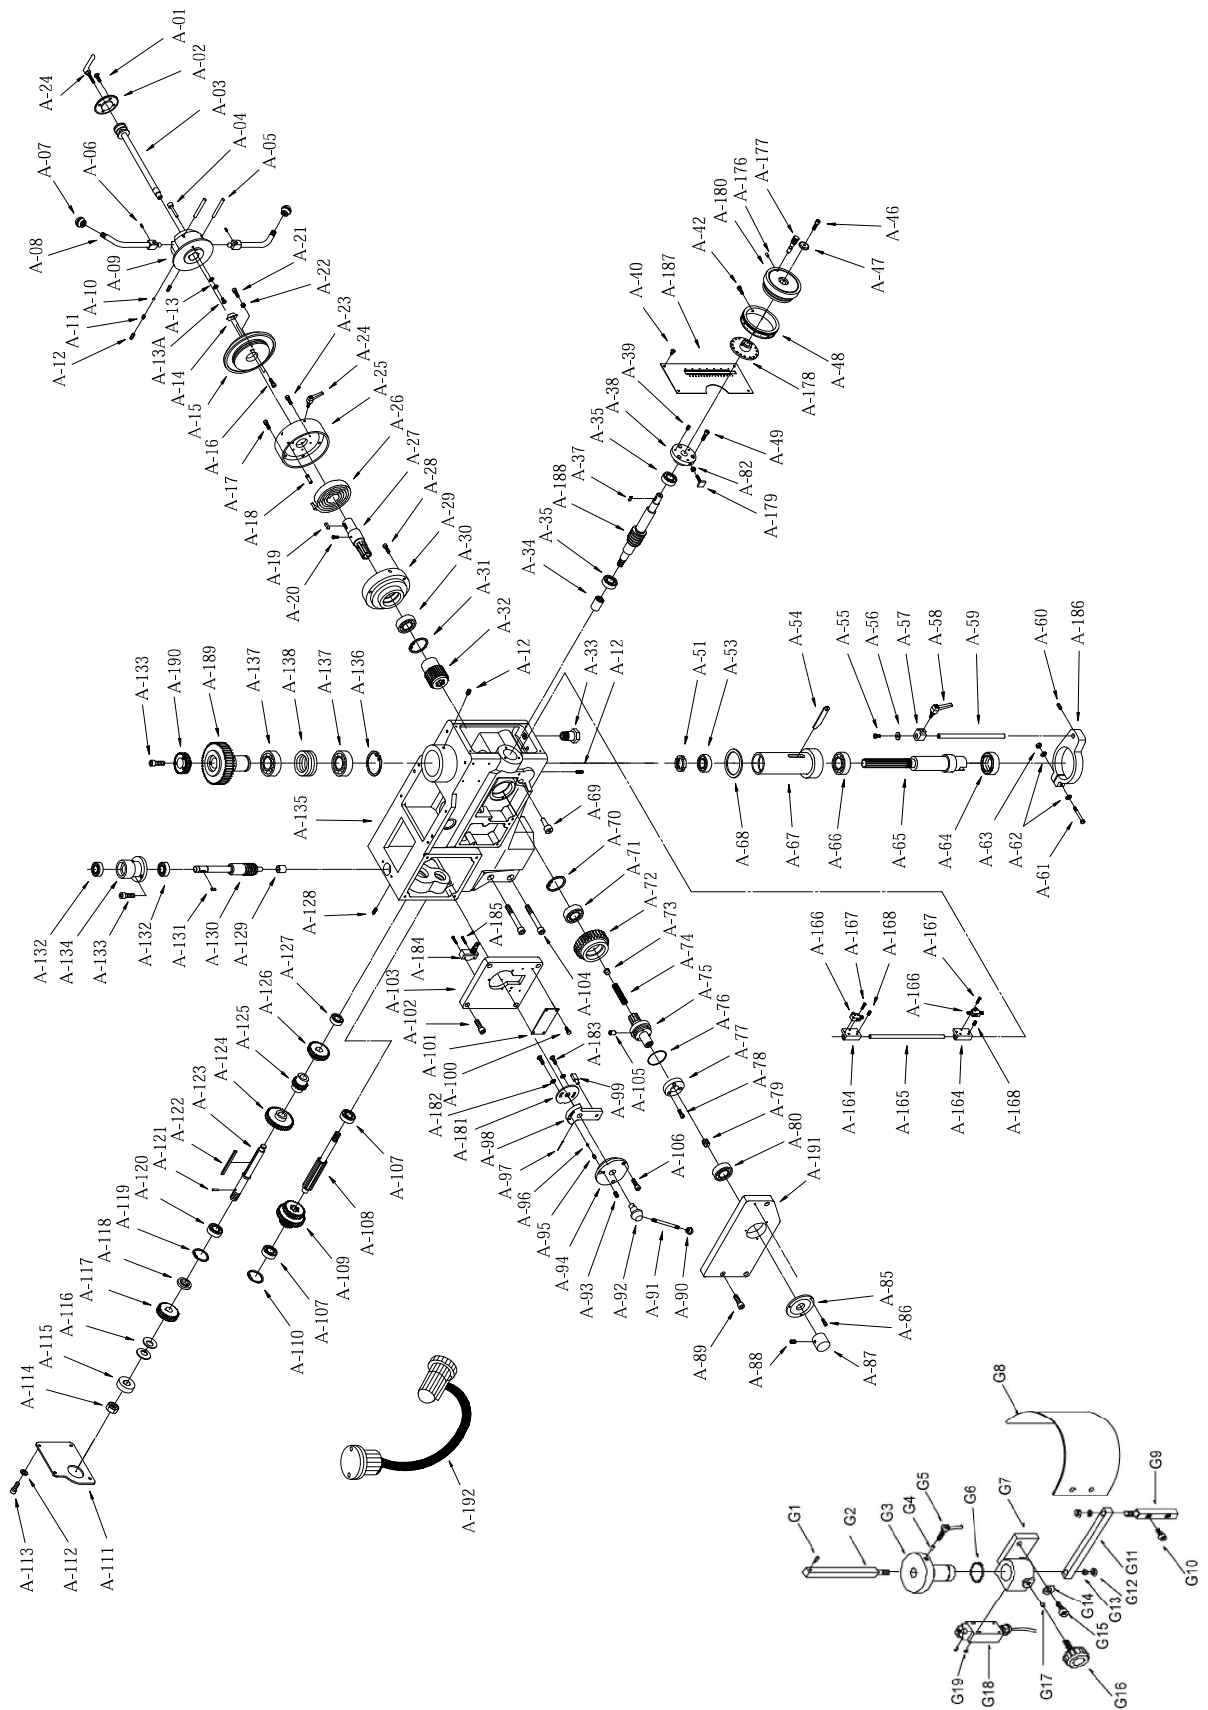

Parts List For BX-840VADTL Drill Press

Index No.	Part No.	Description / Beschreibung / Description	Qty
A 01	PM-840A001	Screw / Schraube / Vis	1
A 02	PM-840A002	Cap / Deckel / Couvercle	1
A 03	PM-840A003	Shaft / Welle / Arbre	1
A 04	PM-840A004	Pin / Stift / Goupille	1
A 05	PM-840A005	Pin / Stift / Goupille	1
A 06	PM-840A006	Screw / Schraube / Vis	1
A 07	PM-840A007	Knob / Knopf / Poignée	1
A 08	PM-840A008	Knob Rod / Griffstange / Manivelle	1
A 09	PM-840A009	Flange / Flansch / Flasque	1
A 10	PM-840A010	Steel Ball / Stahlkugel / Bille	1
A 11	PM-840A011	Spring / Feder / Ressort	1
A 12	PM-840A012	Screw / Schraube / Vis	1
A 13	PM-840A013	Washer / Federscheibe / Rondelle	1
A 13A	PM-840A013A	Screw / Schraube / Vis	1
A 14	PM-840A014	Cam / Nocken / Index	1
A 15	PM-840A015	Flange / Flansch / Flasque	1
A 16	PM-840A016	Screw / Schraube / Vis	1
A 17	PM-840A017	Screw / Schraube / Vis	1
A 18	PM-840A018	Screw / Schraube / Vis	1
A 19	PM-840A019	Key / Keil / Clavette	1
A 20	PM-840A020	Screw / Schraube / Vis	1
A 21	PM-840A021	Screw / Schraube / Vis	1
A 22	PM-840A022	Nut / Mutter / Erou	1
A 23	PM-840A023	Screw / Schraube / Vis	1
A 24	PM-840A024	Locking Lever / Indexiergriff / Jaccard	1
A 25	PM-840A025	Cover / Deckel / Couvercle	1
A 26	PM-840A026	Spring / Feder / Ressort	1
A 27	PM-840A027	Shaft / Welle / Arbre	1
A 28	PM-840A028	Screw / Schraube / Vis	1
A 29	PM-840A029	Flange / Flansch / Flasque	1
A 30	PM-840A030	Ball Bearing / Kugellager / Roulement	1
A 31	PM-840A031	Snap Ring / Sicherungsring / Circlip	1
A 32	PM-840A032	Pignion / Ritzel / Pignon	1
A 33	PM-840A033	Screw / Schraube / Vis	1
A 34	PM-840A034	Bushing / Büchse / Palier	1
A 35	PM-840A035	Ball Bearing / Kugellager / Roulement	1
A 37	PM-840A037	Key / Keil / Clavette	1
A 38	PM-840A038	Flange / Flansch / Flasque	1
A 39	PM-840A039	Screw / Schraube / Vis	1
A 40	PM-840A040	Screw / Schraube / Vis	1
A 42	PM-840A042	Screw / Schraube / Vis	1
A 46	PM-840A046	Screw / Schraube / Vis	1
A 47	PM-840A047	Washer / Scheibe / Rondelle	1
A 48	PM-840A048	Scale Ring / Skalenring / Flasque	1
A 49	PM-840A049	Screw / Schraube / Vis	3
A 50	PM-840A050	Allen Wrench / Schlüssel / Clé	1
A 51	PM-840A051	Nut / Mutter / Erou	1

Parts List For BX-840VADTL Drill Press

Index No.	Part No.	Description / Beschreibung / Description	Qty
A 52	...PM-840A052	Lock Washer / Sicherungsscheibe / Rondelle	1
A 53	...PM-840A053	Bearing / Lager / Roulement	1
A 54	...PM-840A054	Drift Key / Auswurfkeil / Chasse cône	1
A 55	...PM-840A055	Screw / Schraube / Vis	1
A 56	...PM-840A056	Washer / Scheibe / Vis	1
A 57	...PM-840A057	Support / Halter / Support	1
A 58	...PM-840A058	Locking Lever / Indexiergriff / Jaccard	1
A 59	...PM-840A059	Bar / Stange / Tige	1
A 60	...PM-840A060	Screw / Schraube / Vis	1
A 61	...PM-840A061-1	Screw / Schraube / Vis	1
A 62	...PM-840A062	Washer / Scheibe / Rondelle	2
A 63	...PM-840A063	Nut / Mutter / Ecrou	1
A 64	...PM-840A064	Seal / Dichtung / Joint	1
A 65	...PM-840A065	Spindle / Spindel / Broche	1
A 66	...PM-840A066	Bearing / Lager / Roulement	1
A 67	...PM-840A067	Spindle sleeve / Spindelhülse / Fourreau	1
A 68	...PM-840A068	Rubber Washer / Gummiring / Joint	1
A 69	...PM-840A069	Screw / Schraube / Vis	1
A 70	...PM-840A070	Snap Ring / Sicherungsring / Circlip	1
A 71	...PM-840A071	Ball Bearing / Kugellager / Roulement	1
A 72	...PM-840A072	Bevel Gear Wheel / Kegelrad / Engrenage	1
A 73	...PM-840A073	Plug / Stopfen / Flasque	1
A 74	...PM-840A074	Spring / Feder / Rondelle	1
A 75	...PM-840A075	Arbor / Welle / Arbre	1
A 76	...PM-840A076	Spring / Feder / Ressort	1
A 77	...PM-840A077	Plate / Platte / Plate	1
A 78	...PM-840A078	Screw / Schraube / Vis	3
A 79	...PM-840A079	Screw / Schraube / Vis	1
A 80	...PM-840A080	Ball Bearing / Kugellager / Roulement	1
A 85	...PM-840A085	Cover / Abdeckung / Couvercle	1
A 86	...PM-840A086	Screw / Schraube / Vis	3
A 87	...PM-840A087	Cap / Deckel / Couvercle	1
A 88	...PM-840A088	Screw / Schraube / Vis	1
A 89	...PM-840A089	Screw / Schraube / Vis	3
A 90	...PM-840A090	Feed Knob / Knopfgriff / Poignée	1
A 91	...PM-840A091	Feed Rod / Griffstange / Levier	1
A 92	...PM-840A092	Handle Base / Flansch / Flasque	1
A 93	...PM-840A093	Screw / Schraube / Vis	1
A 94	...PM-840A094	Plate / Platte / Plaque	1
A 95	...PM-840A095	Spring / Feder / Ressort	1
A 96	...PM-840A096	Ball / Kugel / Bille	1
A 97	...PM-840A097	Pin / Stift / Goupille	1
A 98	...PM-840A098	Flange / Flansch / Flasque	1
A 99	...PM-840A099	Pin / Stift / Goupille	1
A 100	...PM-840A100	Screw / Schraube / Vis	4
A 101	...PM-840A101	Label / Etiketle / Etiquette	1


Parts List For BX-840VADTL Drill Press

Index No.	Part No.	Description / Beschreibung / Description	Qty
A 102	.PM-840A102	Screw / Schraube / Vis	4
A 103	.PM-840A103	Flange / Flansch / Flasque	1
A 104	.PM-840A104	Screw / Schraube / Vis	2
A 105	.PM-840A105	Pin / Stift / Goupille	3
A 106	.PM-840A106	Screw / Schraube / Vis	3
A 107	.PM-840A107	Ball bearing / Kugellager / Roulement	2
A 108	.PM-840A108	Arbor / Welle / Arbre	1
A 109	.PM-840A109	Gear Wheel / Zahnrad / Engrenage	1
A 110	.PM-840A110	Snap Ring / Sicherungsring / Circlip	1
A 111	.PM-840A111	Cover / Abdeckung / Plaque	1
A 112	.PM-840A112	Washer / Scheibe / Rondelle	4
A 113	.PM-840A113	Screw / Schraube / Vis	4
A 114	.PM-840A114	Nut / Mutter / Ecrou	1
A 115	.PM-840A115	Ring / Ring / Rondelle	1
A 116	.PM-840A116	Spring Washer / Federscheibe / Rondelle	2
A 117	.PM-840A117	Cog Wheel / Zahnrad / Engrenage	1
A 118	.PM-840A118	Ring / Ring / Rondelle	1
A 119	.PM-840A119	Snap Ring / Sicherungsring / Circlip	1
A 120	.PM-840A120	Ball Bearing / Kugellager / Engrenage	1
A 121	.PM-840A121	Pin / Stift / Goupille	1
A 122	.PM-840A122	Key / Keil / Clavette	1
A 123	.PM-840A123	Arbor / Welle / Arbre	1
A 124	.PM-840A124	Cog Wheel / Zahnrad / Engrenage	1
A 125	.PM-840A125	Pinion / Ritzel / Engrenage	1
A 126	.PM-840A126	Cog Wheel / Zahnrad / Engrenage	1
A 127	.PM-840A127	Ball Bearing / Kugellager / Engrenage	1
A 128	.PM-840A128	Screw / Schraube / Vis	1
A 129	.PM-840A129	Bushing / Büchse / Palier	1
A 130	.PM-840A130	Worm Shaft / Schneckenwelle / Arbre	1
A 131	.PM-840A131	Key / Keil / Clavette	1
A 132	.PM-840A132	Ball Bearing / Kugellager / Roulement	2
A 133	.PM-840A133	Screw / Schraube / Vis	2
A 134	.PM-840A134	Flange / Flansch / Flasque	1
A 135	.PM-840A135	Housing / Gehäuse / Tête	1
A 136	.PM-840A136	Snap Ring / Sicherungsring / Circlips	1
A 137	.PM-840A137	Ball Bearing / Kugellager / Roulement	2
A 138	.PM-840A138	Spacer Ring / Distanzring / Roulement	1

Parts List For BX-840VADTL Drill Press

Index No.	Part No.	Description / Beschreibung / Description	Qty
A 164	.PM-840A164	Support / Halter / Flasque.....	2
A 165	.PM-840A165	Bar / Stange / Barre.....	1
A 166	.PM-840A166	Stroke Limit Switch / Hub-Endschalter / Inter Fin Course (SQ2, SQ3)	2
A 167	.PM-840A167	Screw / Schraube / Vis	4
A 168	.PM-840A168	Screw / Schraube / Vis	4
A 176	.PM-840A176	Pin / Stift / Goupille	1
A 177	.PM-840A177	Knob / Drehgriff / Poignée	1
A 178	.PM-840A178	Plate / Platte / Plate	1
A 179	.PM-840A179	Index / Zeiger / Index	1
A 180	.PM-840A180	Handwheel / Handrad / Manivelle.....	1
A 181	.PM-840A181	Support / Platte / Support	1
A 182	.PM-840A182	Washer / Scheibe / Rondelle	2
A 183	.PM-840A183	Screw / Schraube / Vis	2
A 184	.PM-840A184	Limit Switch / Endschalter / Inter fin course (SQ4)	1
A 185	.PM-840A185	Screw / Schraube / Vis	2
A 186	.PM-840A186	Flange / Flansch / Flasque	1
A 187	.PM-840A187	Plate / Platte / Plaque	1
A 188	.PM-840A188	Gear Shaft / Welle / Axe Pignon.....	1
A 189	.PM-840A189	Pulley / Riemenscheibe / Poulie	1
A 190	.PM-840A190	Gear / Zahnrad / Engrenage	1
A 191	.PM-840A191	Flange / Flansch / Flasque	1
A 192	.PM-840A192	LED Light / LED-Leuchte / Eclairage DEL.....	1
G 1	...PM-840G001	Pin / Stift / Goupille	1
G 2	...PM-840G002	Support Bracket Bar / Stange oben / Tige superieur.....	1
G 3	...PM-840G003	Bushing / Büchse / Palier.....	1
G 4	...PM-840G004	Spacer / Druckstück / Press	1
G 5	...PM-840G005	Lock Handle / Indexiergriff / Jaccard	1
G 6	...PM-840G006	C-Clip / Sicherungsring / Circlip.....	1
G 7	...PM-840G007	Bracket / Flansch / Flasque	1
G 8	...PM-840G008	Safety Guard / Späneschutz / Protection	1
G 9	...PM-840G009	Lower Bracket Bar / Stange unten / Tige inferieur.....	1
G 10	.PM-840G010	Hex Socket Cap Screw / Inbusschraube / Vis	2
G 11	.PM-840G011	Support Arm / Arm / Arbre	1
G 12	.PM-840G012	Hex Nut / Mutter / Erou	2
G 13	.PM-840G013	Spring Washer / Federscheibe / Rondelle.....	2
G 14	.PM-840G014	Washer / Scheibe / Rondelle	2
G 15	.PM-840G015	Hex Socket Cap Screw / Inbusschraube / Vis	2
G 16	.PM-840G016	Lock Bolt With Knob / Klemmgriff / Poigner.....	1
G 17	.PM-840G017	Spacer / Druckstück / Press	1
G 18	.PM-840G018	Guard limit switch / Endschalter für Schutz / Inter Fin Course (SQ1)	1
G 19	.PM-840G019	Cross Cap Screw / Schraube / vis	2

Parts List For BX-840VADTL Drill Press

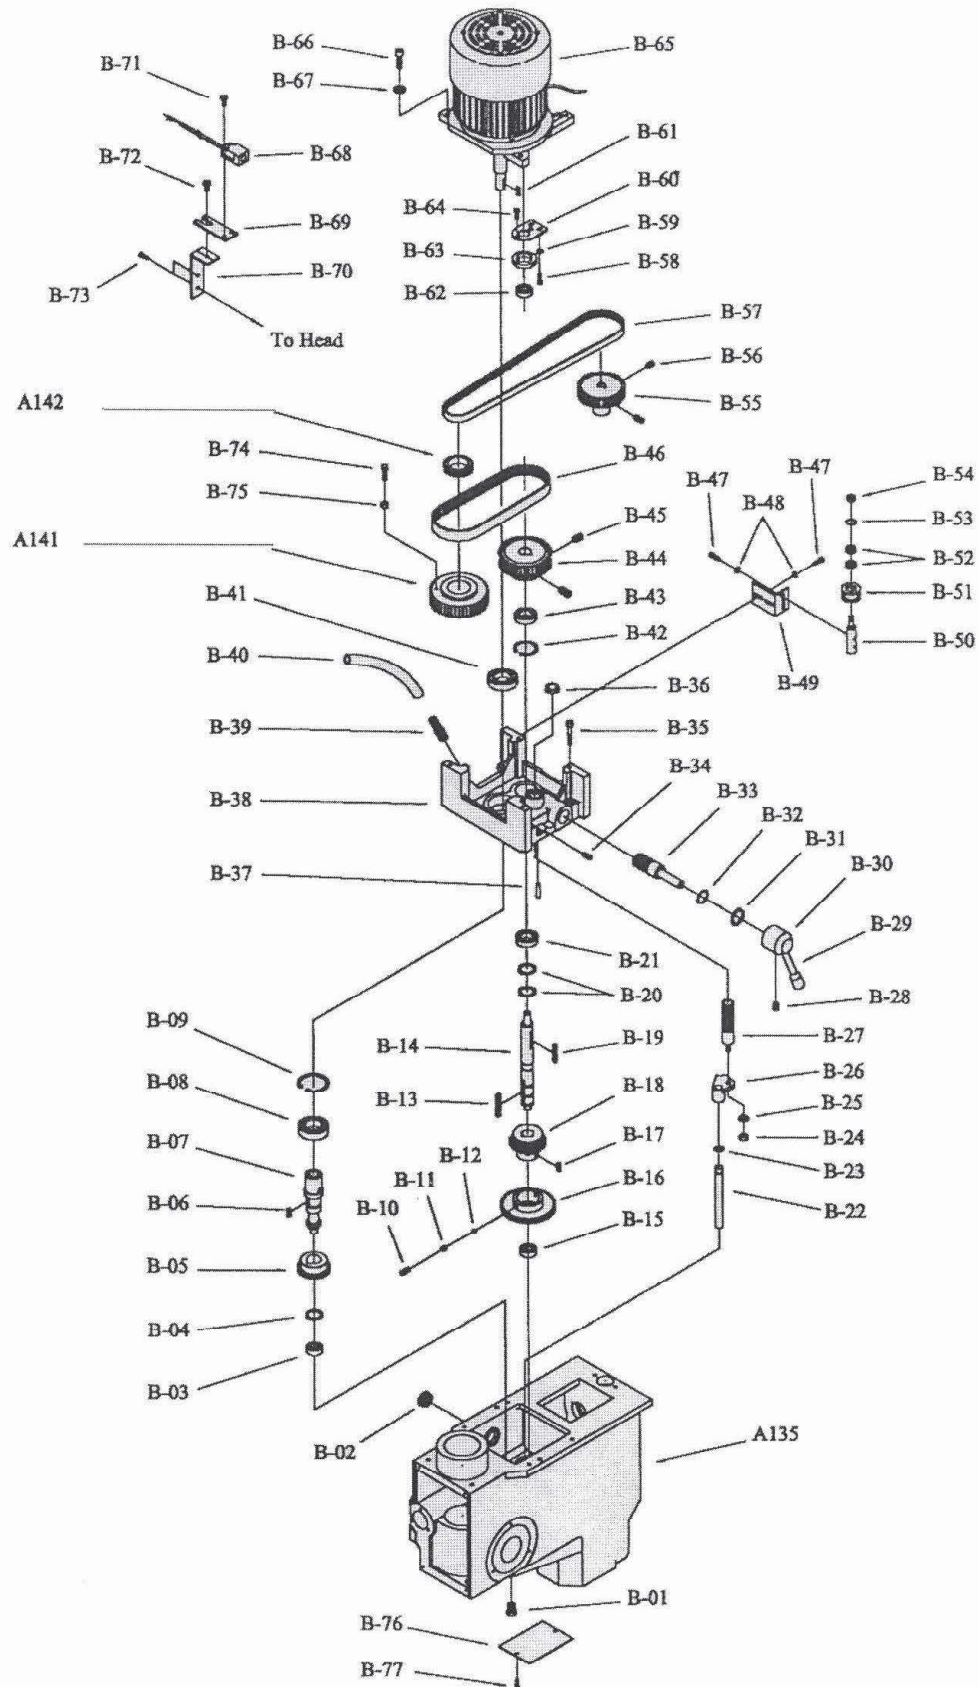

Parts List For BX-840VADTL Drill Press

Index No.	Part No.	Description / Beschreibung / Description	Qty
B 01	...PM-840A135	Oil Drain Plug / Oelablassschraube / Boulon	1
B 02	...PM-840B002	Oil Level Glass / Oelschauglas / Niveau	1
B 03	...PM-840B003	Ball Bearing / Kugellager / Roulement	1
B 04	...PM-840B004	Snap Ring / Sicherungsring / Circlip	1
B 05	...PM-840B005	Cog Wheel / Zahnrad / Roulement	1
B 06	...PM-840B006	Key / Keil / Clavette	1
B 07	...PM-840B007	Arbor / Welle / Arbre	1
B 08	...PM-840B008	Ball Bearing / Kugellager / Roulement	1
B 09	...PM-840B009	Snap Ring / Sicherungsring / Circlip	1
B 10	...PM-840B010	Screw / Schraube / Vis	2
B 11	...PM-840B011	Spring / Feder / Ressort	2
B 12	...PM-840B012	Steel Ball / Stahlkugel / Bille	2
B 13	...PM-840B013	Key / Keil / Clavette	1
B 14	...PM-840B014	Arbor / Welle / Arbre	1
B 15	...PM-840B015	Ball Bearing / Kugellager / Roulement	1
B 16	...PM-840B016	Cog Wheel / Zahnrad / Roulement	1
B 17	...PM-840B017	Key / Keil / Clavette	1
B 18	...PM-840B018	Cog Wheel / Zahnrad / Engrenage	1
B 19	...PM-840B019	Key / Keil / Clavette	1
B 20	...PM-840B020	Snap Ring / Sicherungsring / Circlips	2
B 21	...PM-840B021	Ball Bearing / Kugellager / Roulement	1
B 22	...PM-840B022	Bolt / Bolzen / Boulon	1
B 23	...PM-840B023	O-Ring / O-Ring / O.Ring	1
B 24	...PM-840B023	Nut / Mutter / Ecrou	1
B 25	...PM-840B024	Washer / Scheibe / Rondelle	1
B 26	...PM-840B026	Speed Change Block / Schaltblock / Bloc Selection Vitesse	1
B 27	...PM-840B027	Threaded Bar / Schaltstange / Axe Crémaillère	1
B 28	...PM-840B028	Screw / Schraube / Vis	1
B 29	...PM-840B029	Feed Rod / Griffstange / Poignée	1
B 30	...PM-840B030	Knob / Knopf / Bouton	1
B 31	...PM-840B031	Snap Ring / Sicherungsring / Circlip	1
B 32	...PM-840B032	O-Ring / O-Ring / O-Ring	1
B 33	...PM-840B033	Arbor / Welle / Arbre	1
B 34	...PM-840B034	Screw / Schraube / Vis	1
B 35	...PM-840B035	Screw / Schraube / Vis	4
B 36	...PM-840B036	Sealing Ring / Dichtring / Joint	1
B 37	...PM-840B037	Pin / Stift / Goupille	2
B 38	...PM-840B038	Housing / Gehäuse / Carcasse	1
B 39	...PM-840B039	Breather / Entlüftung / Reniflard	1
B 40	...PM-840B040	Tube / Schlauch / Tube	1
B 41	...PM-840B041	Sealing Ring / Dichtring / Joint	1
B 42	...PM-840B042	Snap Ring / Sicherungsring / Joint	1
B 43	...PM-840B043	Sealing Ring / Dichtring / Joint	1
B 44	...PM-840B044	Pulley / Riemenscheibe / Poulie	1
B 45	...PM-840B045	Screw / Schraube / Vis	2
B 46	...PM-840B046	V-Belt / Keilriemen / Courroie	1
B 47	...PM-840B047	Screw / Schraube / Vis	4
B 48	...PM-840B048	Washer / Scheibe / Rondelle	4
B 49	...PM-840B049	Support / Halter / Flasque	1
B 50	...PM-840B050	Arbor / Welle / Arbre	1
B 51	...PM-840B051	Bearing Seat / Lagersitz / Porte roulement	1

Parts List For BX-840VADTL Drill Press

Index No.	Part No.	Description / Beschreibung / Description	Qty
B 52	...PM-840B052	 Ball Bearing / Kugellager / Roulement....	2
B 53	...PM-840B053	 Washer / Scheibe / Rondelle	1
B 54	...PM-840B054	 Nut / Mutter / Ecrou.....	1
B 55	...PM-840B055	 Pulley / Riemenscheibe / Poulie	1
B 56	...PM-840B056	 Screw / Schraube / Vis	2
B 57	...PM-840B057	 V-Belt / Keilriemen / Courroie	1
B 58	...PM-840B058	 Screw / Schraube / Vis	2
B 59	...PM-840B059	 Washer / Scheibe / Rondelle	2
B 60	...PM-840B060	 Plate / Platte / Plaque	1
B 61	...PM-840B061	 Key / Keil / Clavette	1
B 62	...PM-840B062	 Ball Bearing / Kugellager / Roulement....	1
B 63	...PM-840B063	 Bearing Seat / Lagersitz / Logement roulement	1
B 64	...PM-840B064	 Screw / Schraube / Vis	2
B 65	...PM-840B065	 Motor / Motor / Moteur (M1)	1
B 66	...PM-840B066	 Screw / Schraube / Vis	1
B 67	...PM-840B067	 Washer / Scheibe / Rondelle	1
B 68	...PM-840B068	 Sensor / Sensor / Sensor.....	1
B 69	...PM-840B069	 Plate / Platte / Plaque	1
B 70	...PM-840B070	 Support / Halter / Porteur.....	1
B 71	...PM-840B071	 Screw / Schraube / Vis	2
B 72	...PM-840B072	 Screw / Schraube / Vis	1
B 73	...PM-840B073	 Screw / Schraube / Vis	2
B 74	...PM-840B074	 Screw / Schraube / Vis	1
B 75	...PM-840B075	 Nut / Mutter / Ecrou.....	1
B 76	...PM-840B076	 Plate / Platte / Plaque	1
B 77	...PM-840B077	 Screw / Schraube / Vis	2

This exploded view diagram illustrates the assembly of a mechanical device, likely a microscope or a similar precision instrument. The components are labeled C-01 through C-60. The assembly is organized into several main sections:

- Base Assembly (Bottom):** Consists of the main housing (C-01), a central support column (C-06), and a base plate (C-02). Other components like C-03, C-04, C-05, C-07, C-08, C-09, C-10, C-11, C-12, C-13, C-14, C-15, C-16, C-17, C-18, C-19, C-20, C-21, and C-22 are shown as sub-components of the base and column.
- Central Column (Middle):** The central support column (C-06) is the main vertical structure. It is surrounded by various rings, bearings, and adjustment mechanisms labeled C-23 through C-47.
- Head Assembly (Top):** The head assembly (C-48) is the topmost component, which includes a lens or objective (C-49), a stage (C-50), and a base plate (C-51). It is connected to the central column via a series of components labeled C-23 through C-47.
- Adjustment Mechanisms (Right):** A series of components labeled C-23 through C-47 are shown as adjustment mechanisms, including a large adjustment knob (C-23), a stage (C-24), a base plate (C-25), a lens (C-26), a stage (C-27), a base plate (C-28), a stage (C-29), a base plate (C-30), a stage (C-31), a base plate (C-32), a stage (C-33), a base plate (C-34), a stage (C-35), a base plate (C-36), a stage (C-37), a base plate (C-38), a stage (C-39), a base plate (C-40), a stage (C-41), a base plate (C-42), a stage (C-43), a base plate (C-44), a stage (C-45), a base plate (C-46), and a stage (C-47).

The diagram shows the relative positions and assembly sequence of these components, with arrows indicating the direction of movement or assembly. The components are arranged in a way that shows the overall structure and the relationship between the different parts.


Parts List For BX-840VADTL Drill Press

Index No.	Part No.	Description / Beschreibung / Description	Qty
C 01	PM-840C001	Socle / Fussgehäuse / Base	1
C 02	PM-840C002	Pin / Stift / Goupille	1
C 03	PM-840C003	Plug / Stopfen / Boulon	1
C 04	PM-840C004	Screw / Schraube / Vis	1
C 05	PM-840C005	Cable Gland / Kabelverschraubung / Serre câble	1
C 06	PM-840C006	Column / Säule / Colonne	1
C 07	PM-840C007	Copper Pad / Druckstück / Press	2
C 08	PM-840C008	Screw / Schraube / Vis	2
C 09	PM-840C009	Nut / Mutter / Ecrou	1
C 10	PM-840C010	Grip / Griff / Poignée	1
C 11	PM-840C011	Lever / Kurbel / Levier	1
C 12	PM-840C012	Arbor / Welle / Arbre	1
C 13	PM-840C013	Bushing / Büchse / Palier	1
C 14	PM-840C014	Screw / Schraube / Vis	1
C 15	PM-840C015	Pin / Stift / Goupille	1
C 16	PM-840C016	Screw / Schraube / Vis	2
C 17	PM-840C017	Ring / Ring / Rondelle	1
C 18	PM-840C018	Rack / Zahnstange / Crémaillère	1
C 19	PM-840C019	Rod / Stange / Axe	1
C 20	PM-840C020	Bushing / Büchse / Palier	1
C 21	PM-840C021	Table / Tisch / Table	1
C 22	PM-840C022	Nipples / Nippel / Raccord	1
C 23	PM-840C023	Bushing (Thread) / Büchse (Gewinde) / Palier (Filetage)	1
C 24	PM-840C024	Screw / Schraube / Vis	1
C 25	PM-840C025	Gear / Zahnrad / Engrenage	1
C 26	PM-840C026	Key / Keil / Clavette	1
C 27	PM-840C027	Worm Shaft / Schneckenwelle / Pignon	1
C 28	PM-840C028	Bearing / Drucklager / Roulement	1
C 29	PM-840C029	Key / Keil / clavette	1
C 30	PM-840C030	Arbor / Welle / Arbre	1
C 31	PM-840C031	Screw / Schraube / Vis	3
C 32	PM-840C032	Snap Ring / Sicherungsring / Circlip	2
C 33	PM-840C033	Spring / Feder / Ressort	1
C 34	PM-840C034	Arbor / Welle / Arbre	1
C 35	PM-840C035	Ball Bearing / Kugellager / Roulement	1
C 36	PM-840C036	Bevel Gear / Kegelrad / Engrenage Conique	1
C 37	PM-840C037	Screw / Schraube / Vis	1
C 38	PM-840C038	Flange / Flansch / Flasque	1
C 39	PM-840C039	Bevel Gear Shaft / Kegelradwelle / Arbre Engrenage Conique	1
C 40	PM-840C040	Flange / Flansch / Flasque	1
C 41	PM-840C041	Spring Washer / Federring / Rondelle Grower	1
C 42	PM-840C042	Screw / Schraube / Vis	1
C 43	PM-840C043	Ball Bearing / Kugellager / Roulement	2
C 44	PM-840C044	Cog Wheel / Zahnrad / Engrenage	1
C 45	PM-840C045	Pin / Stift / Goupille	1
C 46	PM-840C046	Steel Ball / Stahlkugel / Bille	40
C 47	PM-840C047	Ring / Ring / Rondelle	1
C 48	PM-840C048	Cable Gland / Kabelverschraubung / Serre câble	1
C 49	PM-918090	Tube / Schlauch / Tuyau	1

Parts List For BX-840VADTL Drill Press

Index No.	Part No.	Description / Beschreibung / Description	Qty
C 50	...PM-919109	 Collar / Klemme / Collier	2
C 51	...PM-840C051	 Screw / Schraube / Vis	2
C 52	...PM-840C052	 Cover / Abdeckung / Couvercle	1
C 53	...PM-918090	 Tube / Schlauch / Tuyau	1
C 54	...PM-840C054	 Screw / Schraube / Vis	1
C 55	...PM-206508	 Pump / Pumpe / Pompe 400V (M2)	1
C 56	...PM-840C056	 Screw / Schraube / Vis	4
C 57	...PM-320046	 Screw / Schraube / Vis	1
C 58	...PM-937202	 Support / Halter / Porteur	1
C 59	...PM-918092	 Regulator / Regulierhahn / Robinet	1
C 60	...PM-937201	 Coolant Nozzle / Gelenkschlauch / / Tuyau Flexible	1


Parts Breakdown For BX-840VADTL Drill Press

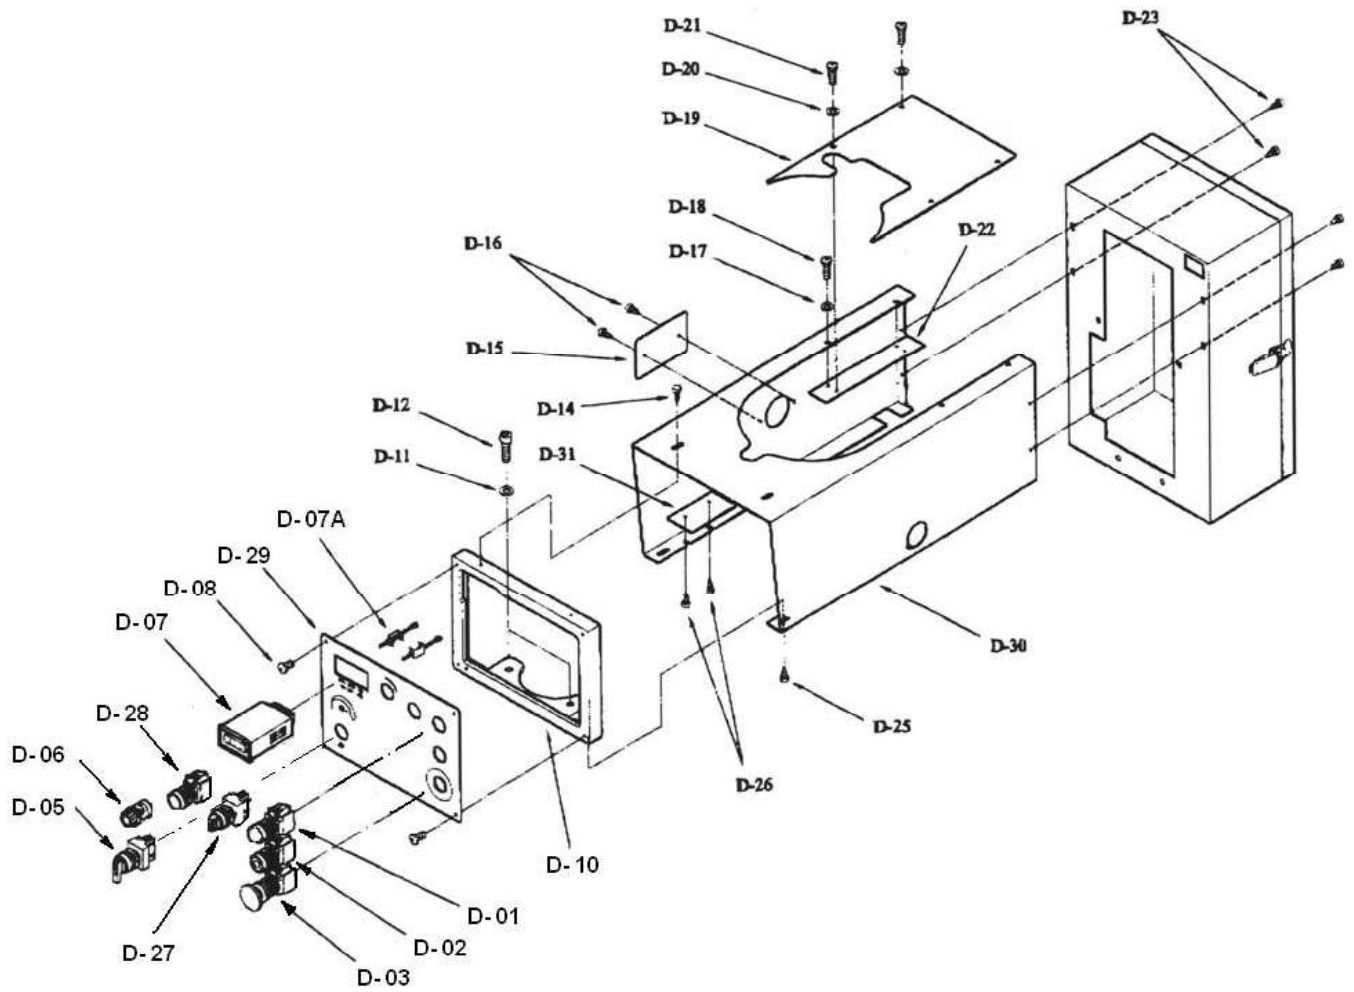

Parts List For BX-840VADTL Drill Press

Index No.	Part No.	Description / Beschreibung / Description	Qty
D 01	...PM-383503	Stop Switch / Schalter / Inter. STOP (SB2)	1
D 02	...PM-383502	Start Switch / Schalter / Inter. START (SB3)	1
D 03	...PM-920312	Emergency Stop Switch / Not-Ausschalter / Arrêt Coup Poing (SB1)	1
D 05	...PM-923164	Pump Switch / Pumpenschalter / Interrupteur Pompe (SB6)	1
D 06	...PM-840D006	Speed Controller / Drehzahlregelpoti / Potentiomètre (VR)	1
D 07	...PM-841062-1	Digital Readout / Digitalanzeige / Affichage Digital (DRO)	1
D 07A	PM-840D007A	Screw / Schraube / Vis	2
D 08	...PM-840D008	Screw / Schraube / Vis	4
D 10	...PM-840D010	Flange / Flansch / Flasque	1
D 11	...PM-840D011	Washer / Scheibe / Rondelle	2
D 12	...PM-840D012	Screw / Schraube / Vis	2
D 14	...PM-840D014	Screw / Schraube / Vis	2
D 15	...PM-840D015	Cover / Deckel / Couvercle	1
D 16	...PM-840D016	Screw / Schraube / Vis	2
D 17	...PM-840D017	Washer / Scheibe / Rondelle	4
D 18	...PM-840D018	Screw / Schraube / Vis	4
D 19	...JDP840VADT-D019	Cover / Deckel / Couvercle	1
D 20	...PM-840D020	Washer / Scheibe / Rondelle	4
D 21	...PM-840D021	Screw / Schraube / Vis	4
D 22	...PM-840D022	Plate / Platte / Plaque	2
D 23	...PM-840D023	Screw / Schraube / Vis	4
D 25	...PM-840D025	Screw / Schraube / Vis	2
D 26	...PM-840D026	Screw / Schraube / Vis	4
D 27	...PM-383520	Drill-Tap Switch / Bohr-Gewinde Wahlschalter / Inter P-D (SB4)	1
D 28	...PM-840D028	Reverse Switch / Linkslauf Schalter / Inter Reverse (SB5)	1
D 29	...PM-840D029	Front Plate / Frontplatte / Façade	1
D 30	...PM-840D030	Belt Cover / Riemengehäuse / Carter	1
D 31	...PM-840D031	Plate / Platte / Plate	2

Electrical Cabinet Assembly

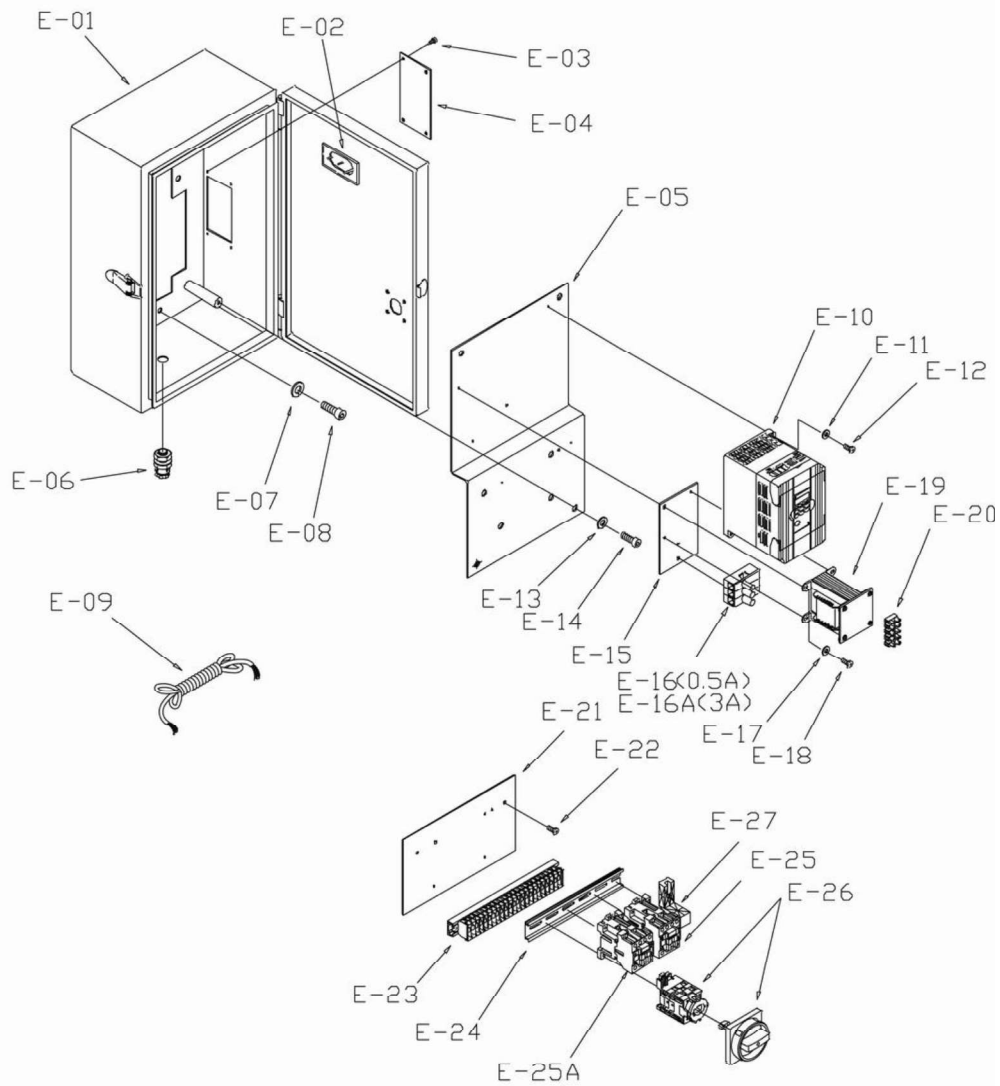

Parts List For BX-840VADTL Drill Press

Index No.	Part No.	Description / Beschreibung / Description	Qty
E 01	...PM-840E001	Electric Box / Elektrokasten / Coffret électrique.....	1
E 02	...PM-840E002	Window / Glas / Vitre	1
E 03	...PM-840E003	Screw / Schraube / Vis	4
E 04	...PM-840E004	Plate / Platte / Plaque	1
E 05	...PM-840E005	Plate / Platte / Plaque	1
E 06	...PM-840E006	Cable Gland / Kabelverschraubung / Serre câble	1
E 07	...PM-840E007	Washer / Scheibe / Rondelle	4
E 08	...PM-840E008	Screw / Schraube / Vis	4
E 09	...PM-840E009	Mains Cable / Netzkabel / Câble d'alimentation	1
E 10	...PM-833078	Inverter / Frequenzumformer / Variateur (VFD-M)	1
E 11	...PM-840E011	Washer / Scheibe / Vis	2
E 12	...PM-840E012	Screw / Schraube / Vis	2
E 13	...PM-840E013	Washer / Scheibe / Rondelle	1
E 14	...PM-840E014	Screw / Schraube / Vis	1
E 15	...PM-840E015	Isolation / Isolation / Isolant	1
E 16	...PM-383522	Fuse / Sicherung / Fusible 0.5A (F1, F2)	2
E 16A	...PM-383518	Fuse / Sicherung / Fusible 3A (F3)	1
E 17	...PM-840E017	Washer / Scheibe / Rondelle	4
E 18	...PM-840E018	Screw / Schraube / Vis	4
E 19	...PM-923073	Transformer / Transformator / Transformateur (TR).....	1
E 20	...PM-840E020	Cable Clamp / Kabelklemme / Serre câble.....	1
E 21	...PM-840E021	Plate / Platte / Plaque	1
E 22	...PM-840E022	Screw / Schraube / Vis	5
E 23	...PM-840E023	Clip Board / Klemmenleiste / Serre Câble (XB).....	1
E 24	...PM-840E024	Bar / Schiene / Porteur	1
E 25/A	PM-383501	Double Contactor / Doppelschütz / Contacteur Double (KM1, KM2)	1
E 26	...PM-923197	Main Switch / Hauptschalter / Sectionneur (Q1).....	1
E 27	...PM-840E027	Relay / Relais / Relais (KR,RX)	2