

**Generator
Generatoren
Générateurs**


**GE-2500N
GE-4000N
GE-6500N**



Schweiz / Suisse
JPW (TOOL) AG
Tämperlistrasse 5
CH-8117 Fällanden Switzerland
www.promac.ch

France
TOOL France / PROMAC
57, rue du Bois Chaland, Z.I. du Bois Chaland
case postale 2935 FR-91029 Evry Cedex
www.promac.fr


GE-4000N, GE-6500N Assembly Breakdown - Cylinder Block Assy

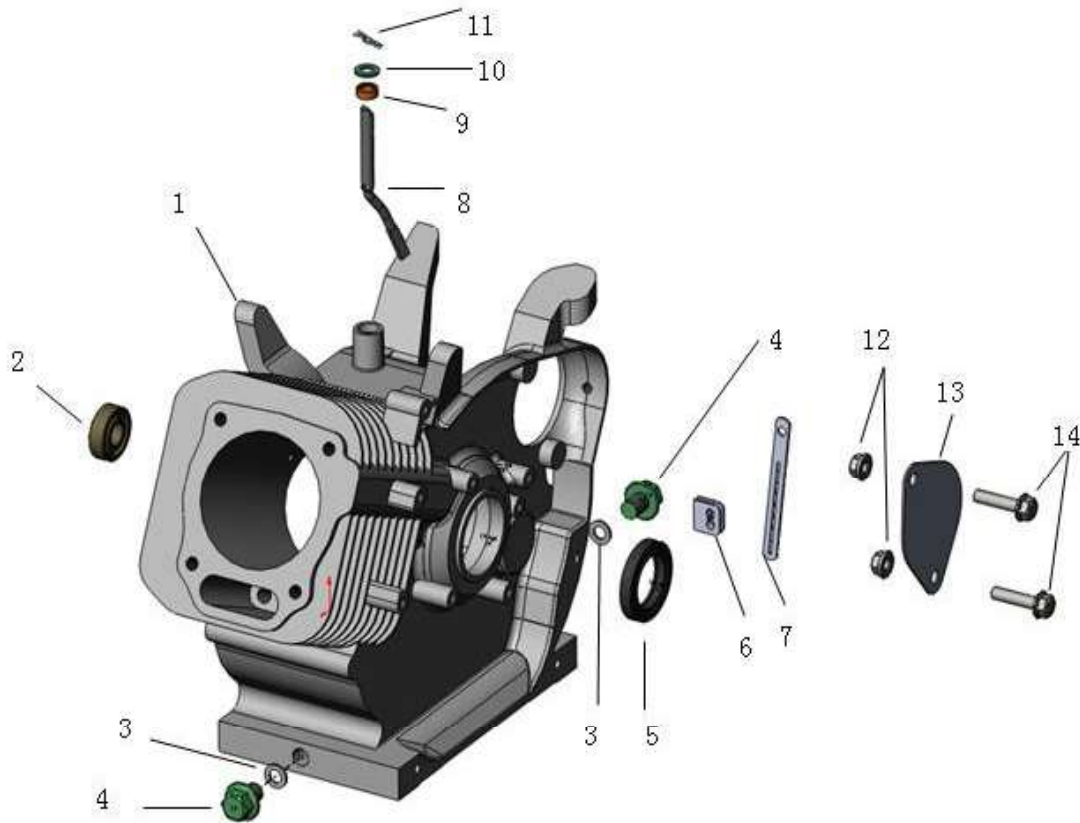

GE-4000N, GE-6500N Parts List for Breakdown - Cylinder Block Assy

Index No.	Part No.	Description	Size	Qty.
1.....	GE40N-01-01	Crankcase.....		1
.....	GE65N-01-01	Crankcase.....		1
2.....	(n/a for GE-4000N).....	Ball bearing.....		1
.....	GE65N-01-02	Ball bearing.....		1
3.....	GE40N-01-03	Seal ..		2
4.....	GE40N-01-04	Drain plug		2
5.....	(n/a for GE-4000N).....	Oil seal		1
.....	GE65N-01-05	Oil seal		1
6.....	GE40N-01-06	Crankcase wire jacket		1
7.....	GE40N-01-07	Dipped clamp.....		1
8.....	GE40N-01-08	Governor swing rod		1
.....	GE65N-01-08	Governor swing rod		1
9.....	(n/a for GE-4000N).....	Oil seal		1
.....	GE65N-01-09	Oil seal		1
10.....	GE40N-01-10	Governor swing rod gasket.....		1
11.....	GE40N-01-11	Governor swing rod clip.....		1
12.....	GE40N-01-12	Flange nut M8.....	M8.....	2
13.....	GE40N-01-13	Cover plate.....		1
.....	GE65N-01-13	Cover plate.....		1
14.....	GE40N-01-14	Flange bolt M8x25.....	M8x25.....	2


GE-4000N, GE-6500N Assembly Breakdown - Crankcase Cover Assy

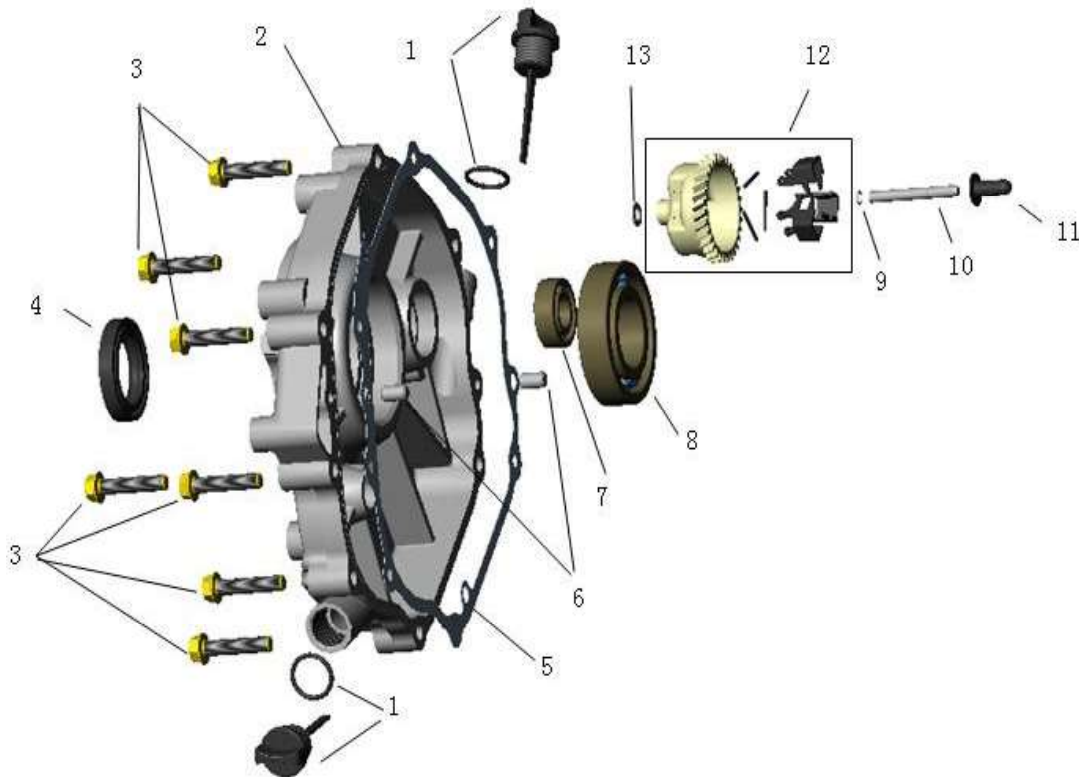

GE-4000N, GE-6500N Parts List for Breakdown - Crankcase Cover Assy

Index No.	Part No.	Description	Size	Qty.
1.....	GE40N-02-01	Oil level gauge.....		2
2.....	GE40N-02-02	Crankcase cover.....		1
	GE65N-02-02	Crankcase cover.....		1
3.....	GE40N-02-03	Flange bolt	M8×38.....	7
4.....	GE40N-02-04	Oil seal	TC30*46*8.....	1
	GE65N-02-04	Oil seal	TC30*46*8.....	1
5.....	GE40N-02-05	Crankcase cover gasket		1
	GE65N-02-05	Crankcase cover gasket		1
6.....	GE40N-02-06	Dowel pin	8×14.....	2
7.....	(n/a for GE-4000N)	Ball bearing		1
	GE40N-02-07	Ball bearing		1
8.....	GE40N-02-08	Ball bearing	6206/P63	1
	GE65N-02-08	Ball bearing	6206/P63	1
9.....	GE40N-02-09	Regulating shaft clip		1
10.....	GE40N-02-10	Regulating shaft		1
11.....	GE40N-02-11	Governor.....		1
12.....	GE40N-02-12	Governor gear assy.....		1
	GE65N-02-12	Governor gear assy.....		1
13.....	GE40N-02-13	Governor gear gasket		1


GE-4000N, GE-6500N Assembly Breakdown – Crankshaft, Piston & Connecting Rod Assy

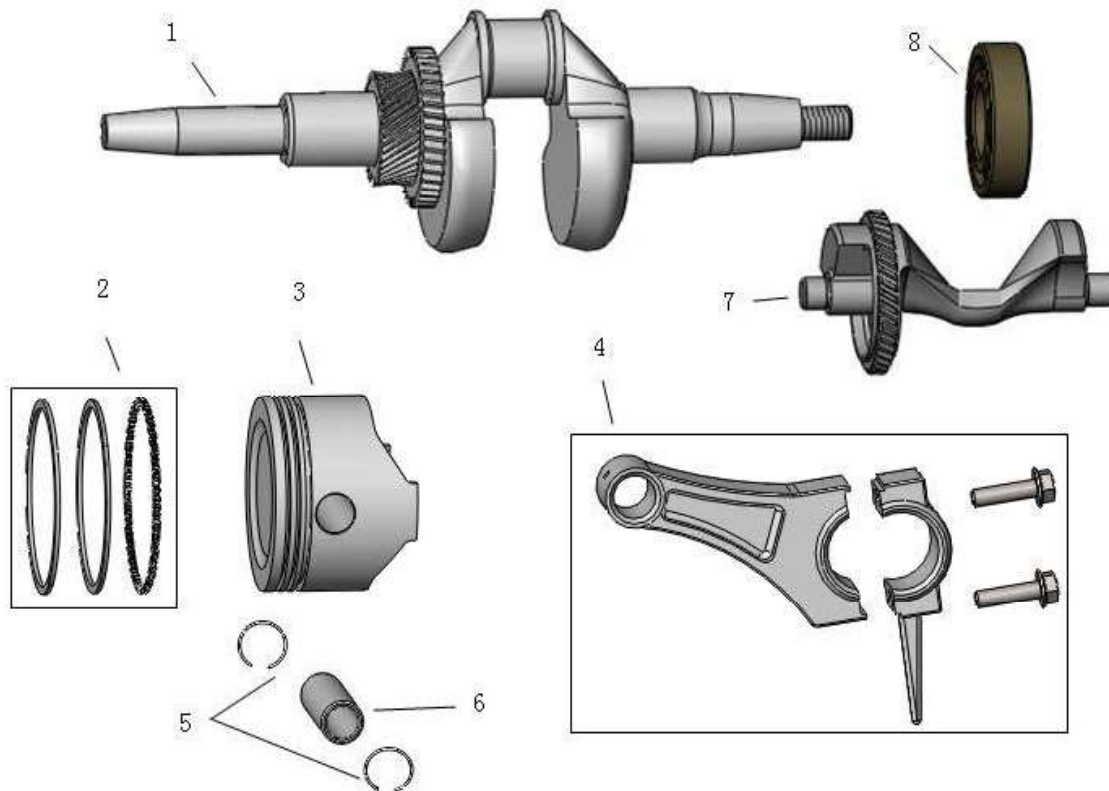

GE-4000N, GE-6500N Parts List for Breakdown – Crankshaft, Piston & Connecting Rod Assy

Index No.	Part No.	Description	Size	Qty.
1.....	GE40N-03-01	Crankshaft.....		1
	 GE65N-03-01	Crankshaft.....		1
2.....	GE40N-03-02	Piston ring set		1
	 GE65N-03-02	Piston ring set		1
3.....	GE40N-03-03	Piston		1
	 GE65N-03-03	Piston		1
4.....	GE40N-03-04	Connecting rod		1
	 GE65N-03-04	Connecting rod		1
5.....	GE40N-03-05	Piston pin clip.....		2
	 GE65N-03-05	Piston pin clip.....		2
6.....	GE40N-03-06	Piston pin		1
	 GE65N-03-06	Piston pin		1
7.....	(n/a for GE-4000N)	Balance shaft		1
	 GE65N-03-07	Balance shaft		1
8.....	GE40N-03-08	Ball bearing		1
	 GE65N-03-08	Ball bearing		1


GE-4000N, GE-6500N Assembly Breakdown - Cylinder Head & Cylinder Cover Assy

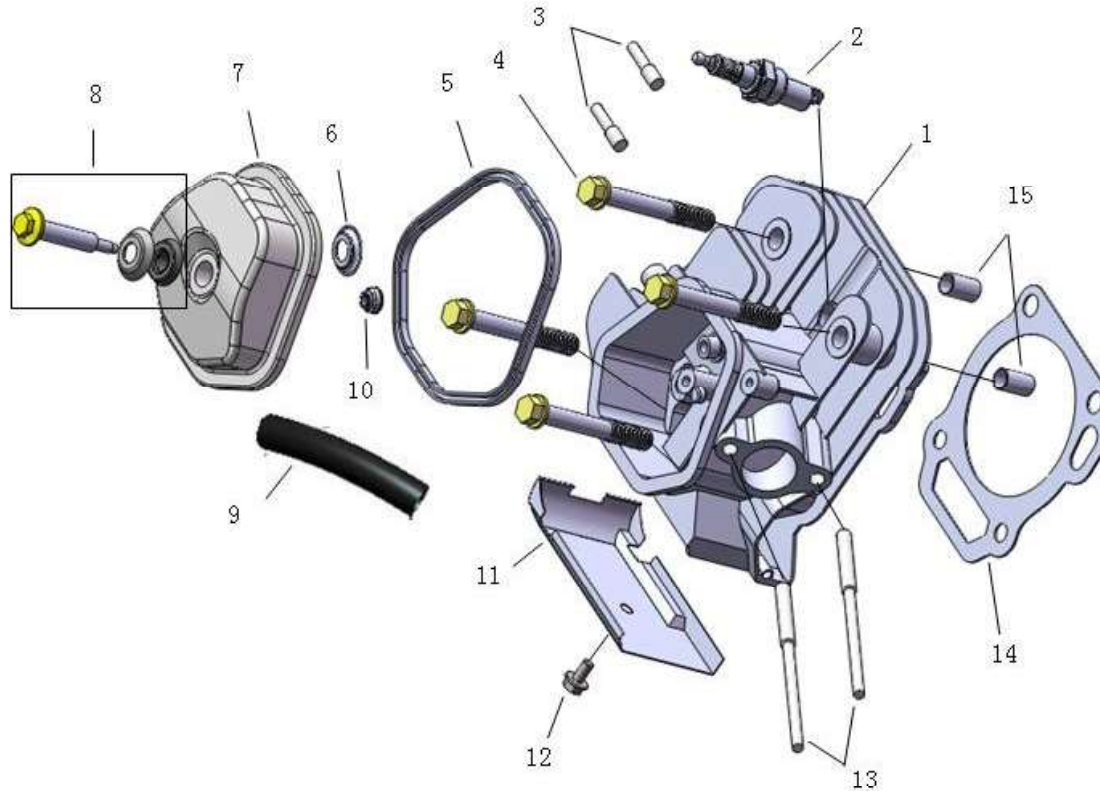

GE-4000N, GE-6500N Parts List for Breakdown - Cylinder Head & Cylinder Cover Assy

Index No.	Part No.	Description	Size	Qty.
1.....	GE40N-04-01	Cylinder head.....		1
.....	GE65N-04-01	Cylinder head.....		1
2.....	GE40N-04-02	Spark plug		2
3.....	GE40N-04-03	Stud..	AM8*48	2
4.....	GE40N-04-04	Flange bolt		4
5.....	GE40N-04-05	Cylinder head cover gasket.....		1
6.....	GE40N-04-06	Exhaust valve spring seat.....		1
7.....	GE40N-04-07	Cylinder head cover		1
8.....	GE40N-04-08	Cylinder head cover bolt assy		1
9.....	GE40N-04-09	Breathe tube.....	φ9.5 xφ15	1
10.....	(n/a for GE-4000N).....	Intake valve oil seal.....		1
.....	GE65N-04-10	Intake valve oil seal.....		1
11.....	GE40N-04-11	Lead wind cover.....		1
.....	GE65N-04-11	Lead wind cover.....		1
12.....	GE40N-04-12	Flange bolt	M6×12.....	1
13.....	GE40N-04-13	Stud..		2
.....	GE65N-04-13	Stud..		2
14.....	GE40N-04-14	Cylinder head gasket		1
.....	GE65N-04-14	Cylinder head gasket		1
15.....	GE40N-04-15	Dowel pin.....		2


GE-4000N, GE-6500N Assembly Breakdown - Combination of Camshaft & Valve Rocker

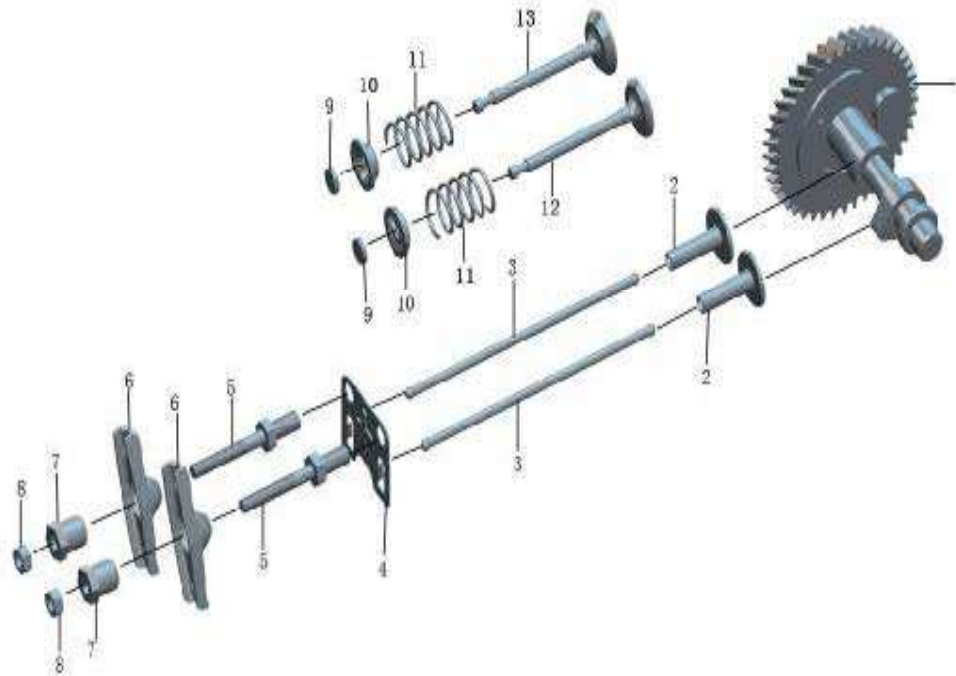

GE-4000N, GE-6500N Parts List for Breakdown - Combination of Camshaft & Valve Rocker

Index No.	Part No.	Description	Size	Qty.
1.....	GE40N-05-01	Camshaft.....		1
.....	GE65N-05-01	Camshaft.....		1
2.....	GE40N-05-02	Valve tappet.....		2
3.....	GE40N-05-03	Push rod.....		2
.....	GE65N-05-03	Push rod.....		2
4.....	GE40N-05-04	Push rod guide plate.....		1
5.....	GE40N-05-05	Pivot bolt.....	M8×53.....	2
6.....	GE40N-05-06	Valve rocker		2
7.....	GE40N-05-07	Rocker pivot pin.....		2
8.....	GE40N-05-08	Pivot adjusting nut.....		2
9.....	GE40N-05-09	Exhaust valve rotator.....		2
10.....	GE40N-05-10	Exhaust valve spring seat.....		2
11.....	GE40N-05-11	Valve spring		2
12.....	GE40N-05-12	Intake valve.....		1
.....	GE65N-05-12	Intake valve.....		1
13.....	GE40N-05-13	Exhaust valve		1
.....	GE65N-05-13	Exhaust valve		1


GE-4000N, GE-6500N Assembly Breakdown - Recoil starter assy

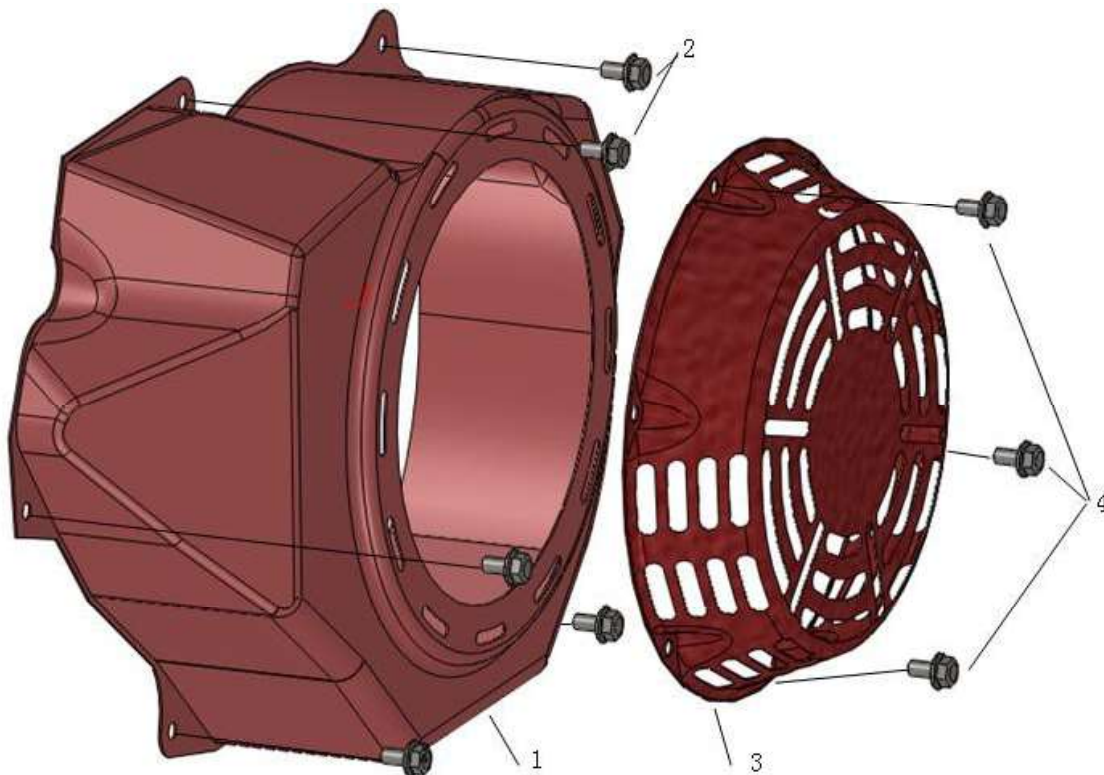

GE-4000N, GE-6500N Parts List for Breakdown - Recoil starter assy

Index No.	Part No.	Description	Size	Qty.
1	GE40N-06-01	Fan cover		1
.....	GE65N-06-01	Fan cover		1
2	GE40N-06-02	Flange bolt	M6×12.....	5
3	GE40N-06-03	Recoil starter assy.....		1
.....	GE65N-06-03	Recoil starter assy.....		1
4	GE40N-06-04	Flange bolt	M6×8.....	3

GE-4000N, GE-6500N Assembly Breakdown - Carburetor Assy

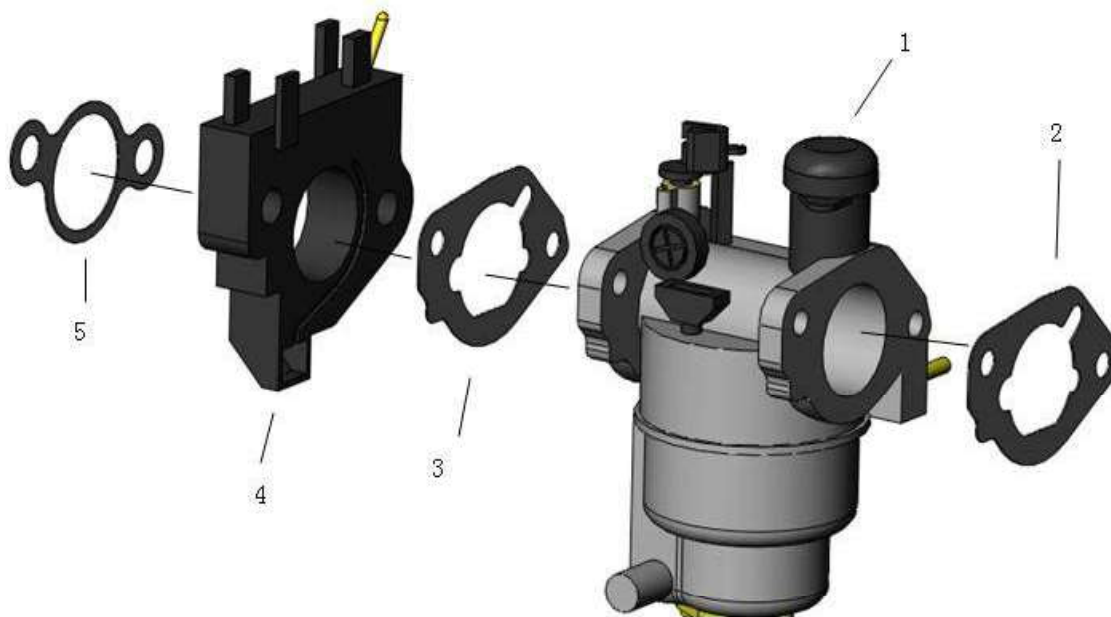

GE-4000N, GE-6500N Parts List for Breakdown - Carburetor Assy

Index No.	Part No.	Description	Size	Qty.
1.....	GE40N-07-01	Carburetor		1
	 GE65N-07-01	Carburetor		1
2.....	GE40N-07-02	Air cleaner gasket		1
3.....	GE40N-07-03	Carburetor gasket		1
	 GE65N-07-03	Carburetor gasket		1
4.....	GE40N-07-04	Connecting block		1
	 GE65N-07-04	Connecting block		1
5.....	GE40N-07-05	Inlet gasket		1
	 GE65N-07-05	Inlet gasket		1


GE-4000N, GE-6500N Assembly Breakdown - Air Cleaner Assy



GE-4000N, GE-6500N Parts List for Breakdown - Air Cleaner Assy

Index No.	Part No.	Description	Size	Qty.
1	GE40N-08-01	Air cleaner assy		1
	GE65N-08-01	Air cleaner assy		1
2	GE40N-08-02	Flange nut	M6	2

GE-4000N, GE-6500N Assembly Breakdown - Regulating Control System

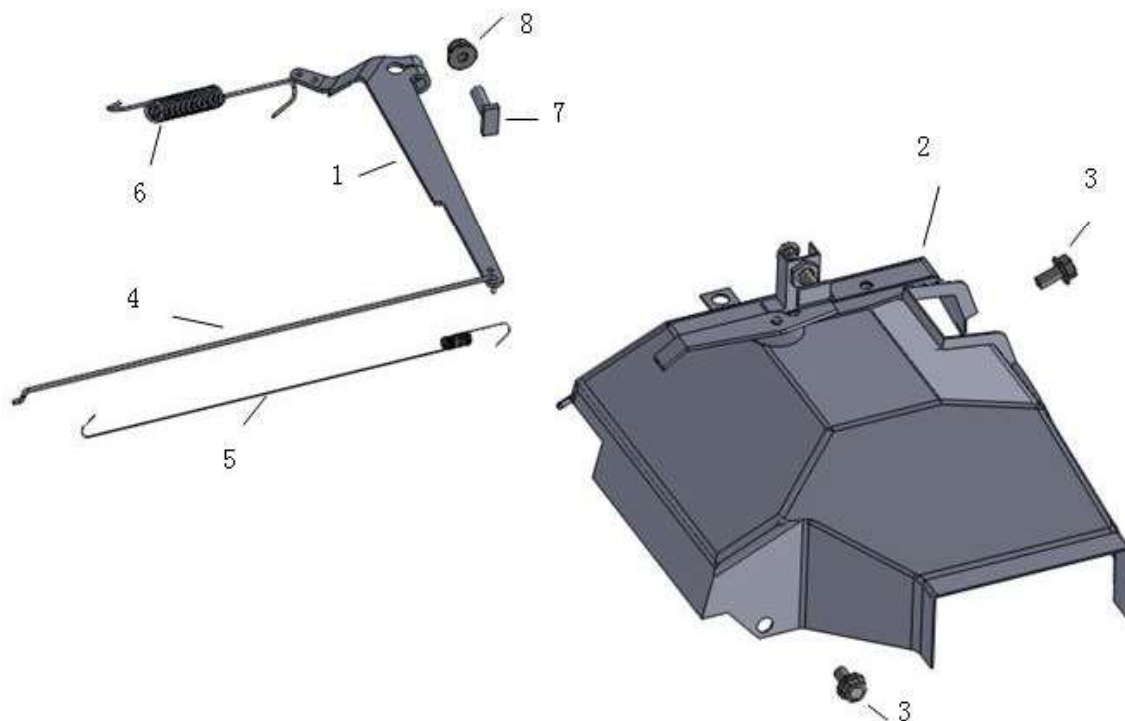

GE-4000N, GE-6500N Parts List for Breakdown - Regulating Control System

Index No.	Part No.	Description	Size	Qty.
1	GE40N-09-01	Regulating arm		1
	GE65N-09-01	Regulating arm		1
2	GE40N-09-02	Speed control assy		1
	GE65N-09-02	Speed control assy		1
3	GE40N-09-03	Flange bolt	M6×12	2
4	GE40N-09-04	Governor rod		1
	GE65N-09-04	Governor rod		1
5	GE40N-09-05	Throttle return spring		1
	GE65N-09-05	Throttle return spring		1
6	GE40N-09-06	Governor spring		1
	GE65N-09-06	Governor spring		1
7	GE40N-09-07	Governor arm bolt		1
	GE65N-09-07	Governor arm bolt		1
8	GE40N-09-08	Flange nut	M6	1


GE-4000N, GE-6500N Assembly Breakdown - Muffler Assy



GE-4000N, GE-6500N Parts List for Breakdown - Muffler Assy

Index No.	Part No.	Description	Size	Qty.
1	GE40N-10-01	Muffler assy		1
.....	GE65N-10-01	Muffler assy		1
2	GE40N-10-02	Muffler gasket.....		1
3	GE40N-10-03	Exhaust valve tube.....		1
4	GE40N-10-04	Exhaust valve gasket.....		1
.....	GE65N-10-04	Exhaust valve gasket.....		1
5	GE40N-10-05	Flange nut M6.....		3
6	GE40N-10-06	Flange nut M8.....		2


GE-4000N, GE-6500N Assembly Breakdown - Fuel Tank Assy

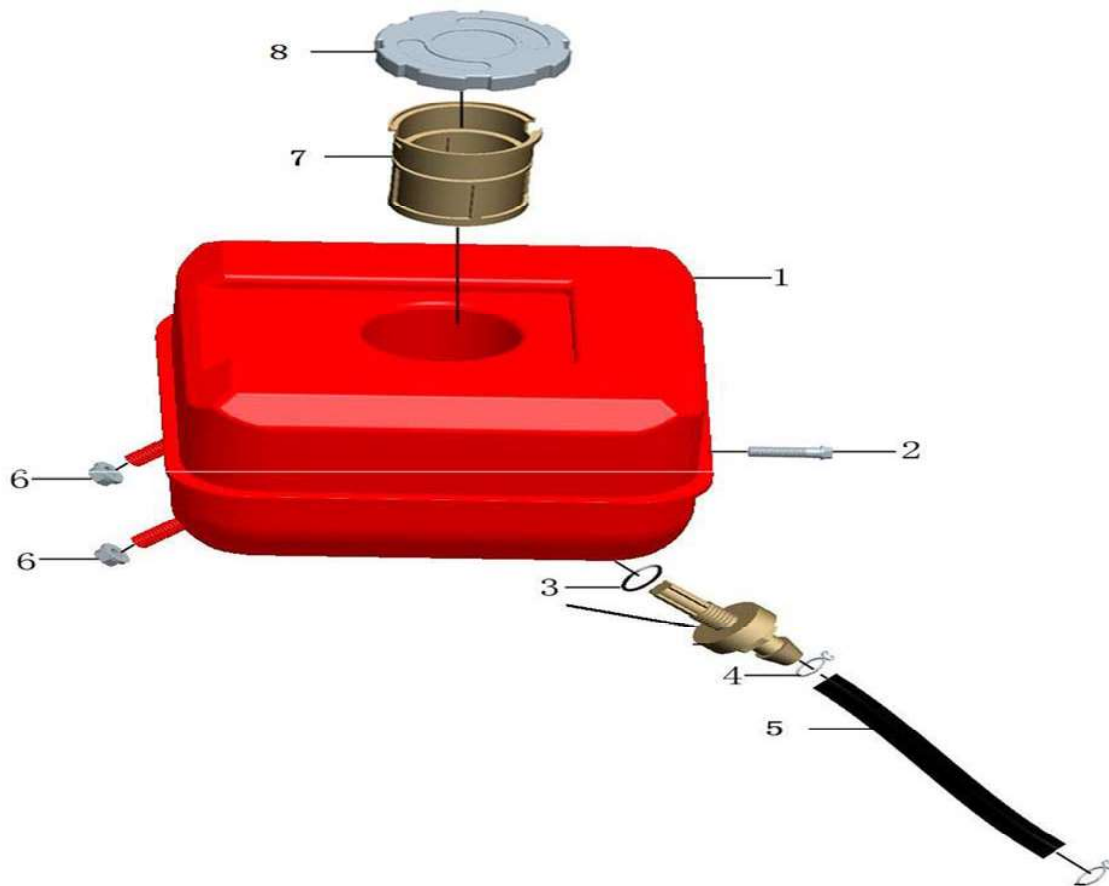

GE-4000N, GE-6500N Parts List for Breakdown - Fuel Tank Assy

Index No.	Part No.	Description	Size	Qty.
1.....	GE40N-11-01	Fuel Tank.....		1
2.....	GE40N-11-02	Flange bolt	M8×25.....	2
3.....	GE40N-11-03	Fuel tank joint.....		1
4.....	GE40N-11-04	Tube clip		2
5.....	GE40N-11-05	Fuel tube.....		1
6.....	GE40N-11-06	Flange nut	M6.....	2
7.....	GE40N-11-07	Filter cup		1
8.....	GE40N-11-08	Fuel tank cap.....		1

GE-4000N, GE-6500N Assembly Breakdown - Flywheel Assy

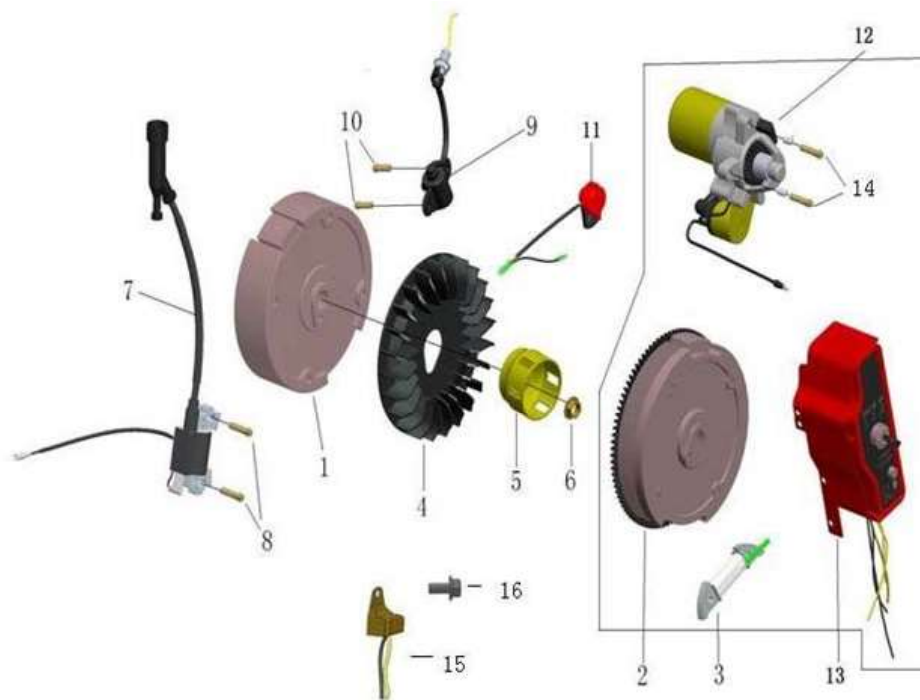

GE-4000N, GE-6500N Parts List for Breakdown - Flywheel Assy

Index No.	Part No.	Description	Size	Qty.
1.....	GE40N-12-01	Flywheel assy		1
.....	GE65N-12-01	Flywheel assy		1
2.....	GE40N-12-02	Flywheel assy (Optional, Electric Starter Only).....		1
.....	GE65N-12-02	Flywheel assy (Electric Starter)		1
3.....	GE65N-12-03	Charging coil (Electric Starter)		1
4.....	GE40N-12-04	Cooling fan		1
.....	GE65N-12-04	Cooling fan		1
5.....	GE40N-12-05	Starter pulley		1
.....	GE65N-12-05	Starter pulley		1
6.....	GE40N-12-06	Flywheel nut		1
7.....	GE40N-12-07	Ignition coil		1
8.....	GE40N-12-08	Flange bolt	M6×25.....	2
9.....	GE40N-12-09	Oil sensor		1
10.....	GE40N-12-10	Flange bolt	M6×14.....	2
11.....	GE40N-12-11	Stop switch		1
12.....	GE40N-12-12	Starting motor (Optional, Electric Starter Only)		1
.....	GE65N-12-12	Starting motor (Electric Starter)		1
13.....	GE65N-12-13	Key box (Electric Starter)		1
14.....	GE40N-12-14	Flange bolt (Optional, Electric Starter Only).....		2
.....	GE65N-12-14	Flange bolt (Electric Starter)		2
15.....	GE40N-12-15	Oil sensor controller		1
16.....	GE40N-12-16	Flange bolt	M6×12.....	1



Warranty / Garantie

JPW (Tool) AG guarantees that the supplied product(s) is/are free from material defects and manufacturing faults. This warranty does not cover any defects which are caused, either directly or indirectly, by incorrect use, carelessness, damage due to accidents, repairs or inadequate maintenance or cleaning as well as normal wear and tear.

Further details on warranty (e.g. warranty period) can be found in the General Terms and Conditions (GTC) that are an integral part of the contract.

These GTC may be viewed on the website of your dealer or sent to you upon request.

JPW (Tool) AG reserves the right to make changes to the product and accessories at any time.

JPW (Tool) AG garantiert, dass das/die von ihr gelieferte/n Produkt/e frei von Material- und Herstellungsfehlern ist. Diese Garantie deckt keinerlei Mängel, Schäden und Fehler ab, die - direkt oder indirekt - durch falsche oder nicht sachgemäße Verwendung, Fahrlässigkeit, Unfallschäden, Reparaturen oder unzureichende Wartungs- oder Reinigungsarbeiten sowie durch natürliche Abnutzung durch den Gebrauch verursacht werden.

Weitere Einzelheiten zur Garantie können den allgemeinen Geschäftsbedingungen (AGB) entnommen werden.

Diese können Ihnen auf Wunsch per Post oder Mail zugesendet werden.

JPW (Tool) AG behält sich das Recht vor, jederzeit Änderungen am Produkt und am Zubehör vorzunehmen.

JPW (Tool) AG garantit que le/les produit(s)fourni(s) est/sont exempt(s) de défauts matériels et de défauts de fabrication.

Cette garantie ne couvre pas les défauts, dommages et défaillances causés, directement ou indirectement, par l'utilisation incorrecte ou inadéquate, la négligence, les dommages accidentels, la réparation, la maintenance ou le nettoyage incorrects et l'usure normale.

Vous pouvez trouver de plus amples détails sur la garantie dans les conditions générales (CG).

Les CG peuvent être envoyées sur demande par poste ou par e-mail .

JPW (Tool) AG se réserve le droit d'effectuer des changements sur le produit et les accessoires à tout moment.



JPW (Tool) AG
Tämperlistrasse 5, CH-8117 Fällanden
Switzerland
www.promac.ch