




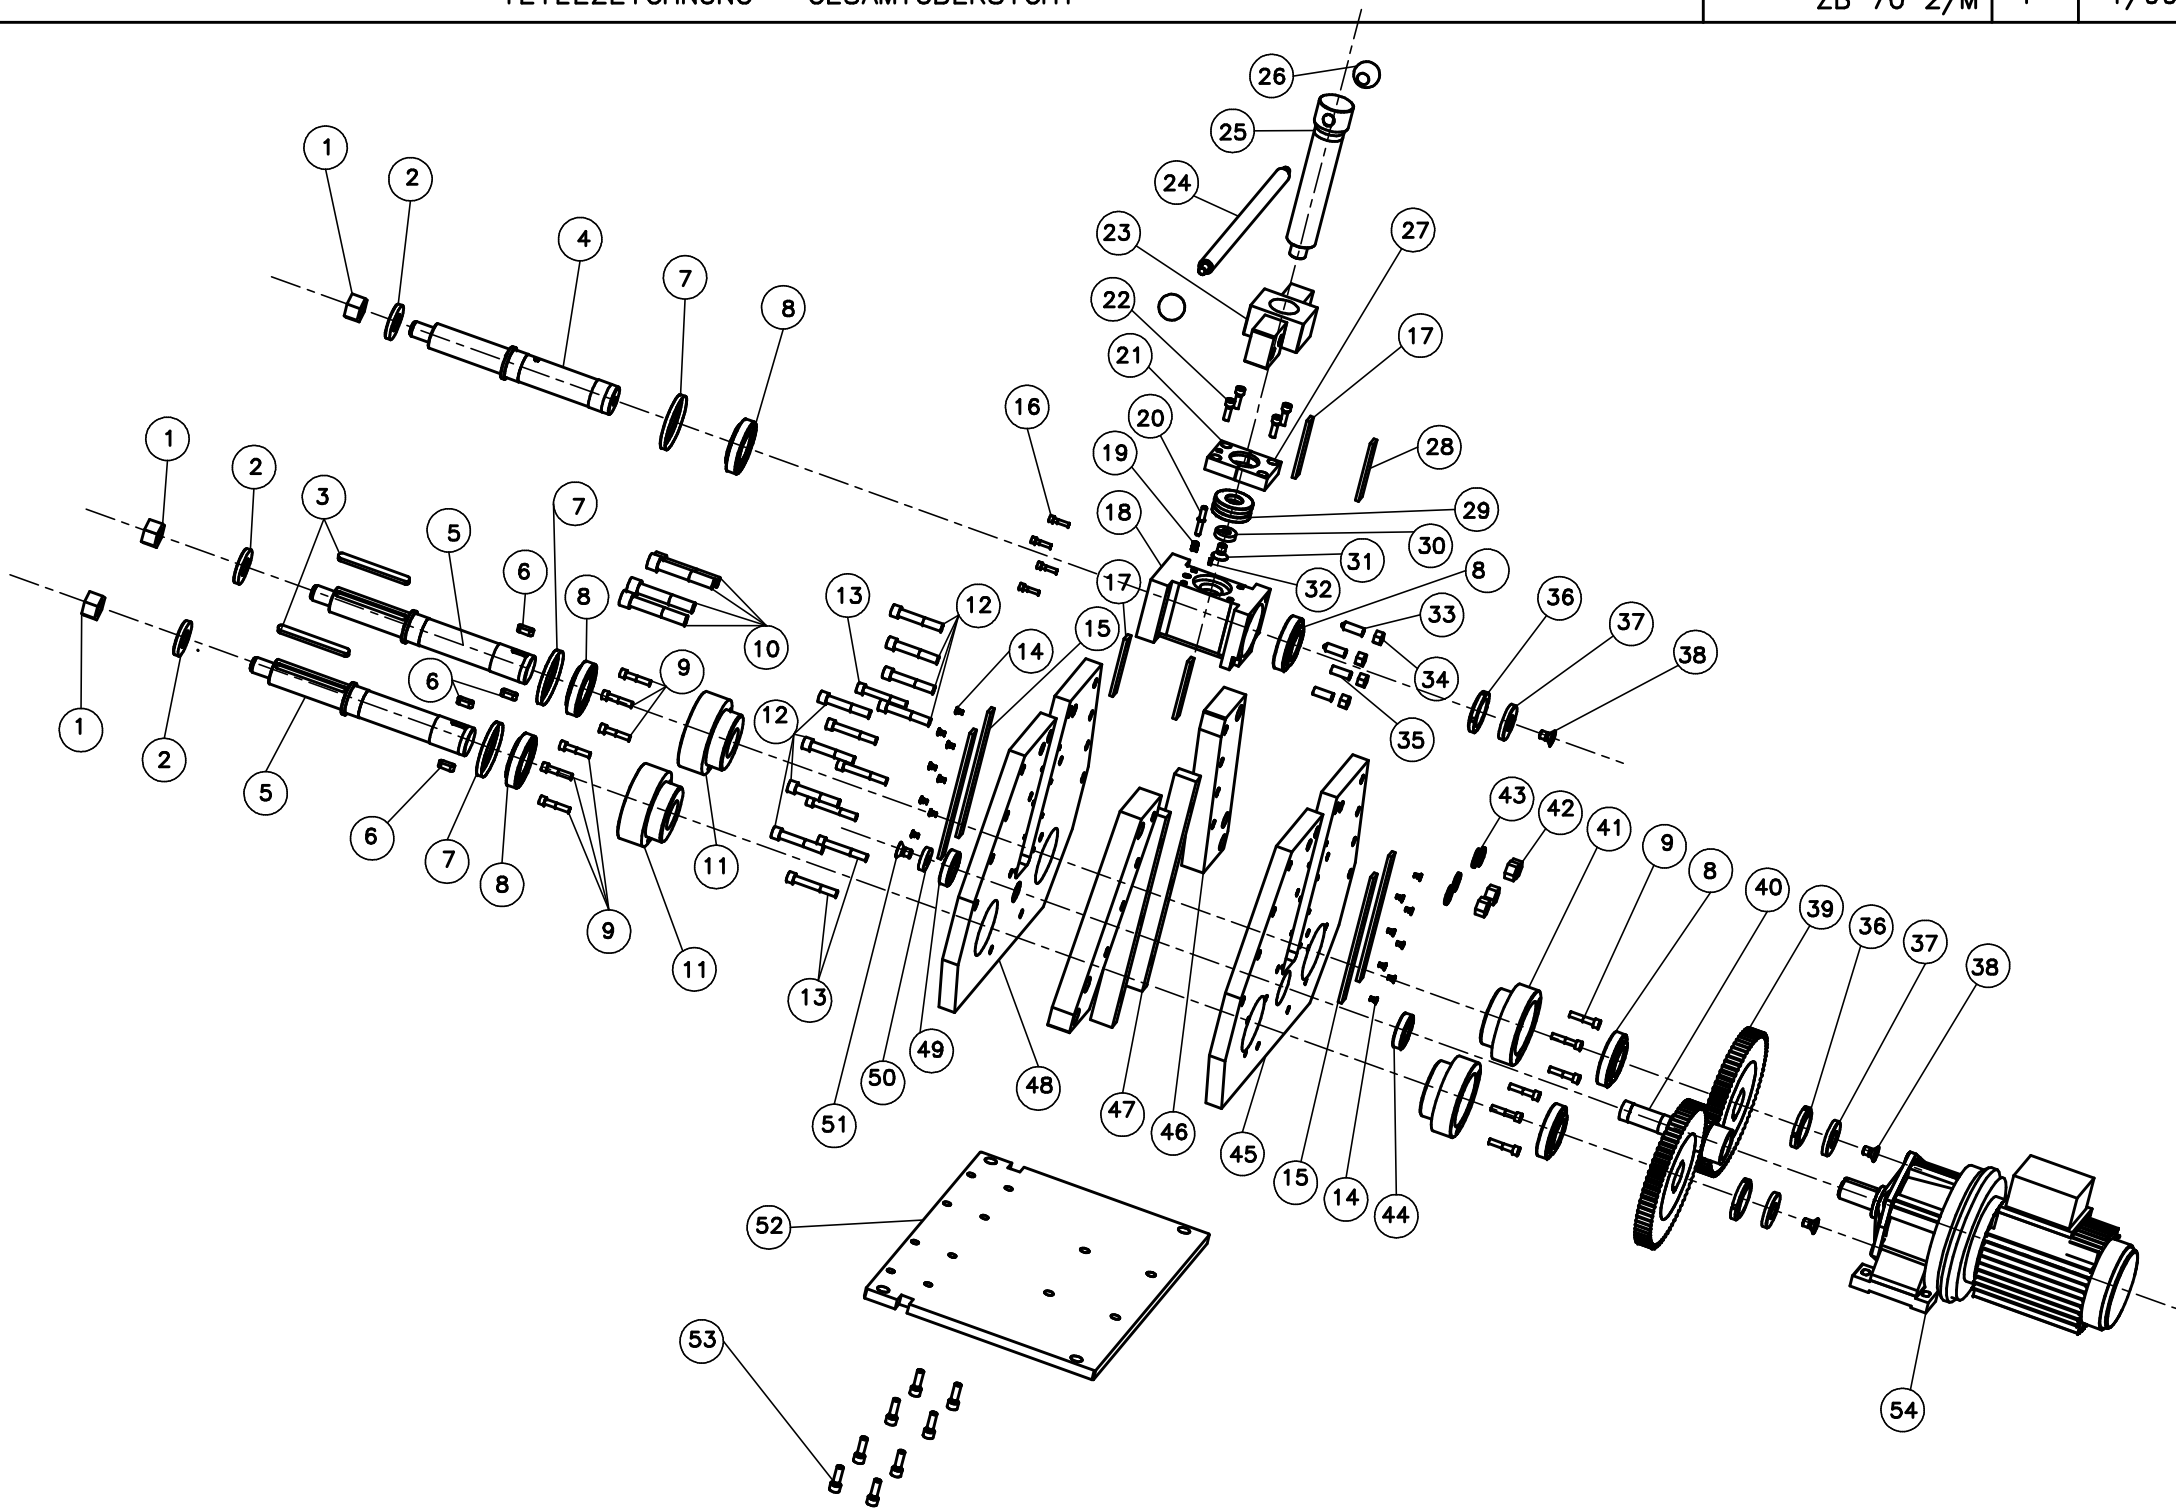

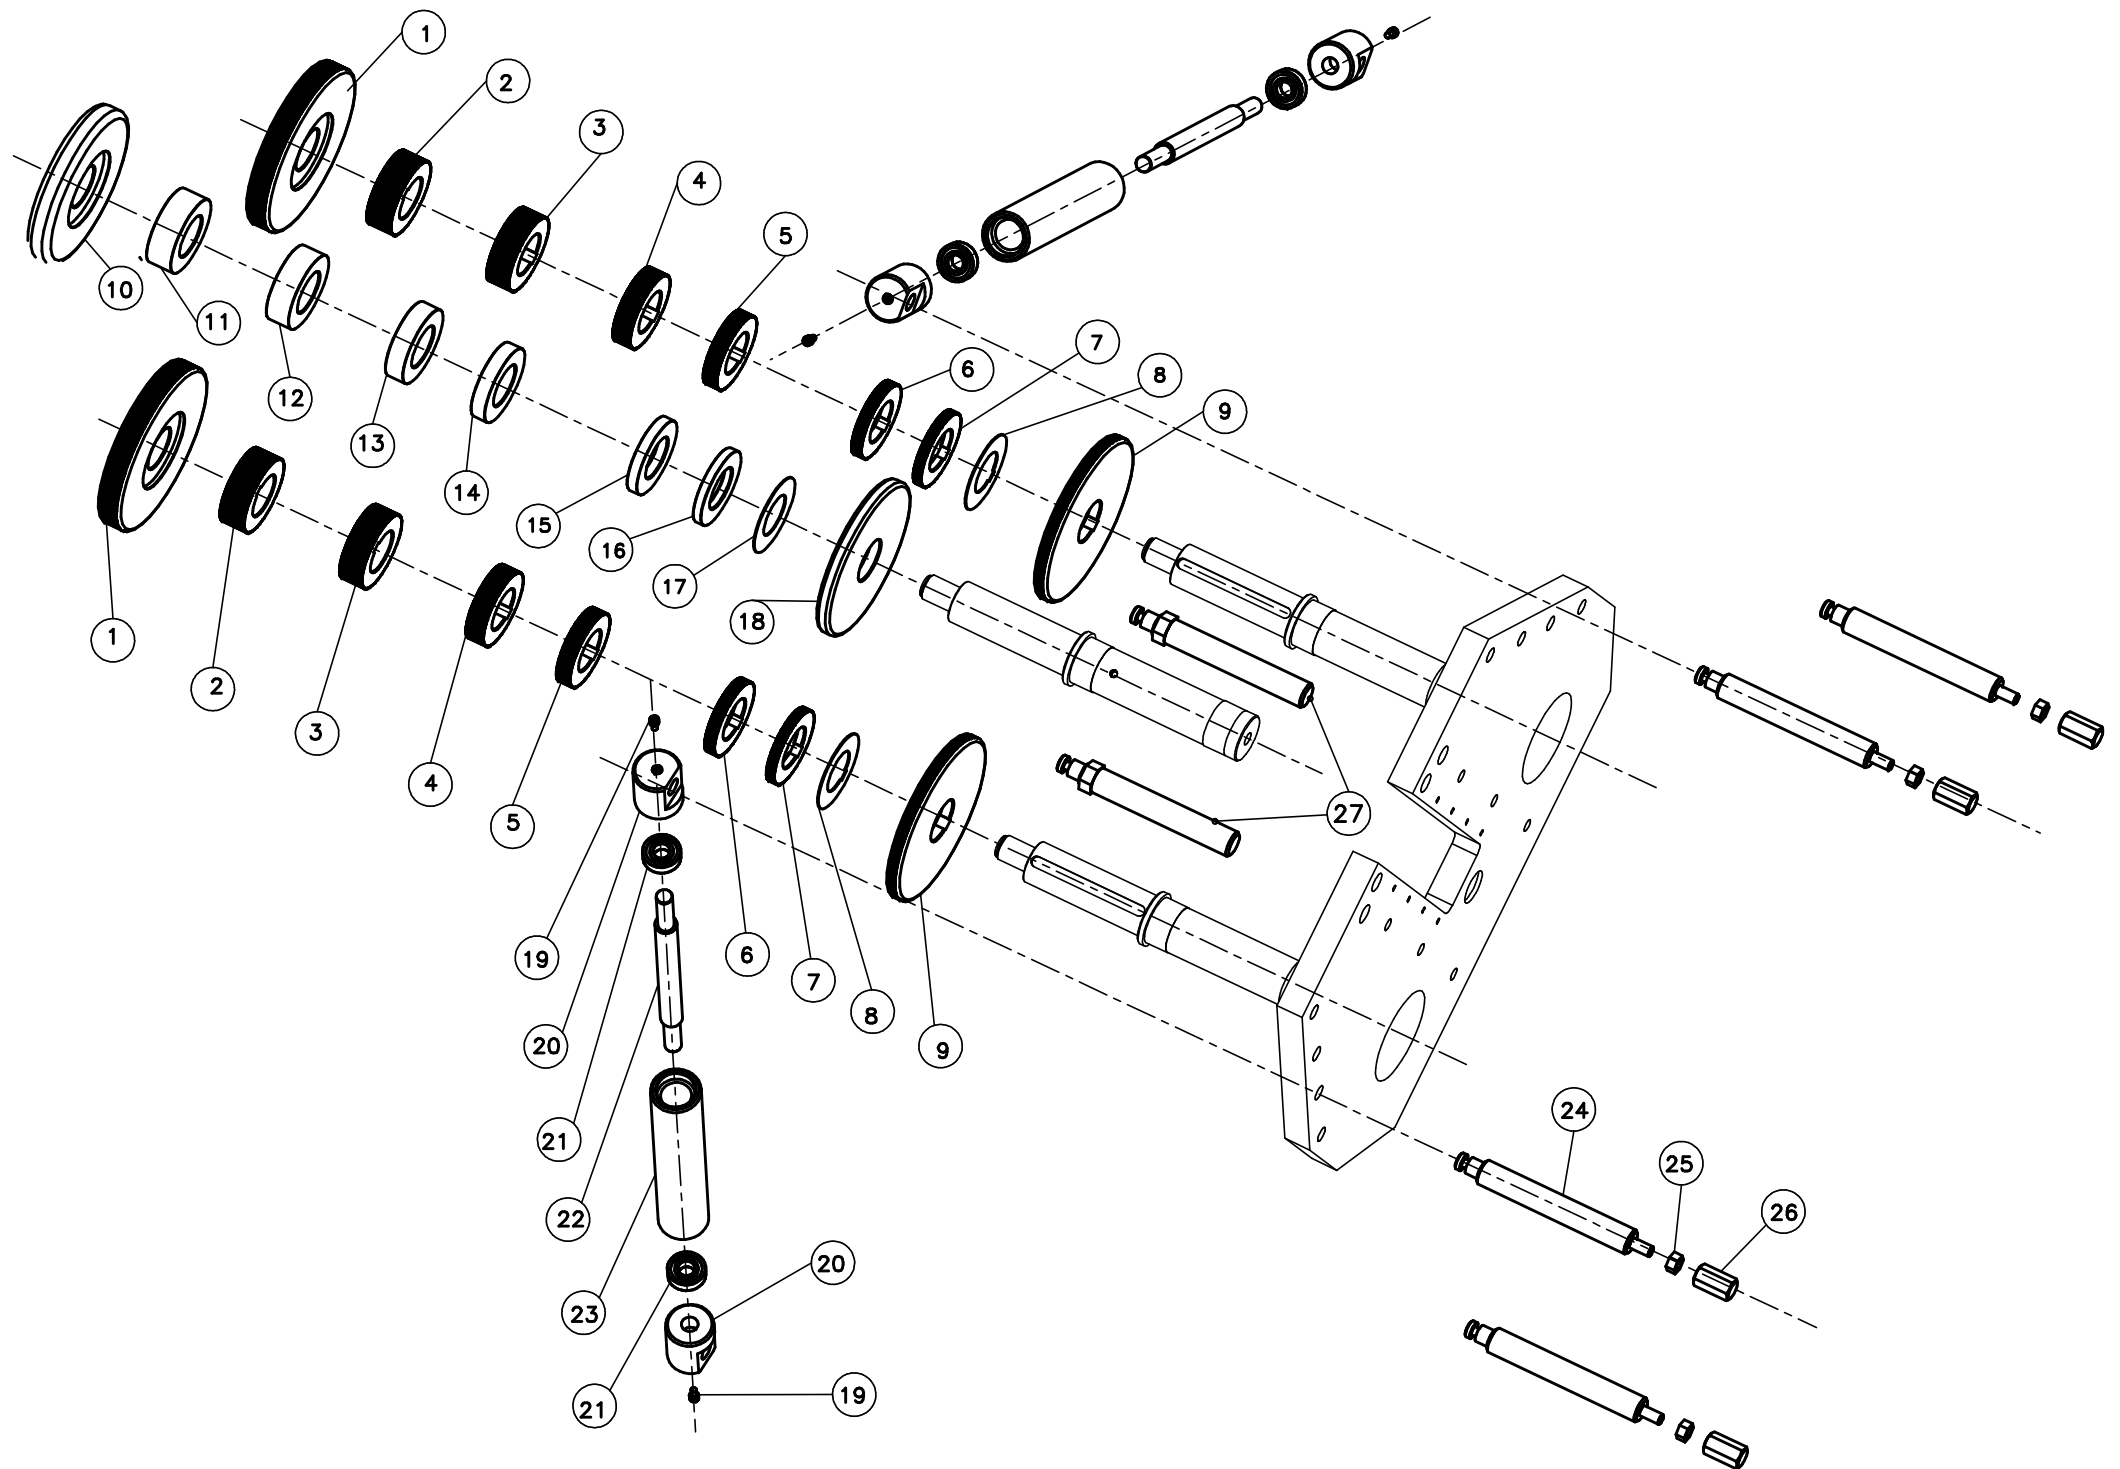

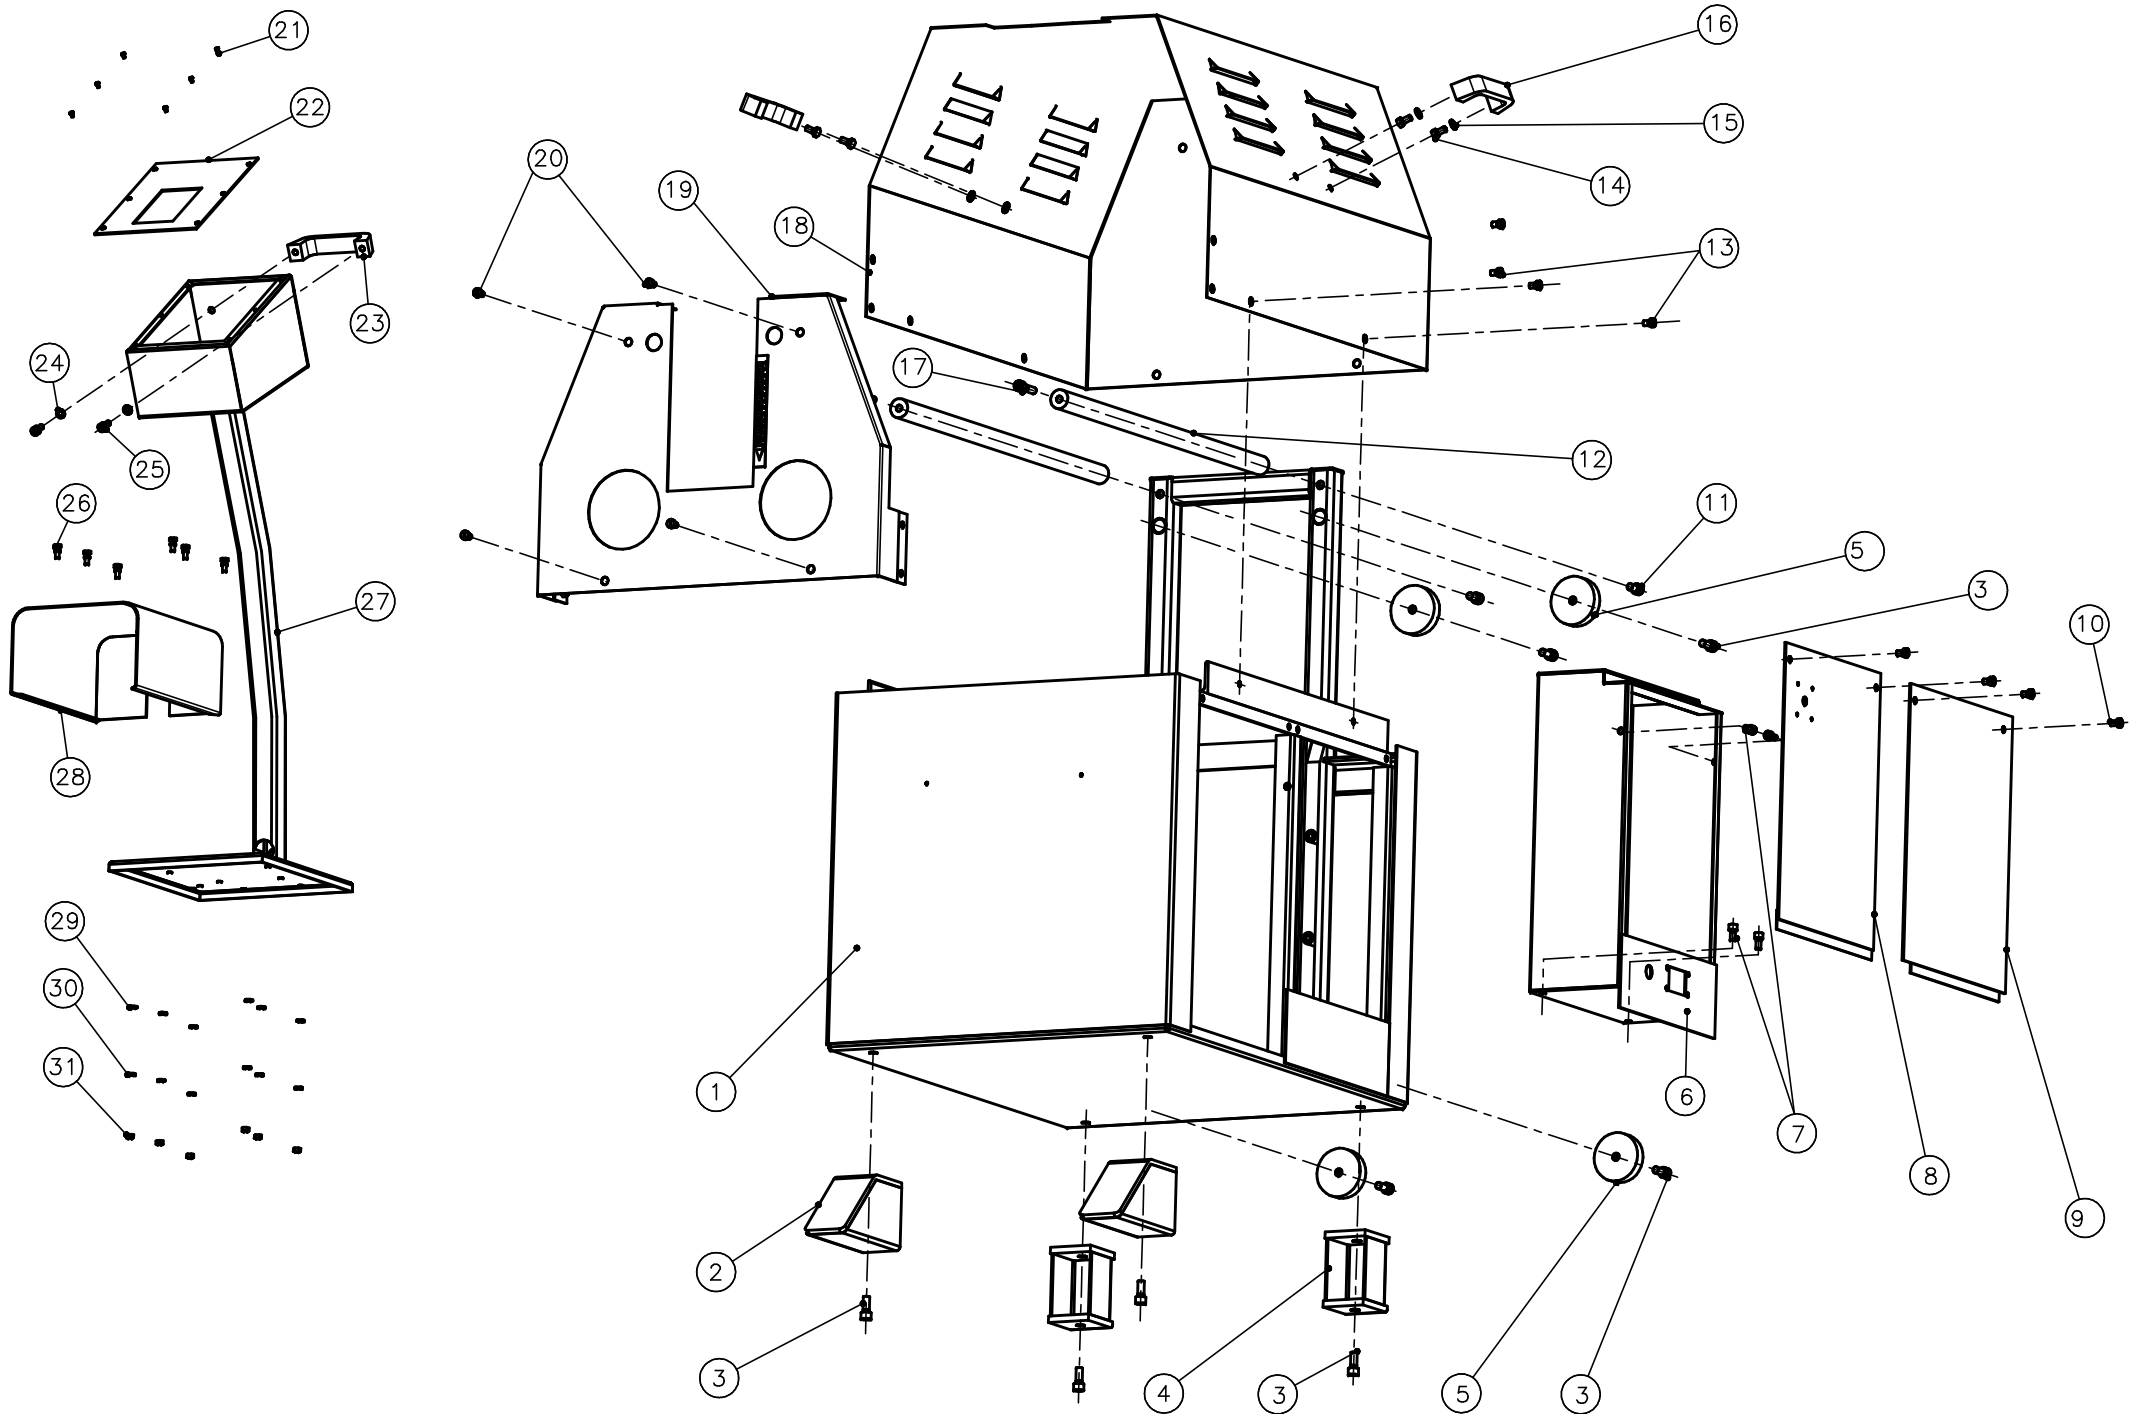

PB 70-2 Parts list

TAV no.	Part no.	Description	Part form
1	1	Clamp nut	M24x1,5
1	2	Span / Clamp disk	E2
1	3	Feather key	E2
1	4	Upper shaft	D1
1	5	Lower shaft	D1
1	6	Feather key	E1
1	7	Bearing cover disk	E1
1	8	Tapered roller bearing	32 209
1	9	Screw	M8x40
1	10	Screw	E2
1	11	Front bearing bushing	D1
1	12	Screw	M12x70
1	13	Screw	M10x70
1	14	Screw	M5x10
1	15	Guide rail	E2
1	16	Screw	M6x25
1	17	Front guide rails	E2
1	18	Spindle guide sled	C2
1	19	Spring	E2
1	20	Locking pin	E2
1	21	Front holding plate	E2
1	22	Screw	M8x25
1	23	Spindle nut	D2
1	24	Rotating rod	E2
1	25	Lead screw	D2
1	26	Bakelit button	M12x40
1	27	Rear holding plate for Spin.	E2
1	28	Rear guide rails	E2
1	29	Axial bearing	51 405A
1	30	Washer	E2
1	31	Screw	M12x20
1	32	Blocking screw	M4x12
1	33	Screw	M12x35
1	34	Nut	M12
1	35	Screw	M12x30

1	36	Slotted nut	KM 9
1	37	Lock disk	E2
1	38	Screw	M12x20
1	39	Gear wheel	D2
1	40	Gear wheel shaft	D2
1	41	Rear bearing bushing	D2
1	42	Nut	M16
1	43	Lock disk	17
1	44	Ball bearing	6006
1	45	Rear carrier plate	B2
1	46	Distance plate	C2
1	47	Distance rail	D2
1	48	Front carrier plate	B2
1	49	Ball bearing	6006
1	50	Lock disk	E2
1	51	Screw	M12x20
1	52	Base plate	C2
1	53	Screw	M10x30
1	54	Motor	
2	1	Lower rollers	E2
2	2	Lower distance rollers	E2
2	3	Lower distance rollers	E2
2	4	Lower distance rollers	E2
2	5	Lower distance rollers	E2
2	6	Lower distance rollers	E2
2	7	Lower distance rollers	E2
2	8	Distance disk (aluminium)	
2	9	Lower rollers	E2
2	10	Upper rollers	E2
2	11	Upper distance rollers	E2
2	12	Upper distance rollers	E2
2	13	Upper distance	E2

		rollers	
2	14	Upper distance rollers	E2
2	15	Upper distance rollers	E2
2	16	Upper distance rollers	E2
2	17	Distance disk (aluminium)	
2	18	Upper rollers	E2
2	19	Screw	M5x8
2	20	Rectifier guide cover	E2
2	21	Tapered roller bearing	6202 RS
2	22	Rectifier shaft	E2
2	23	Rectifier roller	D2
2	24	Lead screw	E2
2	25	Nut	M10
2	26	Adjuster nut	E2
2	27	Front lead screw	E2
3	1	Base	D1
3	2	Back foot	E2
3	3	Screw	M10x25
3	4	Back foot	E2
3	5	Back foot	E2
3	6	Electric box	D1
3	7	Screw	M8x16
3	8	Electric cover	D1
3	9	Cover	D1
3	10	Screw	M8x12
3	11	Screw	M10x20
3	12	Spreader bar	E2
3	13	Screw	M8x12
3	14	Screw	M8x12
3	15	Disk	8,4
3	16	Bow handle	M643/140B-M8
3	17	Screw	M10x40
3	18	Rear cover	D1
3	19	Front cover	D1
3	20	Screw	M8x12
3	21	Screw	M3x6

3	22	Front plate	E1
3	23	Bow handle	M643/140B-M8
3	24	Disk	8,4
3	25	Screw	M8x12
3	26	Screw	M6x15
3	27	Foot controller (welding part)	D1
3	28	Foot control casing	D1
3	29	Disk	6,4
3	30	Disk	6,1
3	31	Nut	M6