





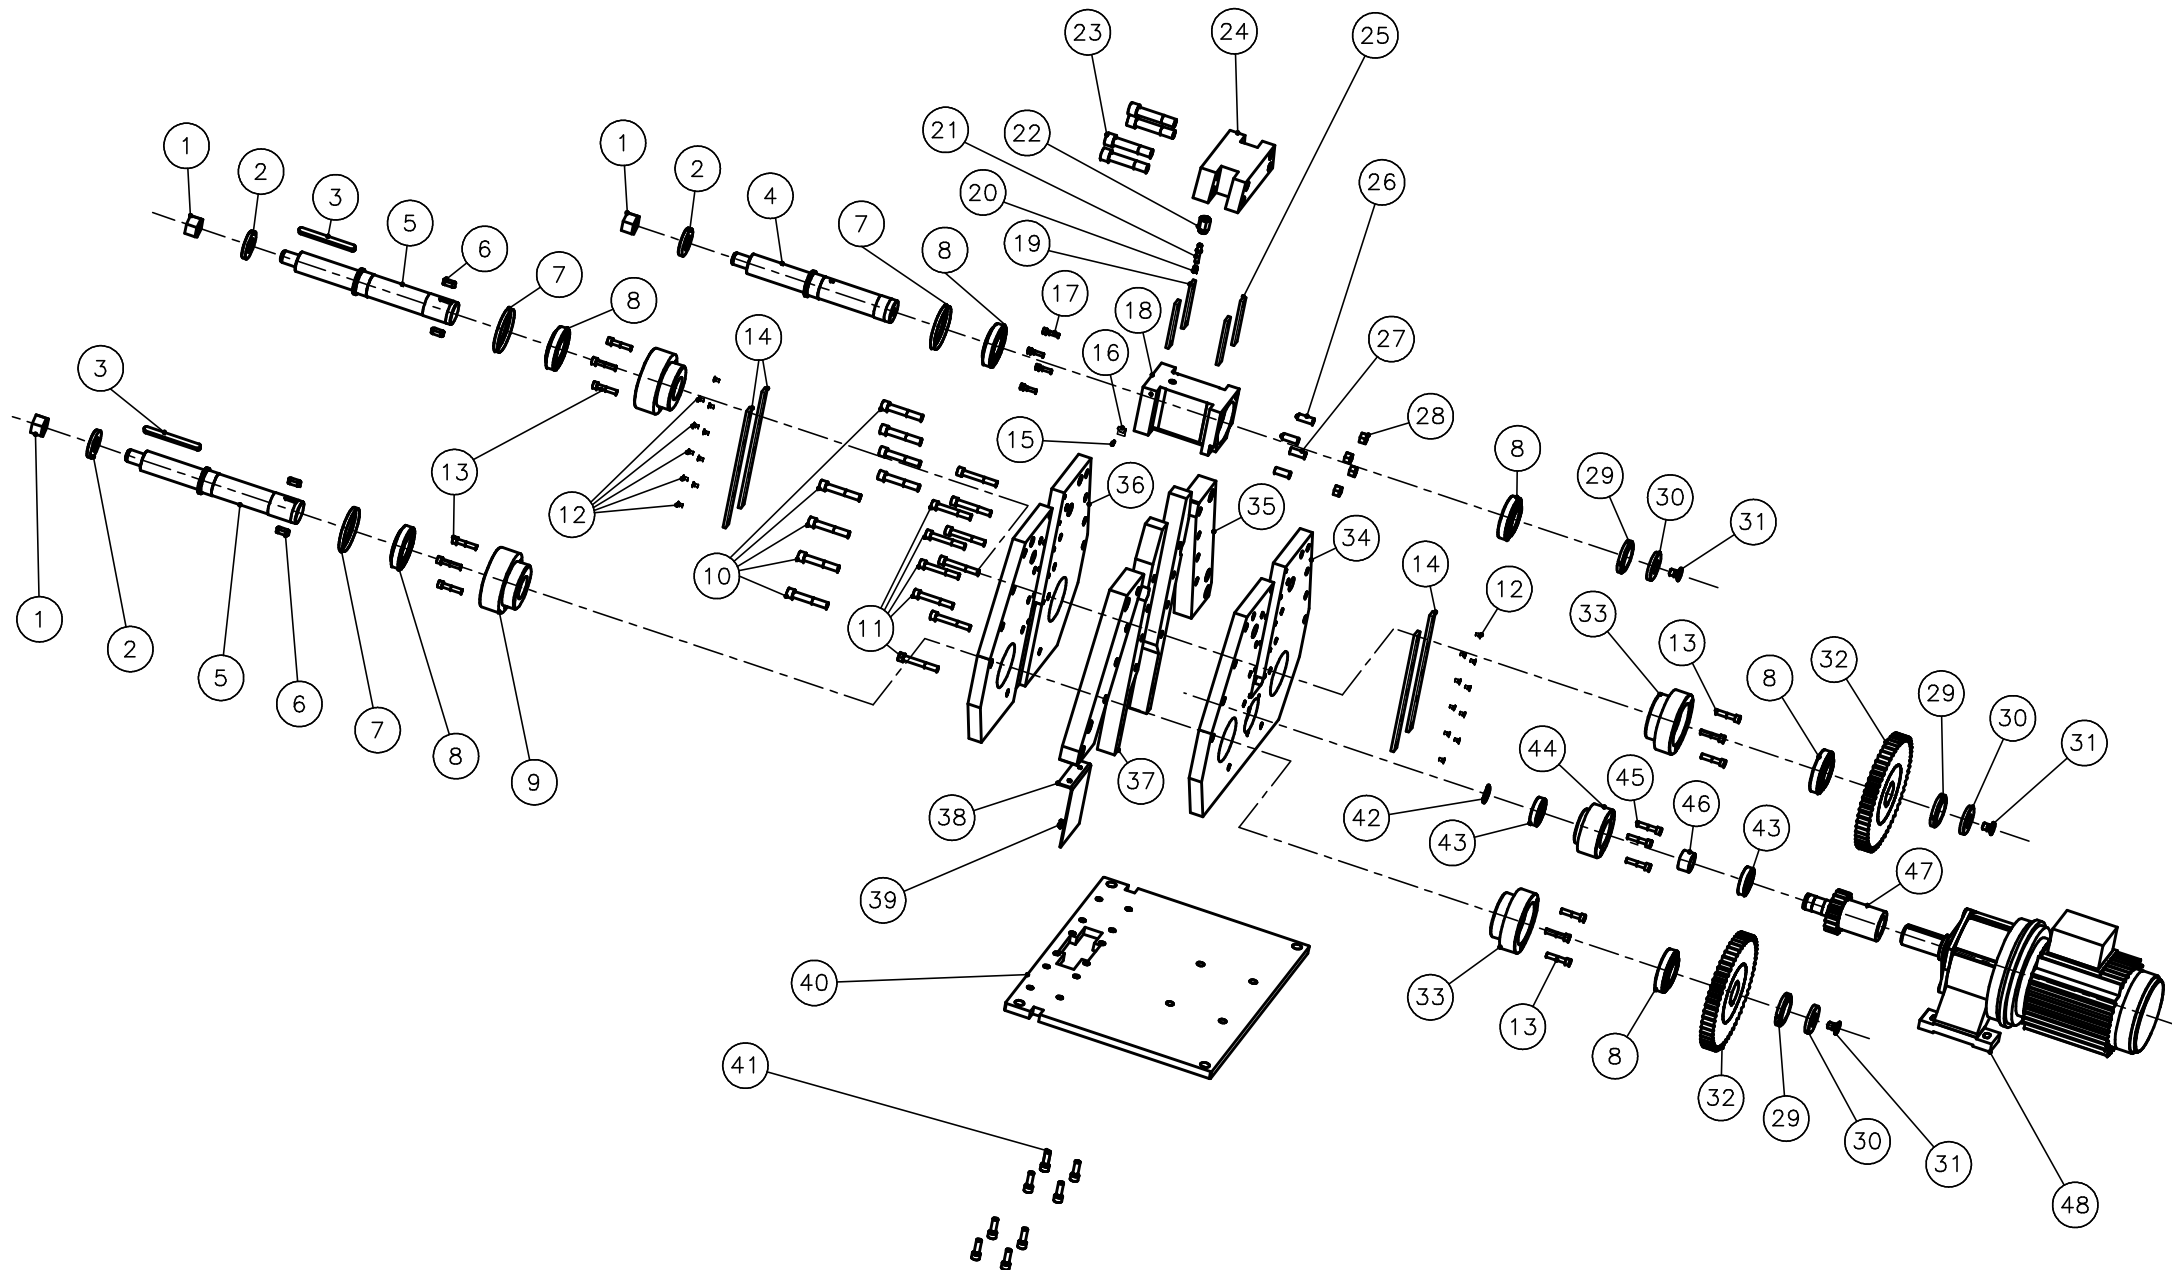

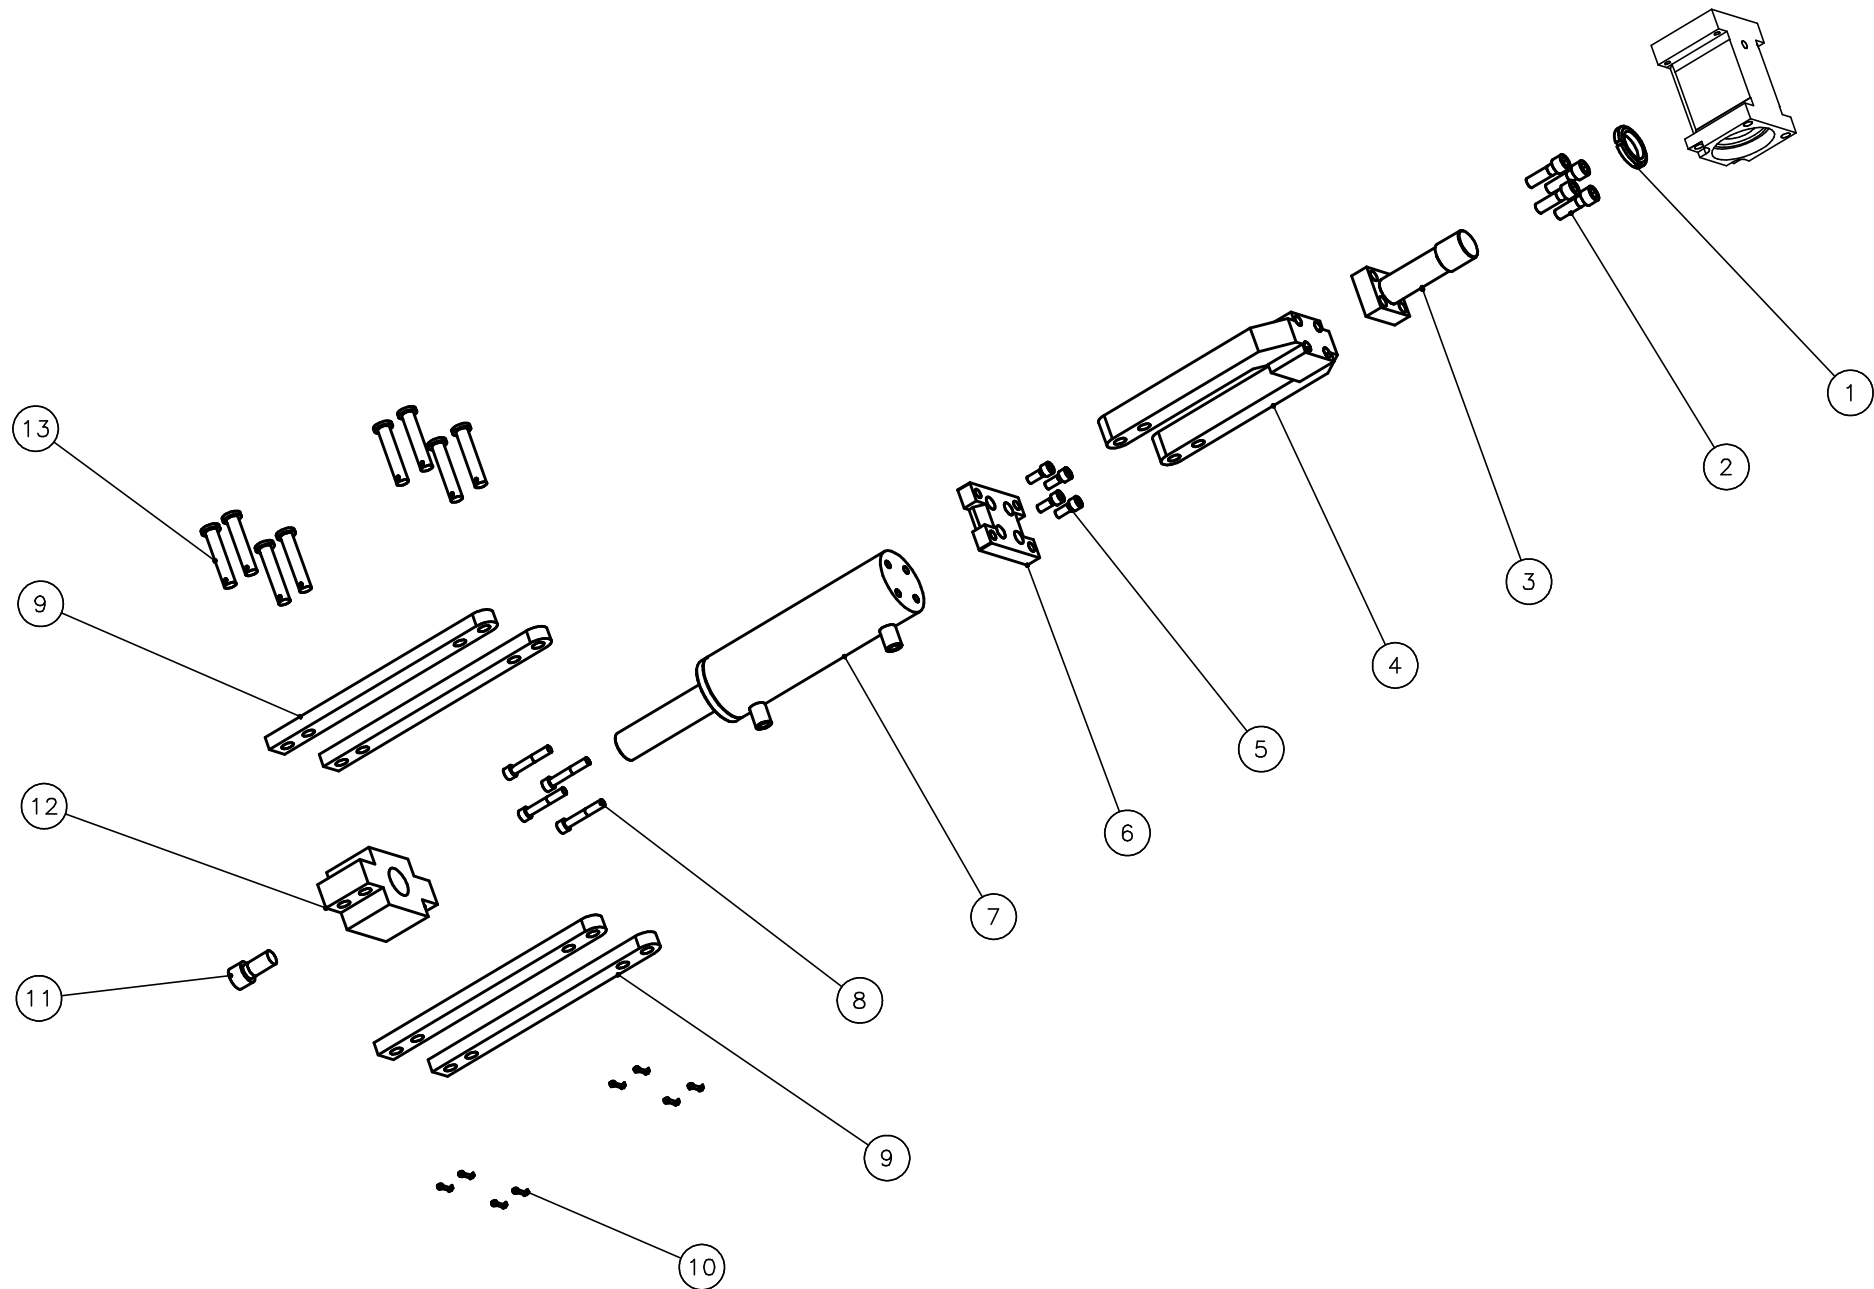

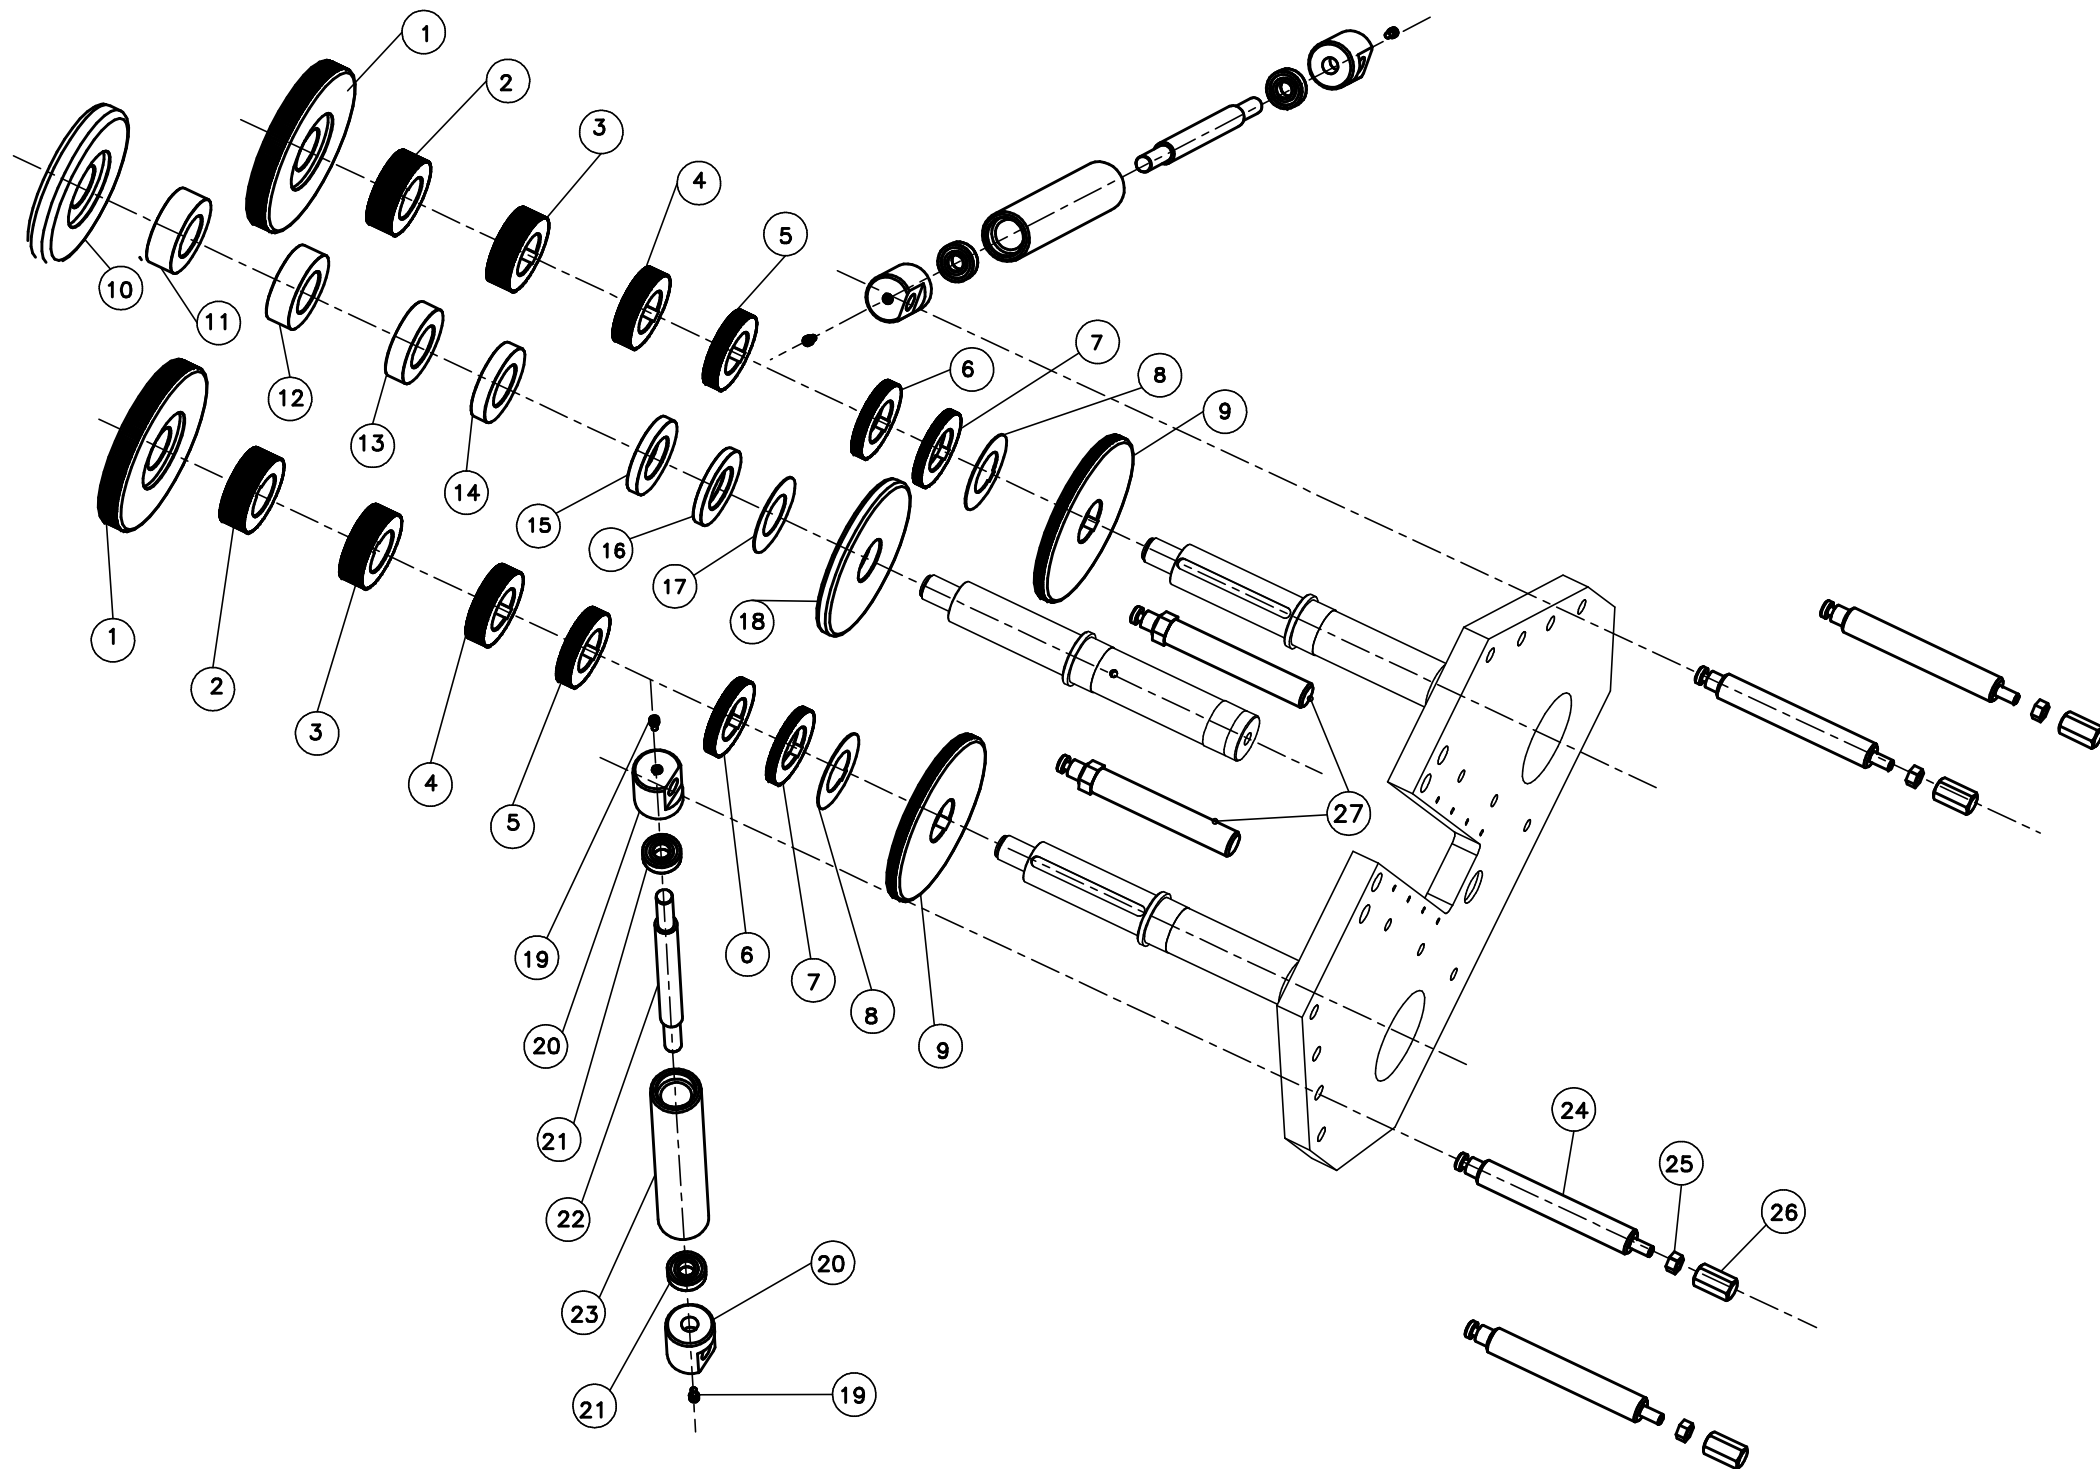

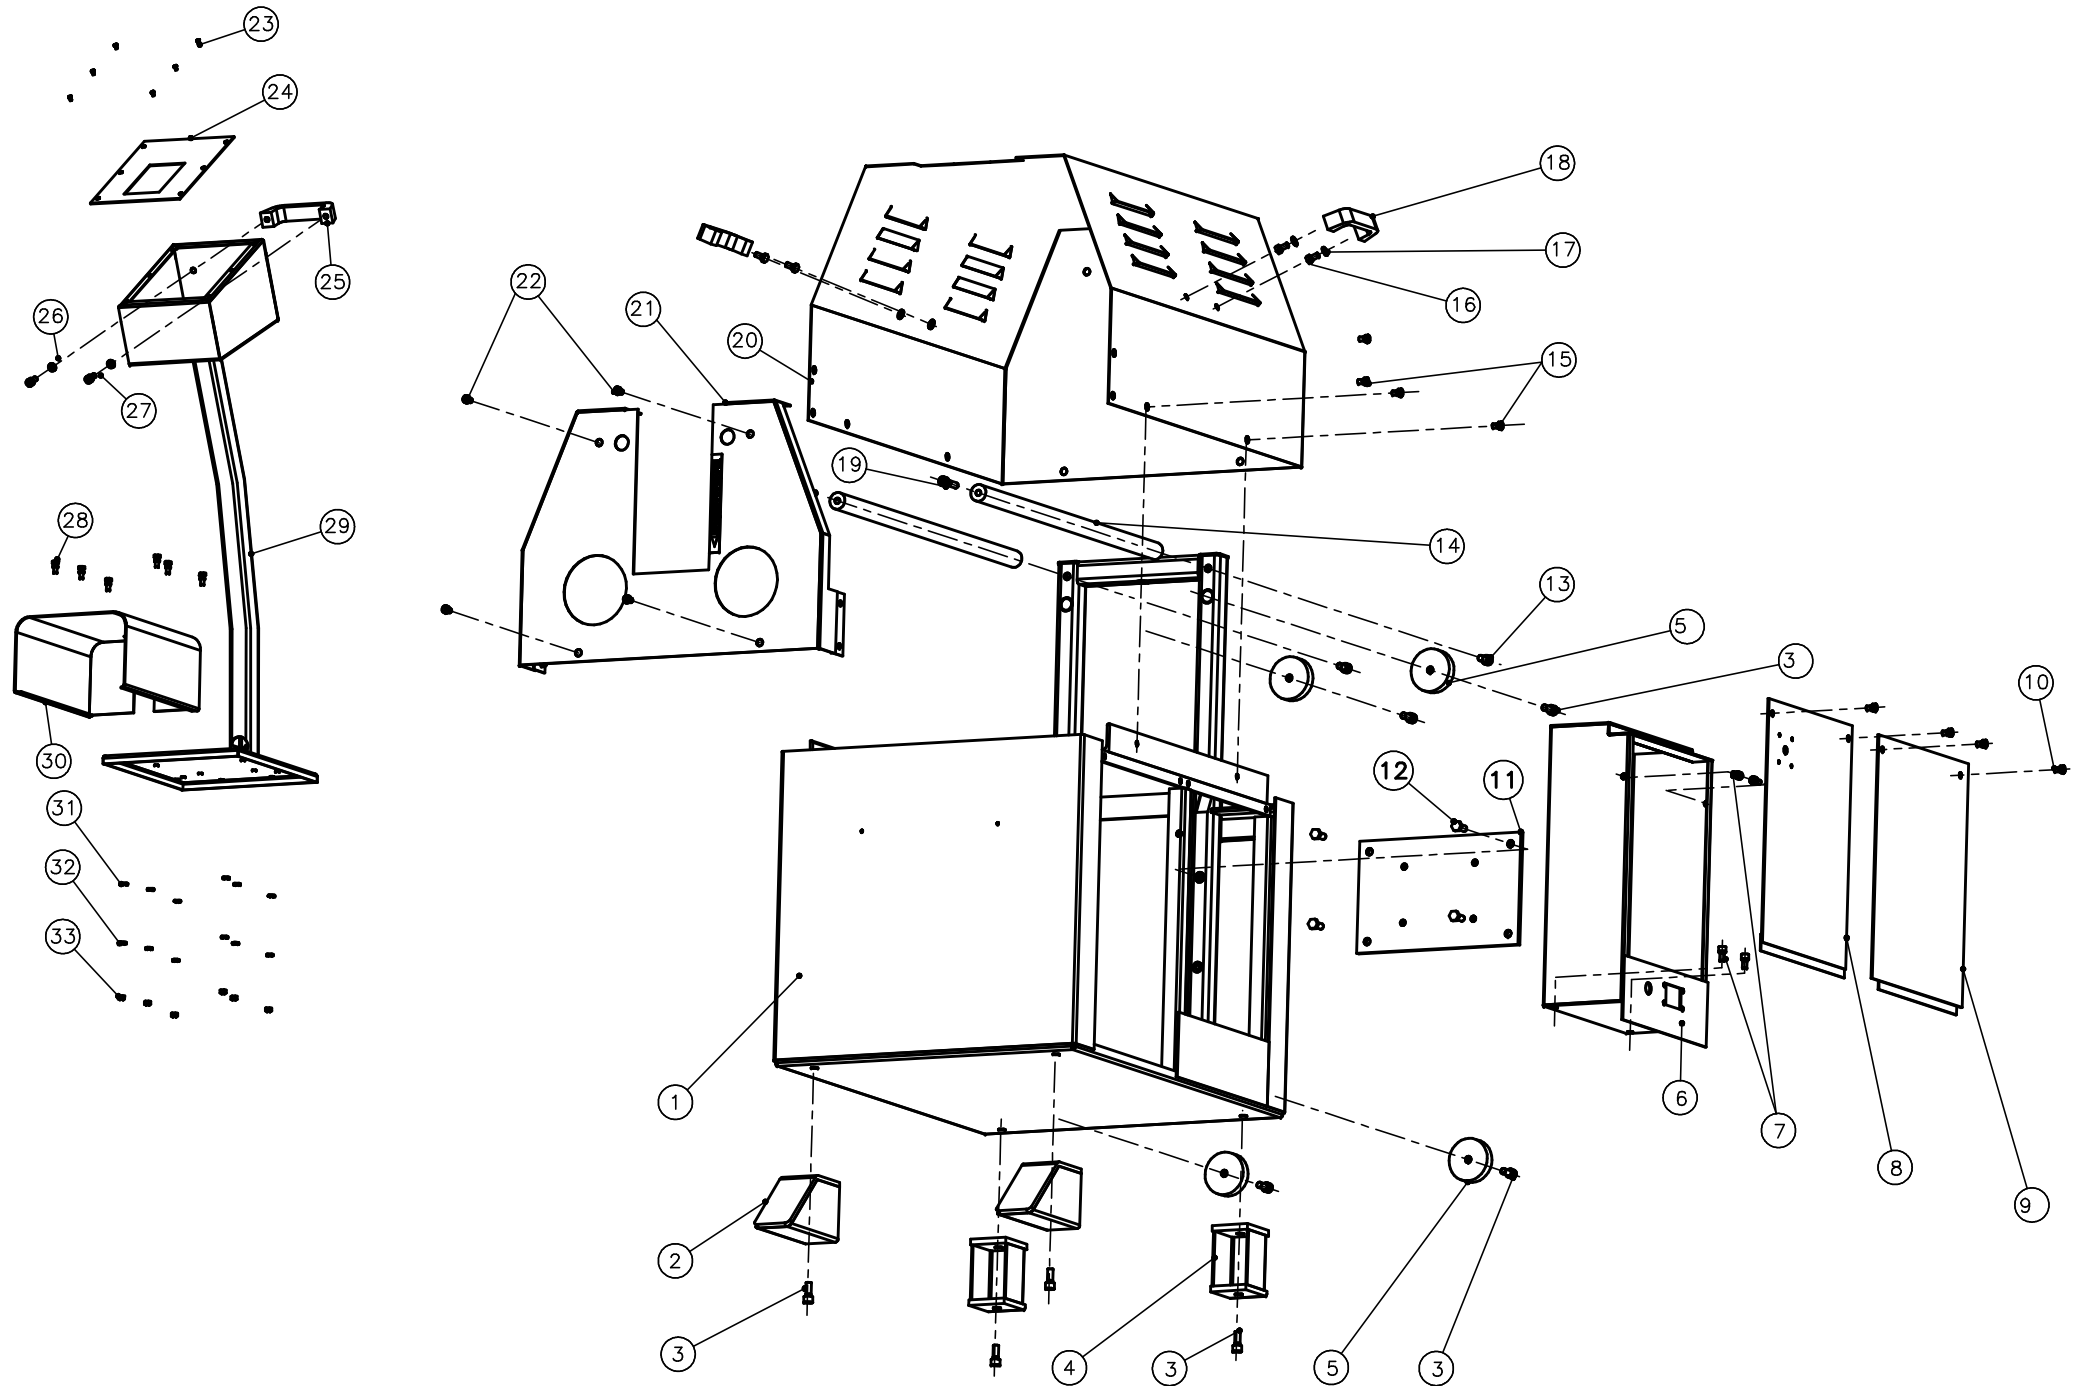

PB 70-2H Parts list

TAV no.	Part no.	Description	Part form
1	1	Clamp nut	M24x1,5
1	2	Span / Clamp disk	E2
1	3	Feather key	E2
1	4	Upper shaft	D1
1	5	Lower shaft	D1
1	6	Feather key	E1
1	7	Bearing cover disk	E1
1	8	Tapered roller bearing	32 209
1	9	Front bearing bushing	D1
1	10	Screw	M12x70
1	11	Screw	M10x70
1	12	Screw	M5x10
1	13	Screw	M8x40
1	14	Guide rail	D1
1	15	Screw	M4x4
1	16	Indicator	E2
1	17	Screw	M6x25
1	18	Spindle guide sled	D1
1	19	Front guide rail	E1
1	20	Spring	E2
1	21	Locking pin	E2
1	22	Bush	E1
1	23	Screw	E2
1	24	Shaft without thread	D1
1	25	Rear guide rail	E1
1	26	Screw	M12x35
1	27	Screw	M12x30
1	28	Nut	M12x20
1	29	Nut KM	KM 9
1	30	Lock disk	E2
1	31	Screw	M12x20
1	32	Gear wheel	D1
1	33	Rear bearing bushing	E1
1	34	Rear carrier plate	D1
1	35	Distance plate	C2

1	36	Front carrier plate	D1
1	37	Distance rail	D1
1	38	Cover disk	E1
1	39	Screw	M5x8
1	40	Base plate	C2
1	41	Screw	M10x30
1	42	Locking ring	30
1	43	Bearing	6006 2RS
1	44	Central bearing bushing	D1
1	45	Screw	M8x40
1	46	Distance ring	E1
1	47	Gear wheel shaft	D1
1	48	Motor	
2	1	Nut KM	E1
2	2	Screw	M14x45
2	3	Hinge	D1
2	4	Fork	D1
2	5	Screw	
2	6	Lower plate	D1
2	7	Hydraulic cylinder	
2	8	Screw	M12x60
2	9	Rod	D1
2	10	Cotter pin	3x22
2	11	Screw	
2	12	Piston anchor	D1
2	13	Bolts	D1
3	1	Lower rollers	E2
3	2	Lower distance rollers	E2
3	3	Lower distance rollers	E2
3	4	Lower distance rollers	E2
3	5	Lower distance rollers	E2
3	6	Lower distance rollers	E2
3	7	Lower distance rollers	E2
3	8	Distance disk (aluminium)	

3	9	Lower rollers	E2
3	10	Upper rollers	E2
3	11	Upper distance rollers	E2
3	12	Upper distance rollers	E2
3	13	Upper distance rollers	E2
3	14	Upper distance rollers	E2
3	15	Upper distance rollers	E2
3	16	Upper distance rollers	E2
3	17	Distance disk (aluminium)	
3	18	Upper rollers	E2
3	19	Screw	M5x8
3	20	Rectifier guide cover	E2
3	21	Tapered roller bearing	6202 RS
3	22	Rectifier shaft	E2
3	23	Rectifier roller	D2
3	24	Lead screw	E2
3	25	Nut	M10
3	26	Adjuster nut	E2
3	27	Front lead screw	E2
4	1	Base	D1
4	2	Foot	E3
4	3	Screw	M10x25
4	4	Foot	E3
4	5	Foot	E2
4	6	Electric box	D1
4	7	Screw	M8x16
4	8	Electric cover	D1
4	9	Cover	D1
4	10	Screw	M8x12
4	11	Holding plate	D1
4	12	Screw	M10x20
4	13	Screw	M10x20
4	14	Spreader bar	E2
4	15	Screw	M8x12

4	16	Screw	M8x12
4	17	Disk	8,4
4	18	Bow handle	M643/140B-M8
4	19	Screw	M10x40
4	20	Rear cover	D1
4	21	Front cover	D1
4	22	Screw	M8x12
4	23	Screw	M3x6
4	24	Front plate	E1
4	25	Bow handle	M643/140B-M8
4	26	Disk	8,4
4	27	Screw	M8x12
4	28	Screw	M6x15
4	29	Foot controller (welding part)	D1
4	30	Foot control casing	D1
4	31	Disk	6,4
4	32	Disk	6,1
4	33	Nut	M6