



18.1.1 VBS-2012 Band Saw – Exploded View

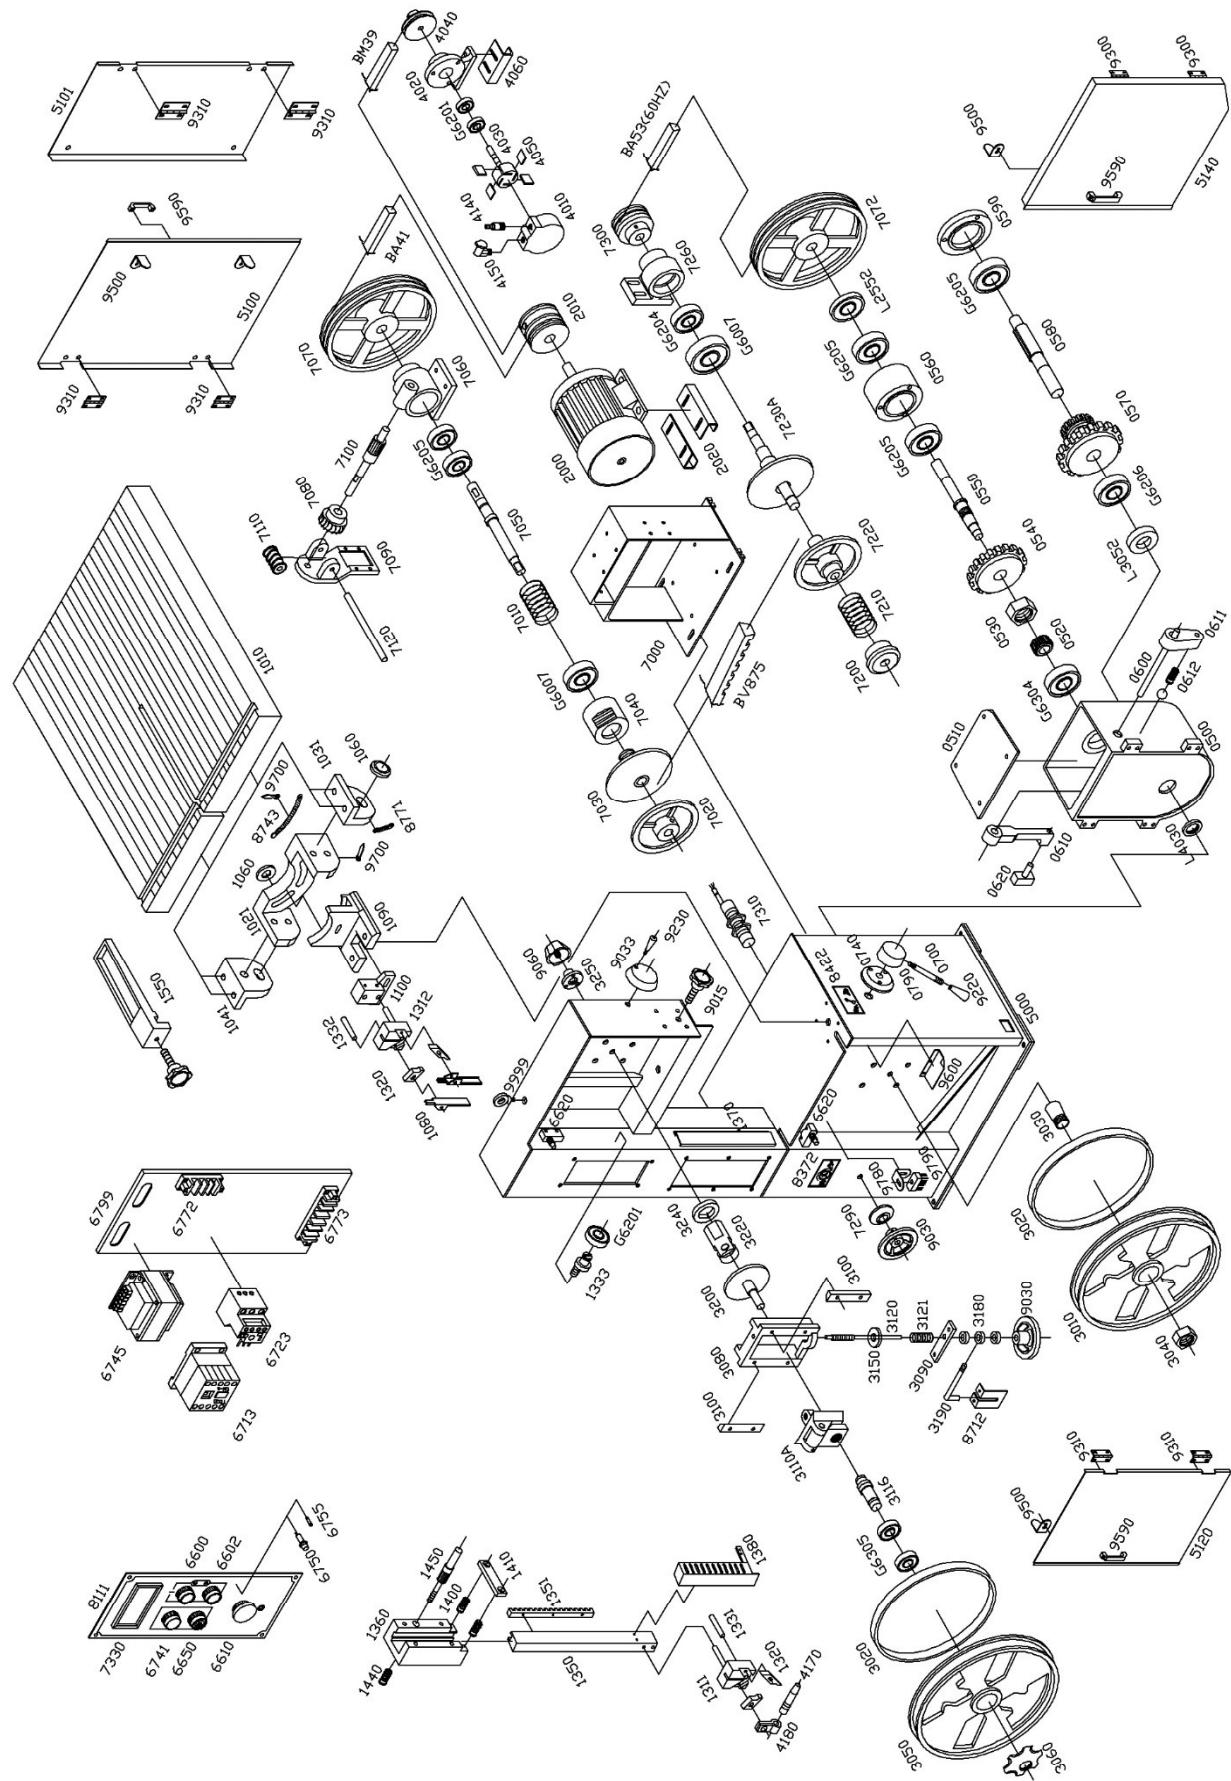

18.1.2 VBS-2012 Welder/Shear/Work Lamp Assemblies – Exploded View

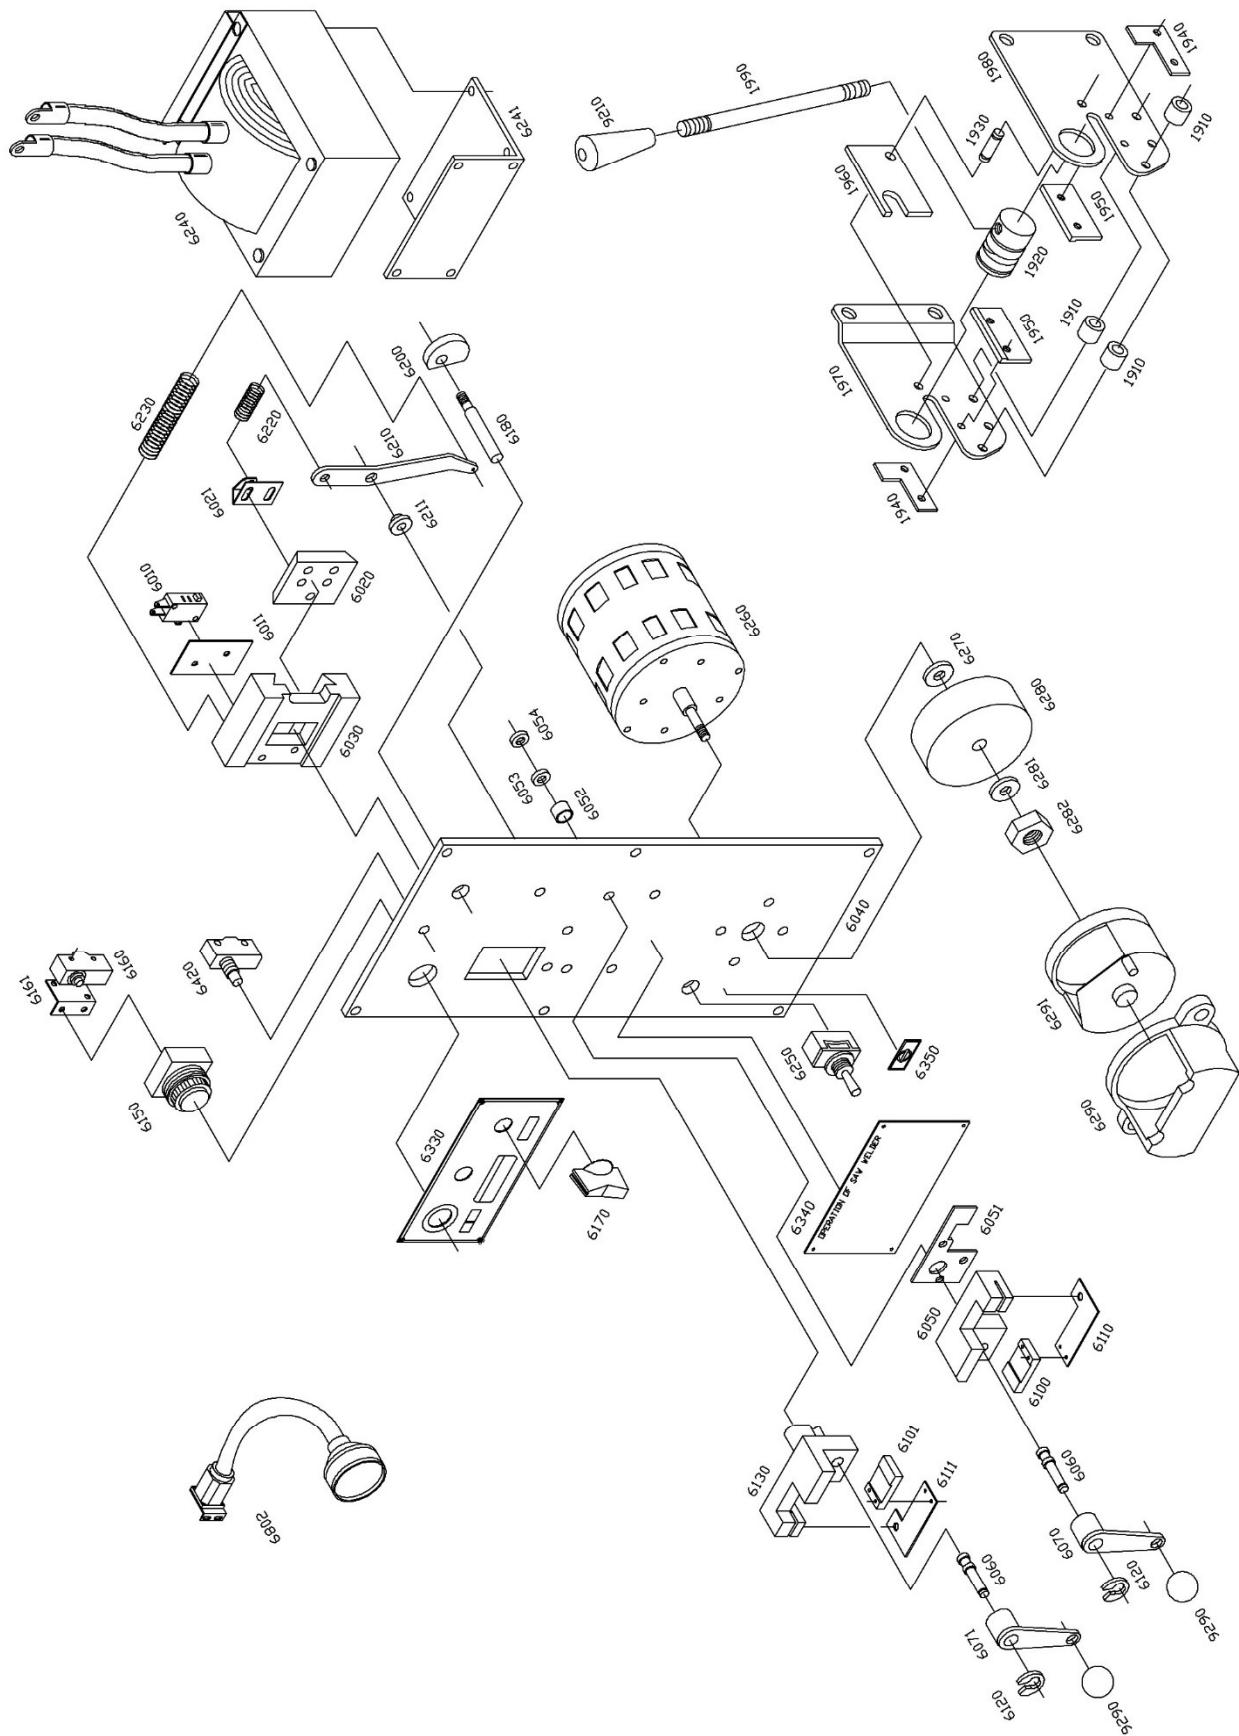

18.1.3 VBS-2012 Band Saw – Parts List

Index No	Part No	Description	Size	Qty
Control Panel Assembly				
6600	VBS2012-6600	Push Button - On		1
6602	VBS2012-6602	Push Button – Off		1
6610	VBS2012-6610	Emergency Off Switch		1
6620	VBS2012-6620	Door Safety Switch		2
6650	VBS2012-6650	Key Switch		1
6713	VBS2012-6713	Magnetic Switch (<i>serial no. 14035723 and higher</i>)		2
6723	VBS2012-6723	Starter Overload (<i>serial no. 14035723 and higher</i>)		1
6741	VBS2012-6741	Power On Indicator Light		1
6745	VBS2012-6745	Transformer		1
6750	VBS2012-6750	Fuse Seat		1
6755	VBS2012-6755	Fuse	2A	2
6799	VBS2012-6772	Wiring Housing Plate (includes 6772,6773)		1
8111	VBS2012-8111	Control Panel		1
Guide Post Assembly				
1311	VBS1220A-1311	Blade Guide Upper Support		1
1312	VBS16-1312	Blade Guide Lower Support		1
1320	VBS16-132	Blade Guide		4
1331	VBS2012-1331	Upper Blade Stop Pin		1
1332	VBS2012-1332	Lower Blade Stop Pin		1
1333	VBS2012-1333	Eccentric Shaft		1
G6201	BB-6201V	Ball Bearing		2
1350	VBS2012-1350	Blade Guide Post		1
1351	VBS2012-1351	Gear Bar		1
1360	VBS2012-1360	Guide Post Housing		1
1370	VBS2012-1370	Blade Guard – Left		1
1380	VBS2012-1380	Blade Guard – Right		1
1400	VBS2012-1400	Spring		2
1410	VBS2012-1410	Spring Housing		1
1440	VBS2012-1440	Spring		1
1450	VBS2012-1450	Post Elevating Gear		1
9015	VBS2012-9015	Guide Post Lock		1
9033	VBS2012-9033	Post Elevating Handwheel		1
9230	VBS2012-9023	Handle		1
Work Table Assembly				
1010	VBS2012-1010	Work Table		1
1021	VBS1220M-1021	Table Support Frame (<i>s/n 0709140 and higher</i>)		1
1031	VBS1220M-1031	Table Bracket – Right (<i>s/n 0709140 and higher</i>)		1
1041	VBS1220M-1041	Table Bracket – Left (<i>s/n 0709140 and higher</i>)		1
1060	TS-0680061	Washer	1/2"	2
1080	VBS2012-1080	Blade Guard		2
1090	VBS1220M-109	Table Support Housing		1
1100	VBS1220M-1100	Guide Support Housing		1
1550	VBS2012-1550	Rip Fence		1
8743	VBS2012-8743	Tilt Indicator – L&R		1
8771	VBS2012-8771	Tilt Indicator – F&B		1
9700	VBS2012-9700	Indicating Needle		2
Motor Assembly				
2000	VBS2012-2000	Motor		1
2010	VBS2012-2010	Motor Pulley		1
BA41	VB-A41	V-Belt		2
BA53	VB-A53	V-Belt		2
2020	VBS2012-2020	Motor Suspension Arm		2

Lower Wheel Assembly

3010	VBS1220A-301	Lower Wheel.....	1
3020	VBS-1220A-302	Rubber Tire.....	1
.....	VBS2012-301.....	Lower Wheel with Tire	1
3030	VBS2012-3030.....	Taper Sleeve	1
3040	VBS2012-3040.....	Wheel Lock Nut	1

Upper Wheel Assembly

3050	VBS1220A-305	Upper Wheel.....	1
3020	VBS-1220A-302	Rubber Tire.....	1
G6305	BB-6305	Ball Bearing	2
.....	VBS2012-305.....	Upper Wheel w/ Tire and Bearings.....	1
3060	VBS2012-3060.....	Upper Wheel Lock	1

Blade Tracking Assembly

3080	VBS2012-3080.....	Slide Block Housing *	1
3090	VBS2012-3090.....	Slide Block Seat *	1
3100	VBS2012-3100.....	Slide Block Guide *	2
3110A.....	VBS2012-3110A	Upper Wheel Slide Assembly *	1
3116	VBS2012-3116.....	Slide Screw Shaft	1
3120	VBS2012-3120.....	Wheel Elevating Shaft *	1
3121	VBS2012-3121.....	Spring *	1
3150	VBS2012-3150.....	Washer *	1
3180	VBS2012-3180.....	Indicator Ring *	3
*	VBS2012-3080CP	Slide Housing Complete	1
3190	VBS2012-3190.....	Tension Indicator	1
9030	VBS2012-9030.....	Handwheel.....	1
8712	VBS2012-8712.....	Indicator Plate.....	1
3200	VBS2012-3200.....	Wheel Tracking Adjuster.....	1
3220	VBS2012-3220.....	Wheel Tracking Connector	1
3240	VBS2012-3240.....	Connector Washer	1
3250	VBS2012-3250.....	Connector Housing	1
9060	VBS2012-9060.....	Tracking Handwheel.....	1
9600	VBS2012-9600.....	Chip Stopper.....	1
9780	VBS2012-9780.....	Brush Bracket	1
9790	VBS2012-9790.....	Chip Brush	1

Gear Box Assembly

0500	VBS2012-0500.....	Gear Box *	1
0510	VBS2012-0510.....	Gear Box Cover *	1
0520	VBS2012-0520.....	Gear *	1
0530	VBS2012-0530.....	Screw Nut *	35mm
0540	VBS2012-0540.....	Gear *	1
0550	VBS2012-0550.....	Gear Shaft *	1
0560	VBS2012-0560.....	Shaft Cover *	1
0570	VBS2012-0570.....	Gear *	1
0580	VBS2012-0580.....	Main Shaft * (s/n 6045651 and higher)	1
.....	VBS2012-0581.....	Main Shaft * (previous to s/n 6015660)	1
0590	VBS2012-0590.....	Main Shaft Cover *	1
0600	VBS2012-0600.....	Speed Changing Shaft *	1
0610	VBS2012-0610.....	Speed changing Arm *	1
0611	VBS2012-0611.....	Shaft Stop *	1
0612	VBS2012-0612.....	Spring *	1
0620	VBS2012-0620.....	Slide Block *	1
0624	VBS2012-0624.....	Key (not shown) *	1
0700	VBS2012-0700.....	Speed Change Lever *	1
0740	VBS2012-0740.....	Shaft Housing *	1
0790	VBS2012-0790.....	Speed Housing Ring *	1
9220	VBS2012-9220.....	Speed Lever Knob *	1
G6205	BB-6205	Ball Bearing *	3
L2552	VBS2012-L2552.....	Oil Seal *	1
G6206	BB-6206	Ball Bearing *	1
L3052	VBS2012-L3052.....	Oil Seal *	1

G6304	BB-6304	Ball Bearing *	1
L4030	VBS2012-L4030.....	Oil Seal *	1
*	VBS2012-0550CP.....	Gear Box Assembly Complete	1
8422	VBS2012-8422.....	Gear Box Warning Label	1

Air Pump Assembly

4010	VBS2012-4010.....	Air Pump Housing *	1
4020	VBS2012-4020.....	Air Pump Cover *	1
4030	VBS2012-4030.....	Air Pump Shaft *	1
G6201	BB-6201	Ball Bearing *	2
4040	VBS2012-4040.....	Air Pump Pulley *	1
4050	VBS2012-4050.....	Air Pump Leaves *	4
4060	VBS2012-4160.....	Air Pump Housing *	1
4140	VBS2012-4140.....	Air Outlet *	1
4150	VBS2012-4150.....	Air Inlet *	1
4170	VBS2012-4170.....	Air Nozzle *	1
4180	VBS2012-4180.....	Air Nozzle Clip *	1
BM39	VB-M39	V-Belt *(s/n 6045651 and higher)	VB-M39.....
*	VBS16-401CP.....	Air Pump Assembly Complete	1

Main Body

5000	VBS2012-5000G	Main Body.....	1
5100	VBS2012-5100G	Rear Door – Large.....	1
9310	VBS2012-9310.....	Hinge	6
9500	VBS2012-9500.....	Spring Plate	6
9590	VBS2012-9590.....	Handle	3
5101	VBS2012-5101G	Rear Door – Small.....	1
5120	VBS2012-5120G	Lower Door – Front.....	1
5140	VBS2012-5140G	Upper Door – Front.....	1
9300	VBS2012-9300.....	Upper Door Hinge.....	2
9999	VBS2012-9999.....	Eye Bolt	1
	JET-203.....	JET Logo	203 x 84 mm

Variable Speed Assembly

7000	VBS2012-7000.....	Motor Spring Housing *	1
7010	VBS2012-7010.....	Spring *	1
7020	VBS2012-7020.....	Variable Speed Disk – Upper Outside *	1
7030	VBS2012-7030.....	Variable Speed Disk – Upper Inside *	1
7040	VBS2012-7040.....	Variable Speed Housing Tube *	1
G6007	BB-6007	Ball Bearing *	1
7050	VBS2012-7050.....	Variable Speed Disk Shaft *	1
G6205	BB-6205	Ball Bearing *	2
7060	VBS2012-7060.....	Variable Speed Housing *	1
*	VBS2012-7000CP.....	Variable Speed Housing Assembly Complete	1
7070	VBS2012-7070.....	Pulley	9"
7080	VBS2012-7080.....	Worm Gear	1
7090	VBS2012-7090.....	Worm Gear Housing	1
7100	VBS2012-7100.....	Gear Shaft	1
7110	VBS2012-7110.....	Worm	1
7120	VBS2012-7120.....	Arm	1
8372	VBS2012-8372.....	Variable Speed Instruction Label.....	1

Variable Speed Shaft Assembly

7200	VBS2012-7200.....	Spring Housing *	1
7210	VBS2012-7210.....	Spring *	1
7220	VBS2012-7220.....	Variable Speed Disk – Lower Outside *	1
7230A.....	VBS2012-7230A	Variable Speed Disk Assembly– Lower Inside *	1
G6007	BB-6007	Ball Bearing *	1
G6204	BB-6204	Ball Bearing *	1
7260	VBS2012-7260.....	Shaft Housing *	1
*	VBS2012-7200CP.....	Variable Speed Housing Assembly Complete	1
7290	VBS2012-7290.....	Wheel Seat	1
7300	VBS2012-7300.....	Pulley	1

7310	VBS2012-7310	Speed Readout Detector* (s/n 6045651 and higher)	1
7330	VBS1220M-661	Digital Tachometer	1
9030	VBS2012-9030	Handwheel	1
BV875	VBS2012-BV875	Cog Belt	1
BA41	VB-A41	V-Belt	A41 2

Work Lamp Assembly

6802	VBS2012-6802	Work Lamp Assembly Complete (serial no. 14095761 and higher)	1
------	--------------	--------------------------------------------------------------	---


Welder/Grinder Assembly

6010	JWG34-601	Limit Switch *	1
6011	PR-EV-6011	Insulator *	1
6020	PR-EV-6020	Guide Block *	1
6021	PR-EV-6021	Spring Bracket *	1
6030	PR-EV-6030	Guide Casting *	1
6040	PR-EV-6040	Housing *	1
6050	PR-EV-6050	Stationary Jaw *	1
6051	PR-EV-6051	Insulator *	1
6052	PR-EV-6052	Insulating Tube *	4
6053	PR-EV-6053	Insulating Washer *	4
6054	PR-EV-6054	Spacer *	4
6060	PR-EV-6060	Eccentric Shaft *	2
6070	PR-EV-6070	Clamp Lever – Right *	1
6071	PR-EV-6071	Clamp Lever – Left *	1
9290	PR-EV-9290	Knob *	2
6100	PR-EV-6100	Clamp Support – Right *	1
6101	PR-EV-6101	Clamp Support – Left *	1
6110	PR-EV-6110	Clamp Plate – Right *	1
6111	PR-EV-6111	Clamp Plate – Left *	1
6120	PR-EV-6120	Cam *	2
6130	PR-EV-6130	Moving Jaw *	1
6150	JWG34-615	Weld Button *	1
6160	PR-HV-6160	Micro Switch *	1
6161	PR-EV-6161	Switch Bracket *	1
6170	PR-EV-6170	Pressure Adjust Knob *	1
6180	PR-EV-6180	Shaft *	1
6200	PR-EV-6200	Cam *	1
6210	PR-EV-6210	Weld Tension Arm *	1
6211	PR-EV-6211	Bushing *	1
6220	PR-EV-6220	Spring – Short *	1
6230	PR-EV-6230	Spring – Long *	1
6240	VBS1220M-624	Transformer *	1
6241	PR-HV-6241	Mounting Bracket *	1
6250	PR-EV-6250	Switch *	1
6260	PR-EV-6260	Grinder Motor *	1
6270	PR-EV-6270	Spacer *	1
6280	PR-EV-6280	Grinding Wheel *	1
6281	TS-0680021	Washer *	1/4"
6282	TS-1540041	Nut *	6mm
6290	VBS1220M-629	Grinder Guard *	1
6291	PR-EV-6291	Grinder Cover *	1
6330	PR-HV-6330	Name Plate *	1
6340	PR-EV-6340	Instruction Label *	1
6350	PR-EV-6420	Grinder Label *	1
6420	PR-HV-6420	Anneal Switch *	1
*	VBS2012-WCP	Welder Assembly Complete	1

Shear Assembly

1910	PR-EV-1910.....	Spindle Bushing *	4
1920	PR-EV-1920.....	Spindle Lift *	1
1930	PR-EV-1930.....	Blade Shaft *	1
1940	PR-EV-1940.....	Vaned Iron Plate (Blade Stop) *	2
1950	PR-EV-1950.....	Lower Blade *	2
1960	PR-EV-1960.....	Upper Blade *	2
1970	PR-EV-1970.....	Joint Plate – Left *	1
1980	PR-EV-1980.....	Joint Plate – Right *	1
1990	PR-EV-1990.....	Handle Bar *	1
9210	PR-EV-9210.....	Knob *	1
*	VBS2012-SCP	Shear Assembly Complete	1

19.0 Electrical Connections

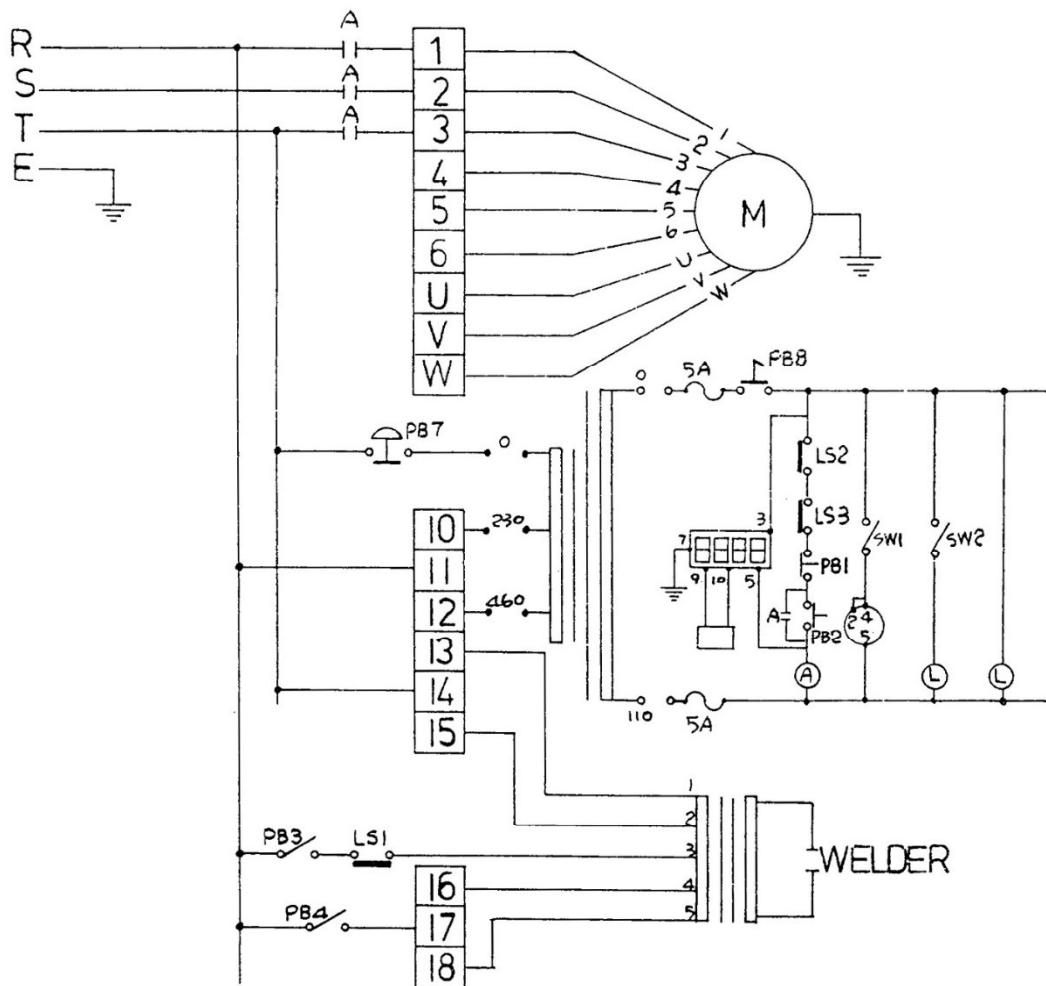


PB1 - Saw Stop Switch
 PB2 - Saw Start Switch
 PB3 - Weld Switch
 PB4 - Anneal Switch
 PB7 - Emergency Stop
 PB8 - Main Power Key
 LS1 - Auto Weld Stop Switch
 LS2 - Safety Switch
 LS3 - Safety Switch
 SW1 - Grinder On-Off Switch
 SW2 - Work Lamp On-Off Switch

Jumper Wire Settings

	220V	440V
1 - U	4 - U	
2 - V	5 - V	
3 - W	6 - W	
4 - 5 - 6	11 - 12	
10 - 11	13 - 14	
14 - 15	17 - 18	
16 - 17		

electric Box connect schematic

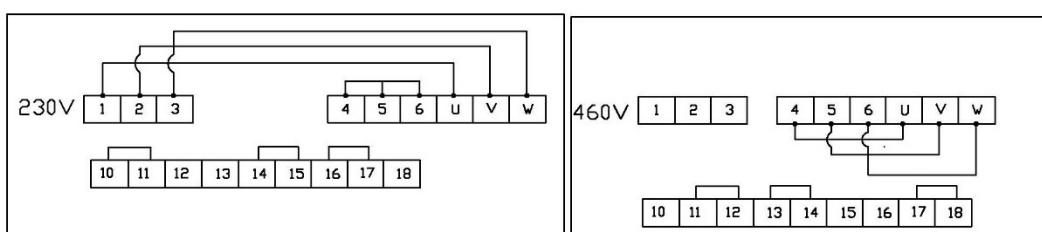

This page intentionally left blank.

This page intentionally left blank.



427 New Sanford Road
LaVergne, Tennessee 37086
Phone: 800-274-6848
www.jettools.com