



**JTS-600XL**

**TABLE SAW**

**JTS-600XL...10000070XLM....230/50/1**

**JTS-600XL....10000070XLT....400/50/3**

**PARTS LIST  
ERSATZTEILLISTE  
LISTE DE PIECES**

**JPW (Tool) AG**

Tämperlistrasse 5  
CH-8117 Fällanden  
Switzerland

Phone +41 44 806 47 48

Fax +41 44 806 47 58


[www.jettools.com](http://www.jettools.com)



P-10000070XLM/10000070XLT

2018-03

# Trunnion Assembly for JTS-600XL

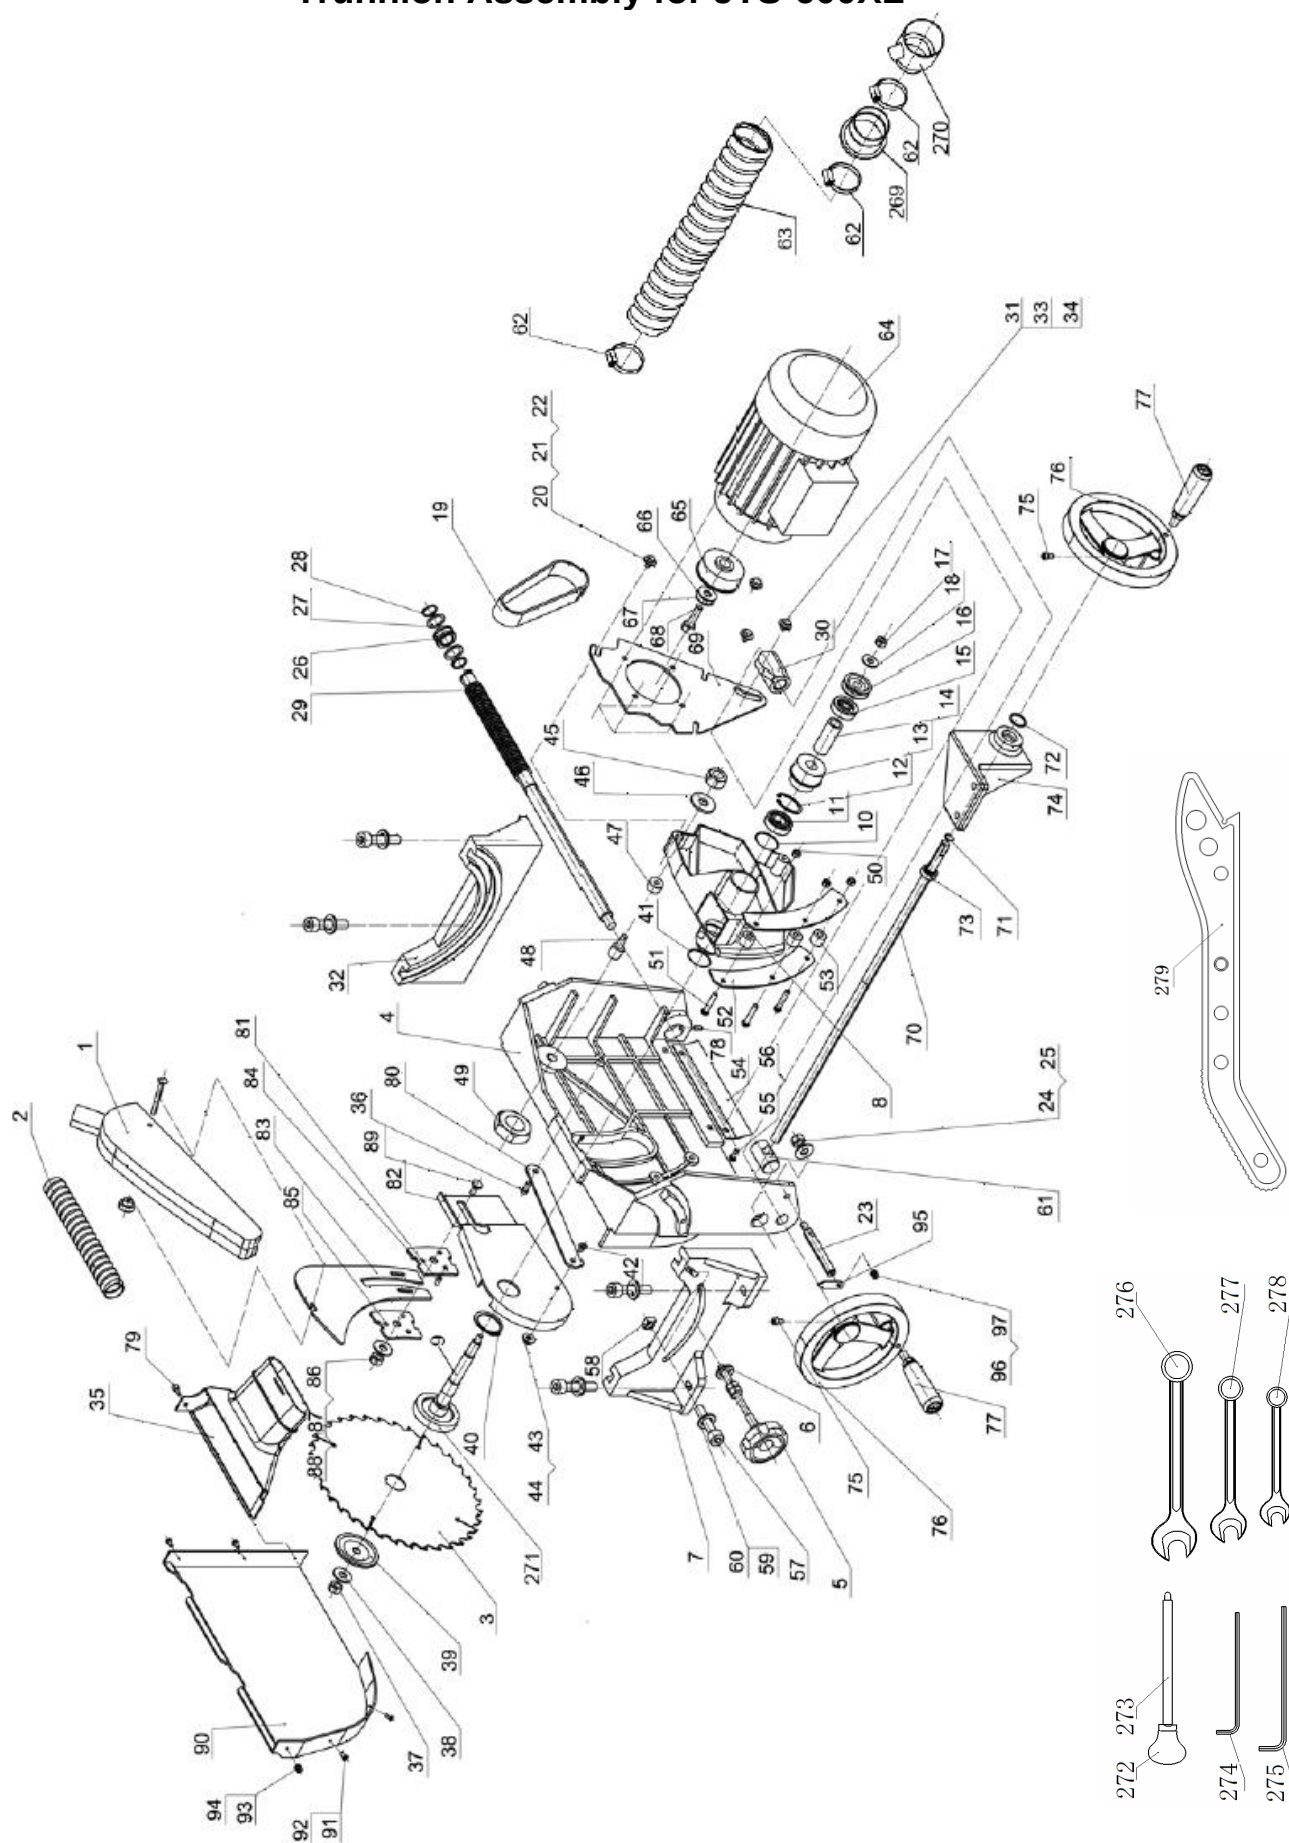


## Trunnion Assembly for JTS-600XL

| Index | Part No.    | Description                        | Size           | Qty. |
|-------|-------------|------------------------------------|----------------|------|
| 1     | JTS600-001  | Blade guard assy                   |                | 1    |
| 2     | JTS600-002  | Dust collection tube(small)        |                | 1    |
| 3     | JTS600-003  | Blade                              | Ø250x3xØ30-36T | 1    |
| 4     | JTS600-004  | Mount adjusting base               |                | 1    |
| 5     | JTS600-005  | Locking handle assy                |                | 1    |
| 6     | JTS600-006  | Washer                             | 8              | 1    |
| 7     | JTS600-007  | Rotating support base A            |                | 1    |
| 8     | JTS600-008  | Mount base                         |                | 1    |
| 9     | JTS600-009  | Main shaft                         |                | 1    |
| 10    | JTS600-010  | Adjusting washer                   |                | 4    |
| 11    | JTS600-011  | Bearing                            | 6003-RZ        | 1    |
| 12    | JTS600-012  | Retaining ring                     |                | 1    |
| 13    | JTS600-013  | Shaft pulley                       |                | 1    |
| 14    | JTS600-014  | Tube                               |                | 1    |
| 15    | JTS600-015  | Bearing                            | 6301-RZ        | 1    |
| 16    | JTS600-016  | Adjusting wheel                    |                | 1    |
| 17    | JTS600-017  | Nut                                | M8             | 1    |
| 18    | JTS600-018  | Washer                             | 8              | 1    |
| 19    | JTS600-019  | Poly-belt                          | PJ150          | 1    |
| 20    | JTS600-020  | Hex screw                          | M6X30          | 3    |
| 21    | JTS600-021  | Washer                             | 6              | 3    |
| 22    | JTS600-022  | Washer                             | 6              | 3    |
| 23    | JTS600-023  | Indicator rod                      |                | 1    |
| 24    | JTS600-024  | Nut                                | M8             | 1    |
| 25    | JTS600-025  | Washer                             | 8              | 1    |
| 26    | JTS600-026  | Tube                               |                | 1    |
| 27    | JTS600-027  | Washer                             |                | 2    |
| 28    | JTS600-028  | Retaining ring                     |                | 2    |
| 29    | JTS600-029  | Thread rod                         |                | 1    |
| 30    | JTS600-030  | Thread tube                        |                | 1    |
| 31    | JTS600-031  | Tube                               |                | 1    |
| 32    | JTS600-032  | Rotating support base B            |                | 1    |
| 33    | JTS600-033  | Position screw                     |                | 1    |
| 34    | JTS600-034  | Washer                             | 8              | 1    |
| 35    | JTS600-035  | Dust funnel                        |                | 1    |
|       | JTS600-035A | Funnel & hose clamp assly.(35, 62) |                | 1    |
| 36    | JTS600-036  | Screw                              |                | 1    |
| 37    | JTS600-037  | Lock Nut                           | M10X1.5-Left   | 1    |
| 38    | JTS600-038  | Washer                             | 10             | 1    |
| 39    | JTS600-039  | Blade flange                       |                | 1    |
| 40    | JTS600-040  | Retaining ring                     |                | 1    |
| 41    | JTS600-041  | Washer                             |                | 2    |
| 42    | JTS600-042  | Screw                              | M6X20          | 1    |
| 43    | JTS600-043  | Nut                                | M6             | 1    |
| 44    | JTS600-044  | Washer                             | 6              | 2    |
| 45    | JTS600-045  | Nut                                | M8             | 1    |
| 46    | JTS600-046  | Washer                             | 8              | 1    |
| 47    | JTS600-047  | Tube II                            |                | 1    |
| 48    | JTS600-048  | Position screw                     |                | 1    |
| 49    | JTS600-049  | Nut                                | M6             | 1    |
| 50    | JTS600-050  | Nut                                | M6             | 3    |
| 51    | JTS600-051  | Screw                              | M6X35          | 3    |
| 52    | JTS600-052  | Clamping plate                     |                | 2    |
| 53    | JTS600-053  | Tube I                             |                | 3    |
| 54    | JTS600-054  | Guard for thread rod               |                | 1    |
| 55    | JTS600-055  | Washer                             | 6              | 2    |

## Trunnion Assembly for JTS-600XL

| Index | Part No.      | Description                                        | Size           | Qty. |
|-------|---------------|----------------------------------------------------|----------------|------|
| 56    | JTS600-056    | Pan head screw                                     | M6X8           | 2    |
| 57    | JTS600-057    | Nut                                                | M8X20          | 2    |
| 58    | JTS600-058    | Square Nut                                         |                | 2    |
| 59    | JTS600-059    | Washer                                             | 8              | 2    |
| 60    | JTS600-060    | Internal washer                                    | 8              | 2    |
| 61    | JTS600-061    | 45degree tilting rod                               |                | 1    |
| 62    | JTS600-062    | Hose clamp                                         |                | 3    |
| 63    | JTS600-063    | Dust collection hose(big)                          |                | 1    |
| 64    | JTS600-064E   | Motor 230V/50Hz/1                                  |                | 1    |
|       | JTS600-064AE  | Motor 400V/50Hz/3                                  |                | 1    |
|       | JTS600-064RCE | Running Capacitor (not shown)                      | (20uF/ 450VAC) | 1    |
|       | JTS600-064-B  | Motor Break replacement parts assembly (not shown) |                | 1    |
| 65    | JTS600-065    | Motor pulley                                       |                | 1    |
| 66    | JTS600-066    | Anti back washer                                   |                | 1    |
| 67    | JTS600-067    | Washer                                             | 8              | 1    |
| 68    | JTS600-068    | Screw                                              |                | 1    |
| 69    | JTS600-069    | Motor mounting bracket                             |                | 1    |
| 70    | JTS600-070    | Tilting thread rod                                 |                | 1    |
| 71    | JTS600-071    | Clamping ring                                      | 12             | 1    |
| 72    | JTS600-072    | Clamping ring                                      | 22             | 1    |
| 73    | JTS600-073    | Joint bearing                                      |                | 1    |
| 74    | JTS600-074    | Bracket for joint bearing                          |                | 1    |
| 75    | JTS600-075    | Screw                                              | M6X16          | 2    |
| 76    | JTS600-076    | Big handle wheel                                   |                | 2    |
| 77    | JTS600-077    | Handle                                             |                | 2    |
| 78    | JTS600-078    | Scew                                               | M6X10          | 1    |
| 79    | JTS600-079    | Knob                                               |                | 1    |
| 80    | JTS600-080    | Connecting plate                                   |                | 1    |
| 81    | JTS600-081    | Hex socket screw                                   | M6x10          | 3    |
| 82    | JTS600-082    | Bracket for riving knife                           |                | 1    |
| 83    | JTS600-083    | Riving knife                                       |                | 1    |
| 84    | JTS600-084    | Guide plate                                        |                | 1    |
| 85    | JTS600-085    | Press plate                                        |                | 1    |
| 86    | JTS600-086    | Washer                                             | 10             | 1    |
| 87    | JTS600-087    | Nut                                                | M10            | 1    |
| 88    | JTS600-088    | Spring washer                                      | 10             | 1    |
| 89    | JTS600-089    | Screw                                              | M10X25         | 1    |
| 90    | JTS600-090    | Inside blade guard                                 |                | 1    |
| 91    | JTS600-091    | Screw                                              | M4X10          | 3    |
| 92    | JTS600-092    | Washer                                             | 5              | 5    |
| 93    | JTS600-093    | Screw                                              | M4X20          | 2    |
| 94    | JTS600-094    | Self lock nut                                      | M4             | 2    |
| 95    | JTS600-095    | Angle indicator                                    |                | 1    |
| 96    | JTS600-096    | Washer                                             | 4              | 1    |
| 97    | JTS600-097    | Screw                                              | M4X8           | 1    |
| 269   | JTS600-269    | Cabinet adapter                                    |                | 1    |
| 270   | JTS600-270    | Hose adapter (Y-piece)                             |                | 1    |
| 271   | JTS600-271    | Blade flange                                       |                | 1    |
| 272   | JTS600-272    | Ball handle                                        |                | 1    |
| 273   | JTS600-273    | Handlebar                                          |                | 1    |
| 274   | JTS600-274    | Allen key                                          | 6mm            | 1    |
| 275   | JTS600-275    | Allen key                                          | 5mm            | 1    |
| 276   | JTS600-276    | Socket wrench                                      | 16mm           | 1    |
| 277   | JTS600-277    | Socket wrench                                      | 13mm           | 1    |
| 278   | JTS600-278    | Socket wrench                                      | 10mm           | 1    |
| 279   | JTS600-279    | Pushing handle                                     |                | 1    |



## Table and Frame Assembly for JTS-600XL

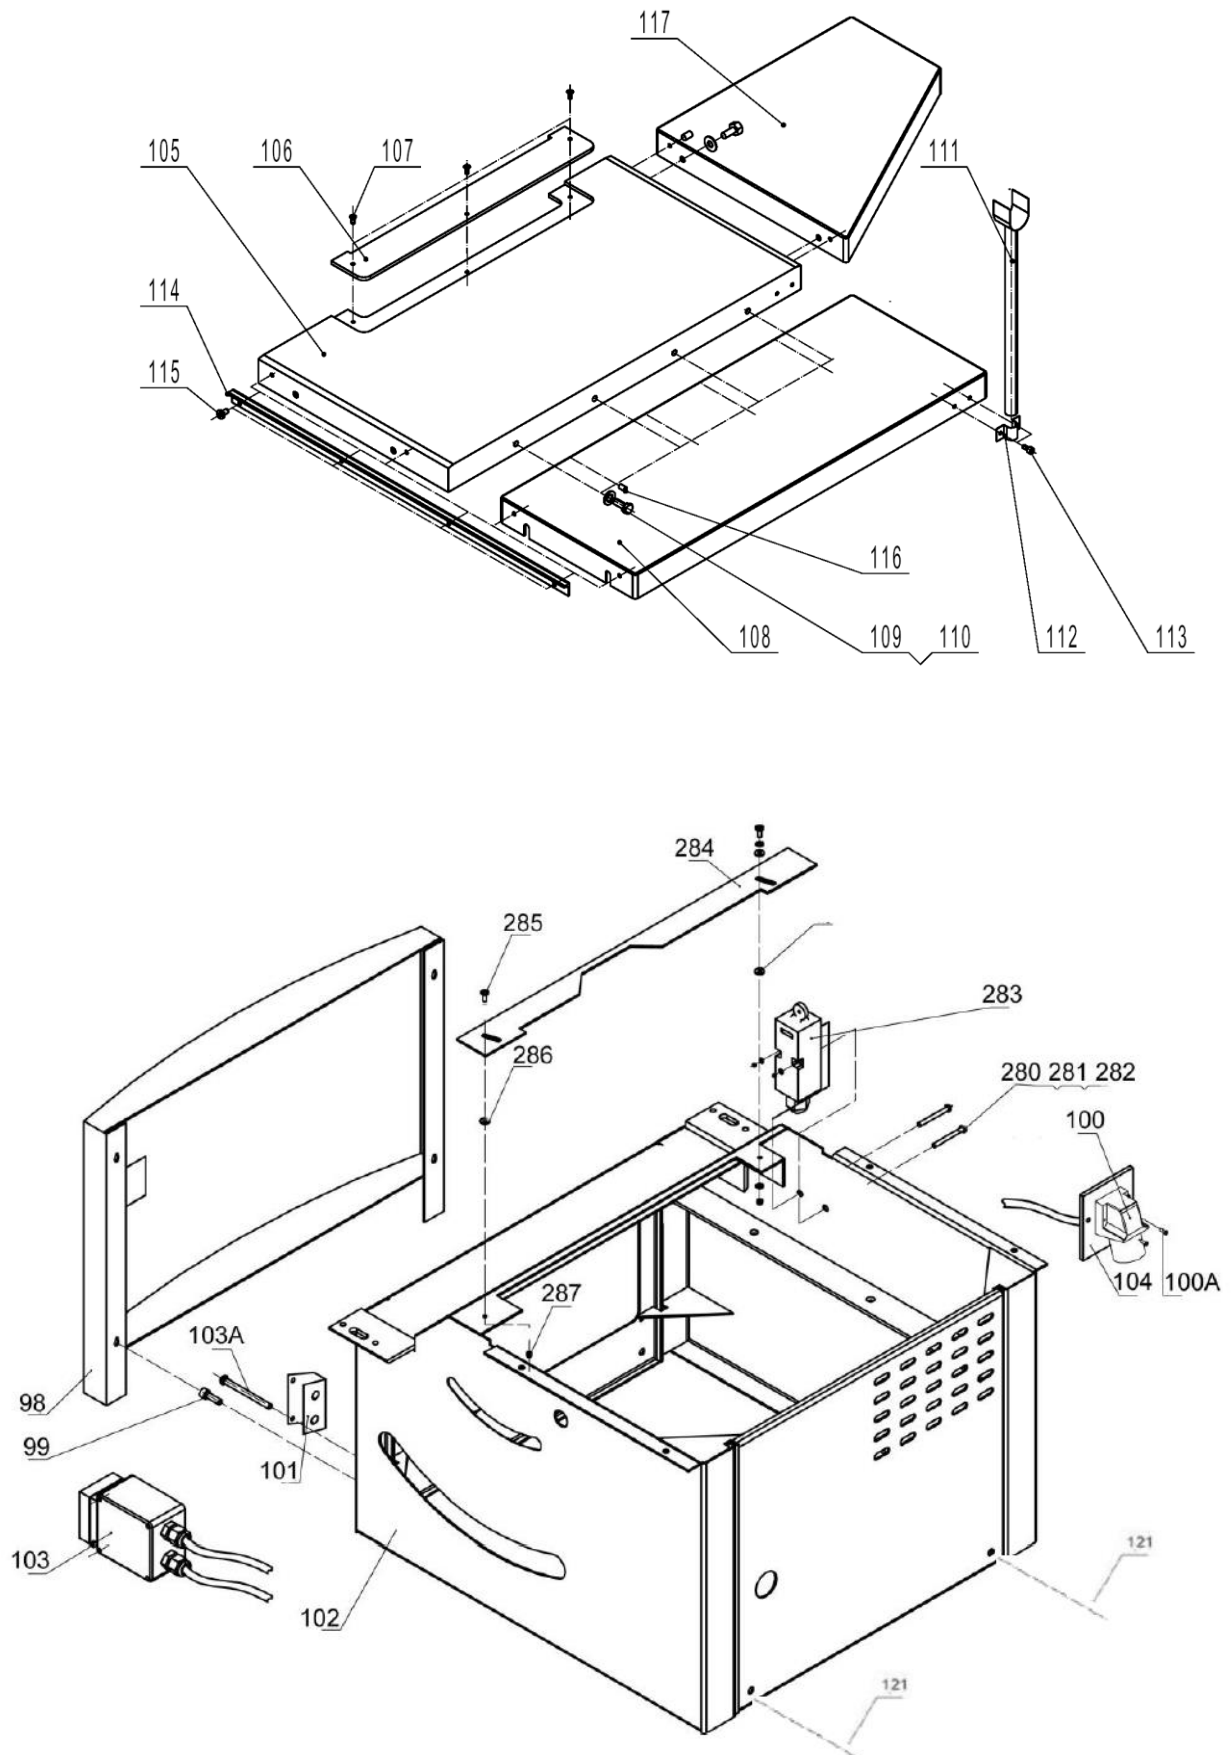

## Table and Frame Assembly for JTS-600XL

| Index | Part No.       | Description                 | Size  | Qty. |
|-------|----------------|-----------------------------|-------|------|
| 98    | JTS600-098     | Upper acr panel             |       | 1    |
| 99    | JTS600-099     | Screw                       | M6X16 | 2    |
| 100   | JTS600-100E    | Plug 230V/50Hz/1            |       | 1    |
|       | JTS600-100AE   | Plug 400V/50Hz/3            |       | 1    |
| 100A  | JTS600-100A    | Screw                       | M4X15 | 4    |
| 101   | JTS600-101     | Switch mounting plate       |       | 1    |
| 102   | JTS600XL-102   | Upper frame assembly        |       | 1    |
| 103   | JTS600XL-103E  | Switch Assembly 230V/50Hz/1 |       | 1    |
|       | JTS600XL-103AE | Switch Assembly 400V/50Hz/3 |       | 1    |
| 103A  | JTS600-103A    | Screw                       | M4X60 | 2    |
| 104   | JTS600-104     | Plug mounting plate         |       | 1    |
| 105   | JTS600X-105    | Main table                  |       | 1    |
| 106   | JTS600-106     | Table insert                |       | 1    |
| 107   | JTS600-107     | Screw                       | M5x8  | 3    |
| 108   | JTS600X-108    | Right Extension Table       |       | 1    |
| 109   | JTS600-109     | Hex bolt                    | M8X12 | 6    |
| 110   | JTS600-110     | Washer                      | 8     | 6    |
| 111   | JTS600-111     | Support bracket             |       | 1    |
| 112   | JTS600-112     | Semicircular bracket        |       | 1    |
| 113   | JTS600-113     | Hex socket screw            | M6X16 | 2    |
| 114   | JTS600-114     | Front rail                  |       | 1    |
| 114S  | JTS600-114S    | Scale                       |       | 1    |
| 115   | JTS600-115     | Pan head screw              | M6X16 | 4    |
| 116   | JTS600X-116    | Hex socket set screw        | M6X12 | 6    |
| 117   | JTS600X-117    | Rear extension table        |       | 1    |
| 280   | JTS600XL-280   | Pan head screw              | M4X30 | 2    |
| 281   | JTS600XL-281   | Washer                      | M4    | 2    |
| 282   | JTS600XL-282   | Nut                         |       | 2    |
| 283   | JTS600XL-283   | Micro switch                |       | 1    |
| 284   | JTS600XL-284   | Guard                       |       | 1    |
| 285   | JTS600XL-285   | Screw                       | M5X8  | 3    |
| 286   | JTS600XL-286   | Split damping ring          |       | 3    |
| 287   | JTS600XL-287   | Nylon nut                   |       | 2    |

## Sliding Table and Cabinet Assembly for JTS-600XL

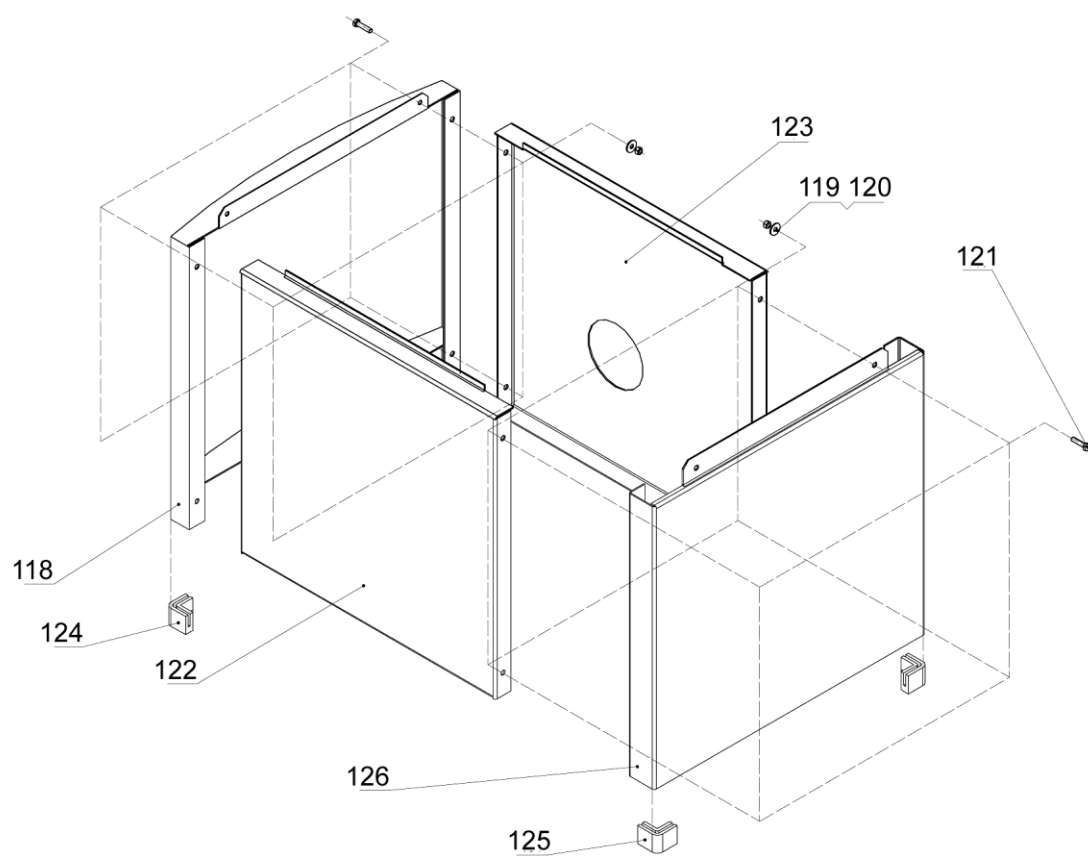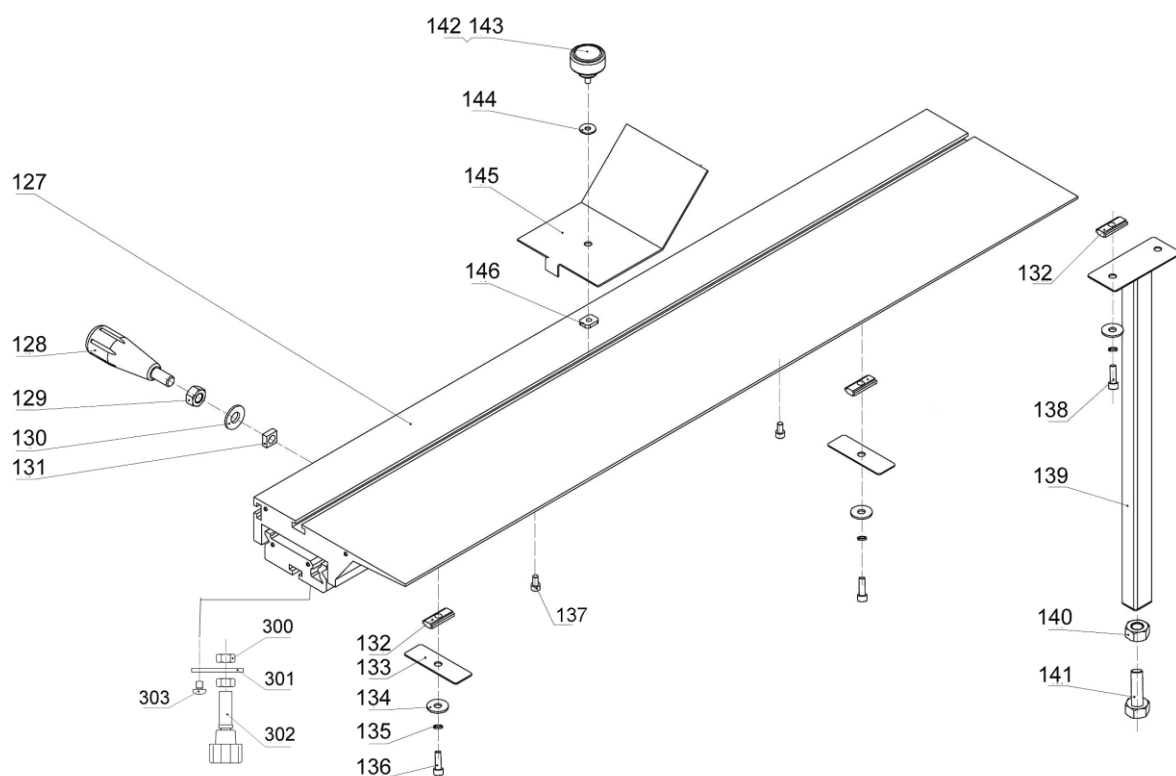


## Sliding Table and Cabinet Assembly for JTS-600XL

| Index | Part No.      | Description                       | Size                 | Qty. |
|-------|---------------|-----------------------------------|----------------------|------|
| 118   | JTS600-118    | Lower arc panel                   |                      | 1    |
| 119   | JTS600-119    | Nut                               | M6                   | 8    |
| 120   | JTS600-120    | Washer                            | M6                   | 8    |
| 121   | JTS600-121    | Hex screw                         | M6X15                | 8    |
| 122   | JTS600-122    | Base front panel                  |                      | 1    |
| 123   | JTS600-123    | Base rear panel                   |                      | 1    |
| 124   | JTS600-124    | Foot for arc panel                |                      | 2    |
| 125   | JTS600-125    | Foot for side panel               |                      | 2    |
| 126   | JTS600-126    | Base side panel                   |                      | 1    |
| 127   | JTS600XL-127  | Sliding table ASSY                |                      | 1    |
| 128   | JTS600XL-128  | Star locking handle               |                      | 1    |
| 129   | JTS600XL-129  | Hex nut                           | M10                  | 1    |
| 130   | JTS600XL-130  | Washer                            |                      | 1    |
| 131   | JTS600XL-131  | Square nut                        |                      | 1    |
| 132   | JTS600XL-132  | Sliding block                     |                      | 6    |
| 133   | JTS600XL-133  | Shim plate                        |                      | 2    |
| 134   | JTS600XL-134  | Washer                            |                      | 6    |
| 135   | JTS600XL-135  | Spring washer                     |                      | 6    |
| 136   | JTS600XL-136  | Hex socket screw                  | M8X25                | 2    |
| 137   | JTS600XL-137  | Hex socket screw                  | M6X10                | 2    |
| 138   | JTS600XL-138  | Hex socket screw                  | M8X16                | 4    |
| 139   | JTS600XL-139  | Support pin                       |                      | 2    |
|       | JTS600XL-139A | Sliding table Support Assembly    | (#132,#138 thru 141) | 2    |
| 140   | JTS600XL-140  | Hex nut                           | M16                  | 2    |
| 141   | JTS600XL-141  | Hexagonal head bolt               | M16X55               | 2    |
| 142   | JTS600XL-142  | Damper Knob Assembly              |                      | 1    |
| 143   | JTS600XL-143  | Hex Bolt                          | M6X20                | 1    |
| 144   | JTS600XL-144  | Washer                            |                      | 1    |
| 145   | JTS600XL-145  | Push plate                        |                      | 1    |
| 146   | JTS600XL-146  | Square nut                        |                      | 1    |
| 300   | JTS600XL-300  | Hex nut                           |                      | 2    |
| 301   | JTS600XL-301  | Fixing plate                      |                      | 1    |
| 302   | JTS600XL-302  | Locating pin                      |                      | 1    |
| 303   | JTS600XL-303  | Screw                             |                      | 2    |
| 304   | JTS600XL-304  | Locating Assembly (#300 thru 303) |                      | 1    |




## Outrigger Table and Pull-out Miter Gauge Assembly for JTS-600XL

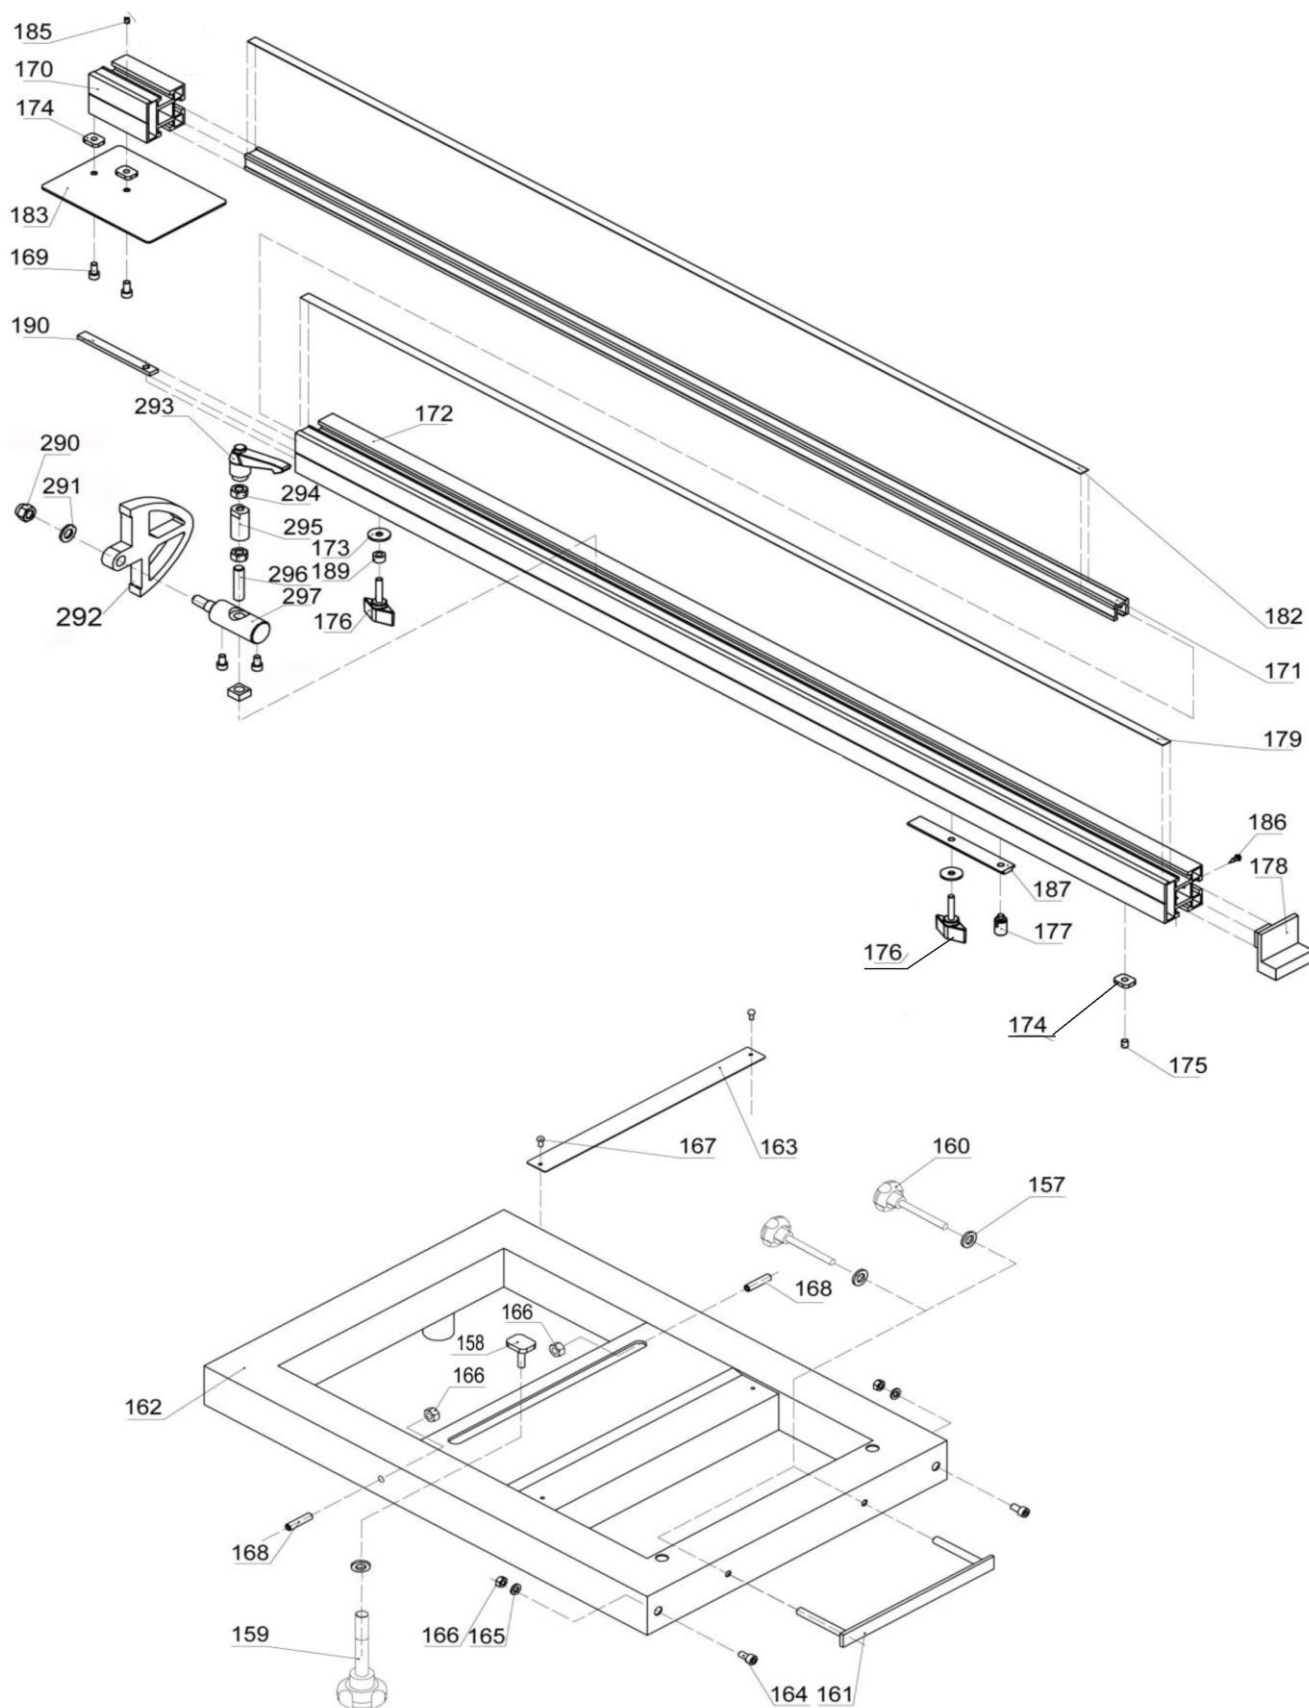

## Outrigger Table and Pull-out Miter Gauge Assembly for JTS-600XL

| Index | Part No.     | Description                       | Size  | Qty. |
|-------|--------------|-----------------------------------|-------|------|
| 157   | JTS600-157   | Washer                            | 6     | 7    |
| 158   | JTS600-158   | Locking block                     |       | 1    |
| 159   | JTS600-159   | Locking handle                    |       | 1    |
| 160   | JTS600-160   | Locking handle                    |       | 2    |
| 161   | JTS600-161   | Clamping plate                    |       | 1    |
| 162   | JTS600-162   | Ext. sliding frame                |       | 1    |
| 163   | JTS600-163   | Angle ruler                       |       | 1    |
| 164   | JTS600-164   | Location screw                    |       | 2    |
| 165   | JTS600-165   | Washer                            | 8     | 2    |
| 166   | JTS600-166   | Hex nut                           | M8    | 4    |
| 167   | JTS600-167   | Revit                             |       | 2    |
| 168   | JTS600-168   | Hex socket nut                    | M8X40 | 2    |
| 169   | JTS600-169   | Hex socket screw                  | M6X12 | 2    |
| 170   | JTS600-170   | Ext. bracket for lengthened       |       | 1    |
| 171   | JTS600-171   | Main bracket for lengthened ruler |       | 1    |
| 172   | JTS600-172   | Fence                             |       | 1    |
| 173   | JTS600-173   | Washer                            | 6     | 2    |
| 174   | JTS600-174   | Square nut                        |       | 4    |
| 175   | JTS600-175   | Hex socket screw                  | M6X10 | 1    |
| 176   | JTS600-176   | Knob                              |       | 3    |
| 177   | JTS600-177   | Pivot                             |       | 1    |
| 178   | JTS600-178   | Fence cover                       |       | 1    |
| 179   | JTS600-179   | Ruler I                           |       | 1    |
| 182   | JTS600-182   | Ruller III                        |       | 1    |
| 183   | JTS600-183   | Location plate                    |       | 1    |
| 185   | JTS600-185   | Hex socket screw                  | M5X6  | 1    |
| 186   | JTS600-186   | Pan head screw                    | ST4X6 | 1    |
| 187   | JTS600-187   | Long plate                        |       | 1    |
| 189   | JTS600-189   | Tube                              |       | 1    |
| 190   | JTS600-190   | Fixing plate                      |       | 1    |
| 290   | JTS600XL-290 | Hex Series Nuts                   | M10   | 1    |
| 291   | JTS600XL-291 | Washer                            |       | 1    |
| 292   | JTS600XL-292 | Baffle plate                      |       | 1    |
| 293   | JTS600XL-293 | Adjust handle                     |       | 1    |
| 294   | JTS600XL-294 | Nut                               | M8    | 2    |
| 295   | JTS600XL-295 | Support for telescopic tube       |       | 1    |
| 296   | JTS600XL-296 | Hex socket screw                  | M8X50 | 1    |
| 297   | JTS600XL-297 | Pivot                             |       | 1    |

## Swing Arm and Rip Fence Assembly for JTS-600XL

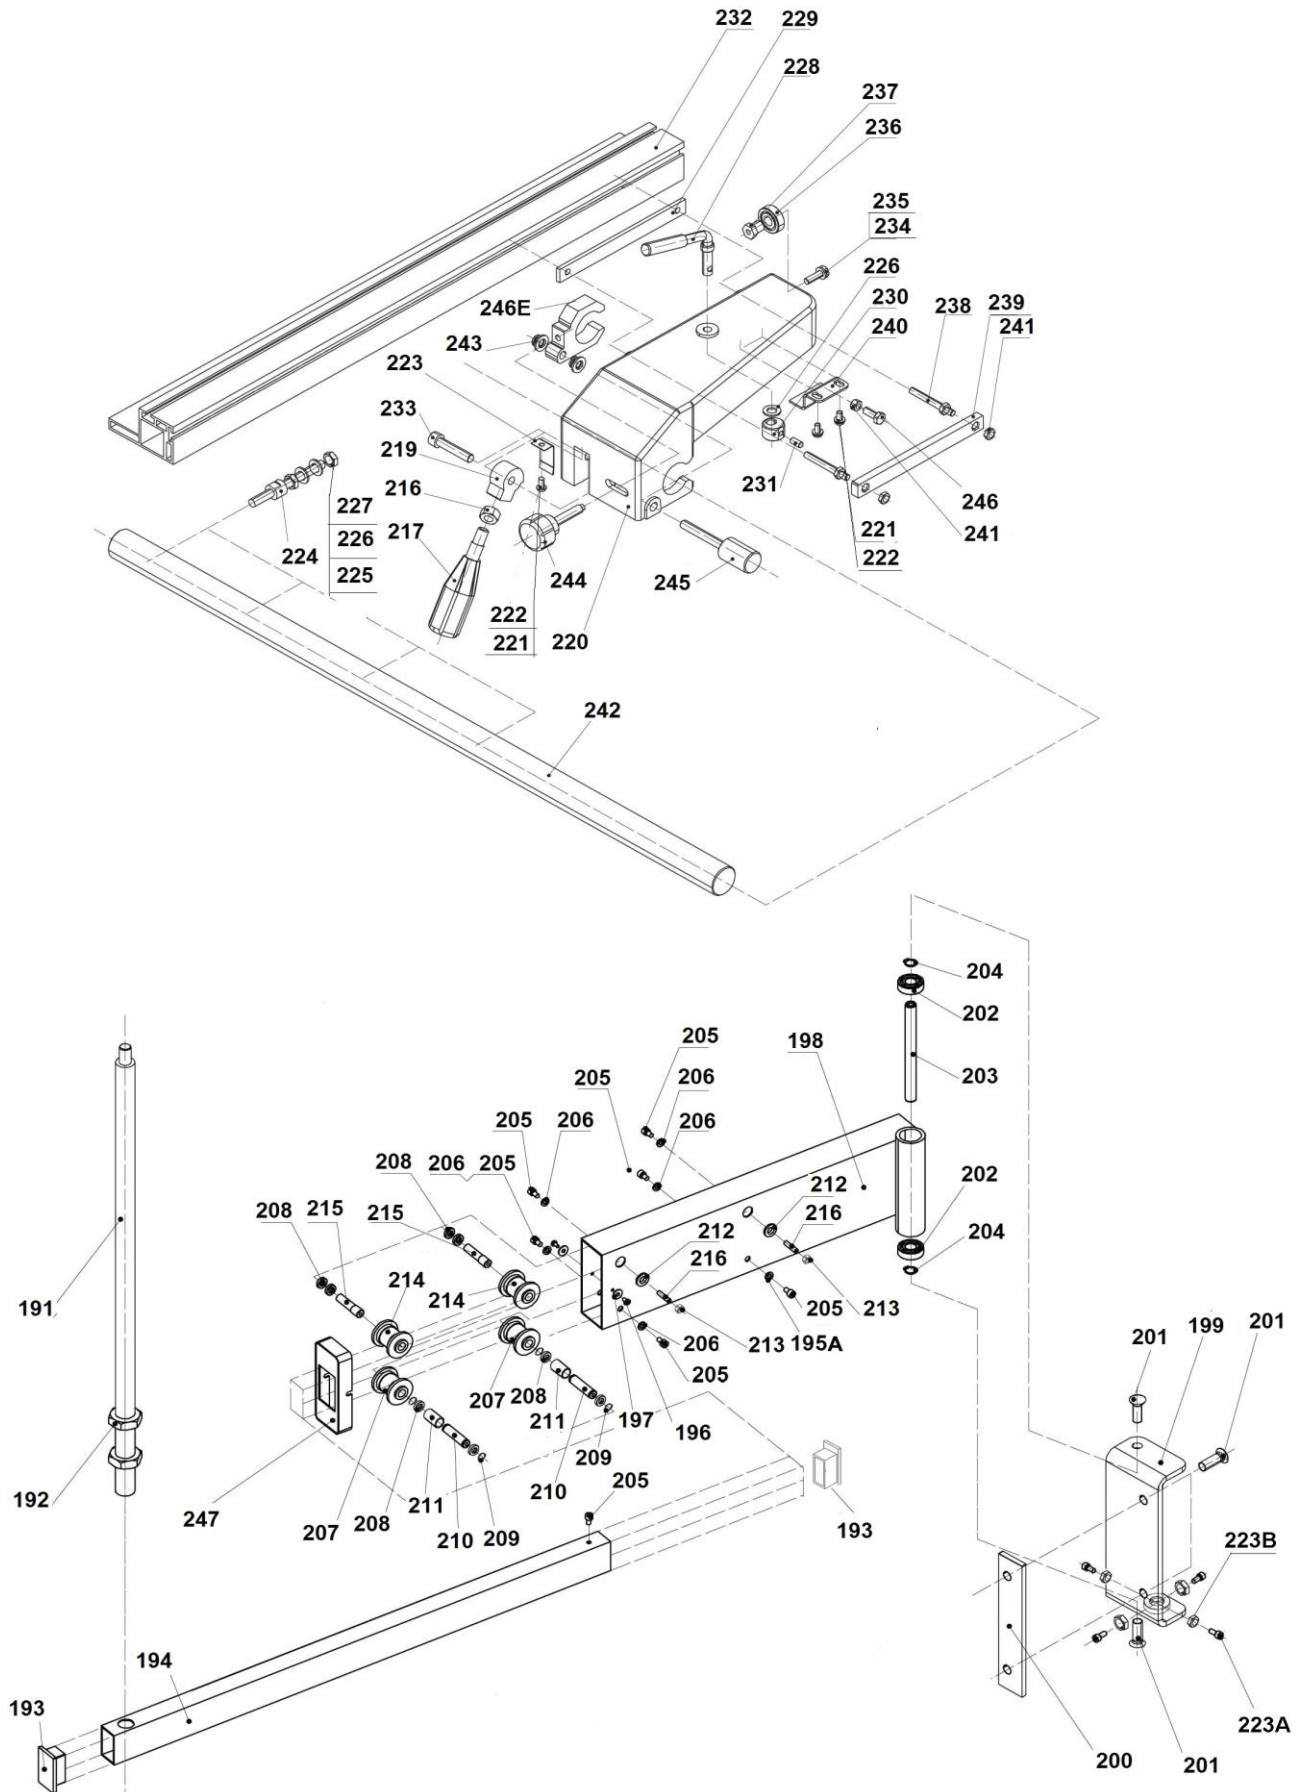

## Swing Arm Assembly for JTS-600XL


| Index | Part No.      | Description                         | Size     | Qty. |
|-------|---------------|-------------------------------------|----------|------|
| 191   | JTS600-191    | Support rod                         |          | 1    |
| 192   | JTS600-192    | Nut                                 | M20      | 2    |
| 193   | JTS600-193    | Tube cap                            |          | 2    |
| 194   | JTS600XL-194  | Telescopic tube                     |          | 1    |
| 195A  | JTS600-195A   | Magnetic steel                      |          | 1    |
| 196   | JTS600-196    | Screw                               | M4X8     | 2    |
| 197   | JTS600-197    | Washer                              | 5        | 2    |
| 198   | JTS600-198    | Support for telescopic tube         |          | 1    |
| 199   | JTS600XL-199  | Fixing bracket                      |          | 1    |
| 200   | JTS600-200    | Connection plate                    |          | 1    |
| 201   | JTS600-201    | Hex socket screw                    | M10X25   | 4    |
| 202   | JTS600-202    | Bearing                             | 6202-RZ  | 2    |
| 203   | JTS600-203    | Shaft                               |          | 1    |
| 204   | JTS600-204    | Clip ring                           | 15       | 2    |
| 205   | JTS600-205    | Screw                               | M6X10    | 7    |
| 206   | JTS600-206    | Washer                              | M6       | 5    |
| 207   | JTS600-207    | Lower wheel                         |          | 2    |
| 208   | JTS600-208    | Bearing                             | 61801-RZ | 8    |
| 209   | JTS600-209    | Clip ring                           | M12      | 4    |
| 210   | JTS600-210    | Shaft                               |          | 2    |
| 211   | JTS600-211    | Tube                                |          | 2    |
| 212   | JTS600-212    | Outside baffle                      |          | 2    |
| 213   | JTS600-213    | Nut                                 | M6       | 2    |
| 214   | JTS600-214    | Upper wheel                         |          | 2    |
| 215   | JTS600-215    | Eccentric shaft                     |          | 2    |
| 216   | JTS600-216    | Hex socket screw                    | M6X25    | 2    |
| 217   | JTS600-217    | Locking handle                      |          | 1    |
| 218   | JTS600-218    | Nut                                 | M10      | 1    |
| 219   | JTS600-219    | Cam                                 |          | 1    |
| 219A  | JTS600-219A   | Cam & handle assembly(#217,Thu 219) |          | 1    |
| 223A  | JTS600XL-233A | Hex socket screw                    | M8X25    | 4    |
| 223B  | JTS600XL-233B | Nut                                 | M8       | 4    |

## Rip Fence Assembly for JTS-600XL

| Index | Part No.    | Description         | Size    | Qty. |
|-------|-------------|---------------------|---------|------|
| 220   | JTS600-220  | Rip fence bracket   |         | 1    |
| 221   | JTS600-221  | Screw               | M5X8    | 3    |
| 222   | JTS600-222  | Washer              | 5       | 3    |
| 223   | JTS600-223  | Clip spring         |         | 1    |
| 224   | JTS600-224  | Stud                |         | 4    |
| 225   | JTS600-225  | Nut                 | M8      | 4    |
| 226   | JTS600-226  | Washer              | 8       | 9    |
| 227   | JTS600-227  | Nut                 | M8      | 4    |
| 228   | JTS600-228  | Handle              |         | 1    |
| 229   | JTS600-229  | Locking plate I     |         | 1    |
| 230   | JTS600-230  | Locking cam wheel   |         | 1    |
| 231   | JTS600-231  | Hex socket screw    | M8X18   | 1    |
| 232   | JTS600-232  | L-shape rip fence   |         | 1    |
| 233   | JTS600-233  | Hex socket screw    | M8X40   | 1    |
| 234   | JTS600-234  | Hex screw           | M6X20   | 1    |
| 235   | JTS600-235  | Washer              | 6       | 1    |
| 236   | JTS600-236  | Bearing             | 6000-RZ | 1    |
| 237   | JTS600-237  | Bearing bracket     |         | 1    |
| 238   | JTS600-238  | Locking screw       |         | 2    |
| 239   | JTS600-239  | Locking plate II    |         | 1    |
| 240   | JTS600-240  | Support plate       |         | 1    |
| 241   | JTS600-241  | Hex nut             | M6      | 5    |
| 242   | JTS600-242  | Fence bracket rail  |         | 1    |
| 243   | JTS600-243  | Self locking nut    | M8      | 2    |
| 244   | JTS600-244  | Star locking handle |         | 1    |
| 245   | JTS600-245  | Micro adjust handle |         | 1    |
| 246   | JTS600-246  | Hex screw           | M6X16   | 1    |
| 246E  | JTS600-246E | Clamping bracket    |         | 1    |
| 247   | JTS600-247  | Insert, Swing Arm   |         | 1    |

## Miter Gauge Assembly for JTS-600XL-----Optional Accessory

Stock Number: 10000073

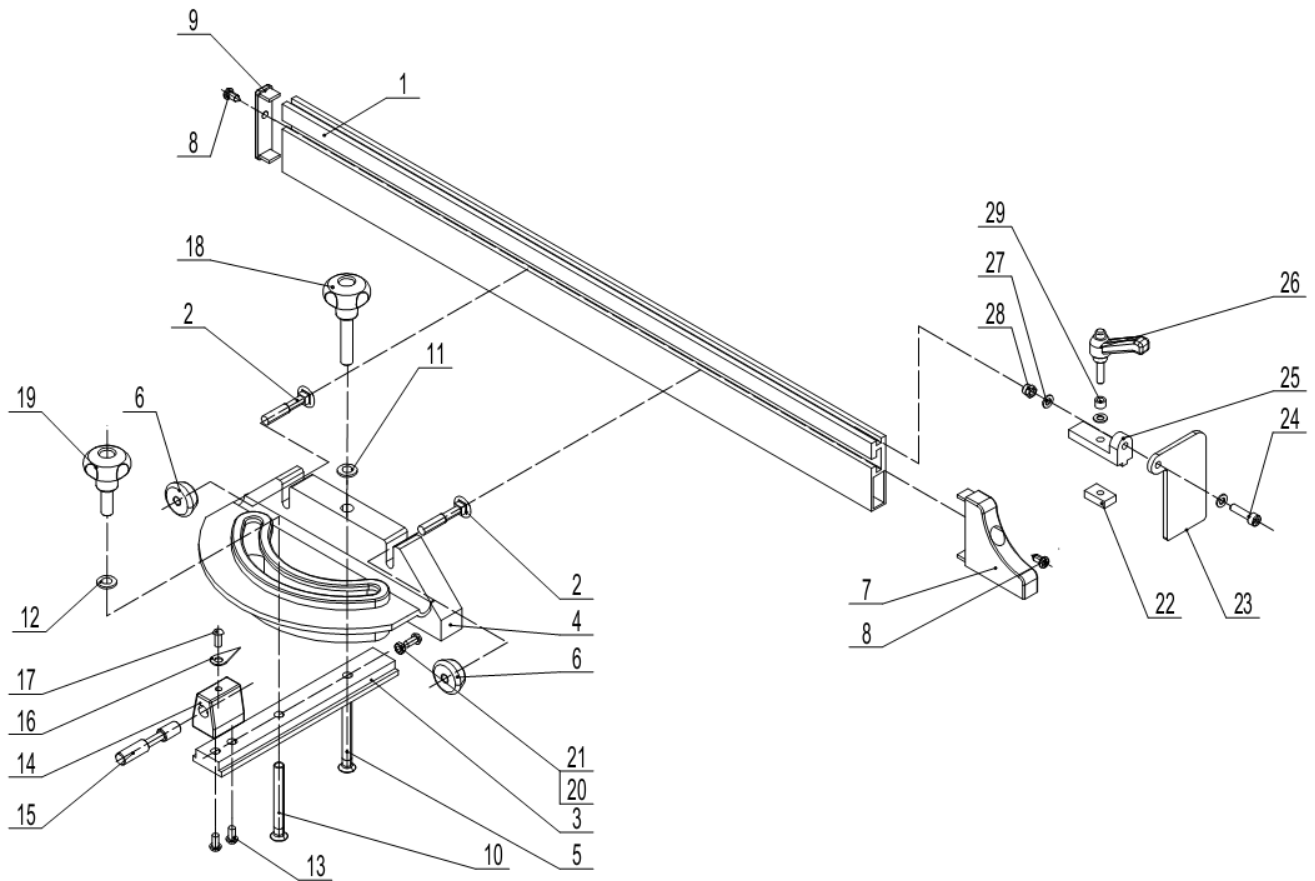

## Mitre Gauge Assembly for JTS-600XL-----Optional Accessory

**Stock Number: 10000073**

| <b>Index</b> | <b>Part No.</b> | <b>Description</b>        | <b>Size</b> | <b>Qty.</b> |
|--------------|-----------------|---------------------------|-------------|-------------|
| 1            | JTS600XL-MG1    | Mitre fence profil        |             | 1           |
| 2            | JTS600XL-MG2    | Carriage bolt             | M6X30       | 2           |
| 3            | JTS600XL-MG3    | T-Bar                     |             | 1           |
| 4            | JTS600XL-MG4    | Mitre Gauge               |             | 1           |
| 5            | JTS600XL-MG5    | Pan Head Sreew            | M6x70       | 1           |
| 6            | JTS600XL-MG6    | Knurled Nut               |             | 2           |
| 7            | JTS600XL-MG7    | Right Cover for fip fence |             | 1           |
| 8            | JTS600XL-MG8    | Self Tapping Screw        |             | 2           |
| 9            | JTS600XL-MG9    | Left Cover for fip Fence  |             | 1           |
| 10           | JTS600XL-MG10   | Pan Head Screw            | M6X50       | 1           |
| 11           | JTS600XL-MG11   | Washer                    | 6           | 1           |
| 12           | JTS600XL-MG12   | Washer                    | 6           | 2           |
| 13           | JTS600XL-MG13   | Sreew                     | M4x12       | 2           |
| 14           | JTS600XL-MG14   | Indicator Bracket         |             | 1           |
| 15           | JTS600XL-MG15   | Location Pin              |             | 1           |
| 16           | JTS600XL-MG16   | Indicator                 |             | 1           |
| 17           | JTS600XL-MG17   | Screw                     | M4x8        | 1           |
| 18           | JTS600XL-MG18   | Handle                    |             | 1           |
| 19           | JTS600XL-MG19   | Handle                    |             | 1           |
| 20           | JTS600XL-MG20   | Nut                       | M4          | 3           |
| 21           | JTS600XL-MG21   | Screw                     | M4x16       | 3           |
| 22           | JTS600XL-MG22   | Square Nut                |             | 1           |
| 23           | JTS600XL-MG23   | Stoper                    |             | 1           |
| 24           | JTS600XL-MG24   | Set Screw                 | M5x20       | 1           |
| 25           | JTS600XL-MG25   | Stoper Breaket            |             | 1           |
| 26           | JTS600XL-MG26   | Locking Handle            |             | 1           |
| 27           | JTS600XL-MG27   | Washer                    | 5           | 3           |
| 28           | JTS600XL-MG28   | Nylon Nut                 | M5          | 1           |
| 29           | JTS600XL-MG29   | Sleeve                    |             | 1           |


# JTS-600XL

## 10000070XLM

|      | colour of strands | Litzenfarben | couleur des cordons |
|------|-------------------|--------------|---------------------|
| BK   | black             | schwarz      | noir                |
| WH   | white             | weiß         | blanc               |
| BU   | blue              | blau         | bleu                |
| YE   | yellow            | gelb         | jaune               |
| RD   | red               | rot          | rouge               |
| BN   | brown             | braun        | brun                |
| GY   | grey              | grau         | gris                |
| GNYE | green-yellow      | grün-gelb    | vert-jaune          |
| OG   | orange            | orange       | orange              |
| VT   | violet            | violett      | violet              |

|    | meaning of symbol | Bedeutung der Zeichen  | interprétation        |
|----|-------------------|------------------------|-----------------------|
| M  | motor             | Motor                  | moteur                |
| S  | switch            | Schalter               | interrupteur          |
| C  | condenser         | Kondensator            | condensateur          |
| OL | overload cut-off  | Überlastschuttschalter | déclencheur surcharge |
| LS | Limit switch      | Positionsendschalter   | micro                 |

~230V, 50Hz

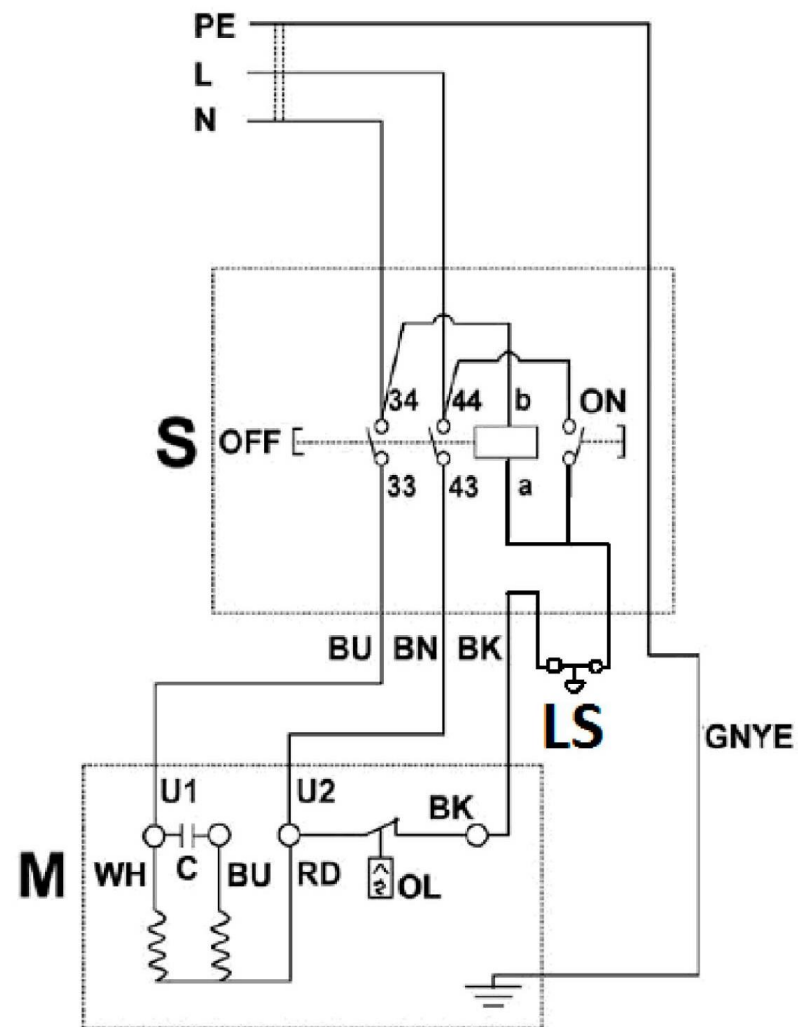



# JTS-600XL

10000070XLT

|      | colour of strands | Litzenfarben | couleur des cordons |
|------|-------------------|--------------|---------------------|
| BK   | black             | schwarz      | noir                |
| WH   | white             | weiß         | blanc               |
| BU   | blue              | blau         | bleu                |
| YE   | yellow            | gelb         | jaune               |
| RD   | red               | rot          | rouge               |
| BN   | brown             | braun        | brun                |
| GY   | grey              | grau         | gris                |
| GNYE | green-yellow      | grün-gelb    | vert-jaune          |
| OG   | orange            | orange       | orange              |
| VT   | violet            | violett      | violet              |

|    | meaning of symbol | Bedeutung der Zeichen  | interprétation        |
|----|-------------------|------------------------|-----------------------|
| M  | motor             | Motor                  | moteur                |
| S  | switch            | Schalter               | interrupteur          |
| C  | condenser         | Kondensator            | condensateur          |
| OL | overload cut-off  | Überlastschuttschalter | déclencheur surcharge |
| LS | Limit switch      | Positionsendschalter   | micro                 |

3~400V, 50Hz

