



JTSS-1600

Panel Saw

10000044M ~230V 50Hz

10000044T 3~400V 50Hz

PARTS LIST



TOOL FRANCE S.A.S


9 Rue des Pyrénées, 91090 LISSES, France

www.promac.fr

P-10000044M/T

2021-12


Parts Breakdown For JTSS-1600 Panel Saw -----Part A

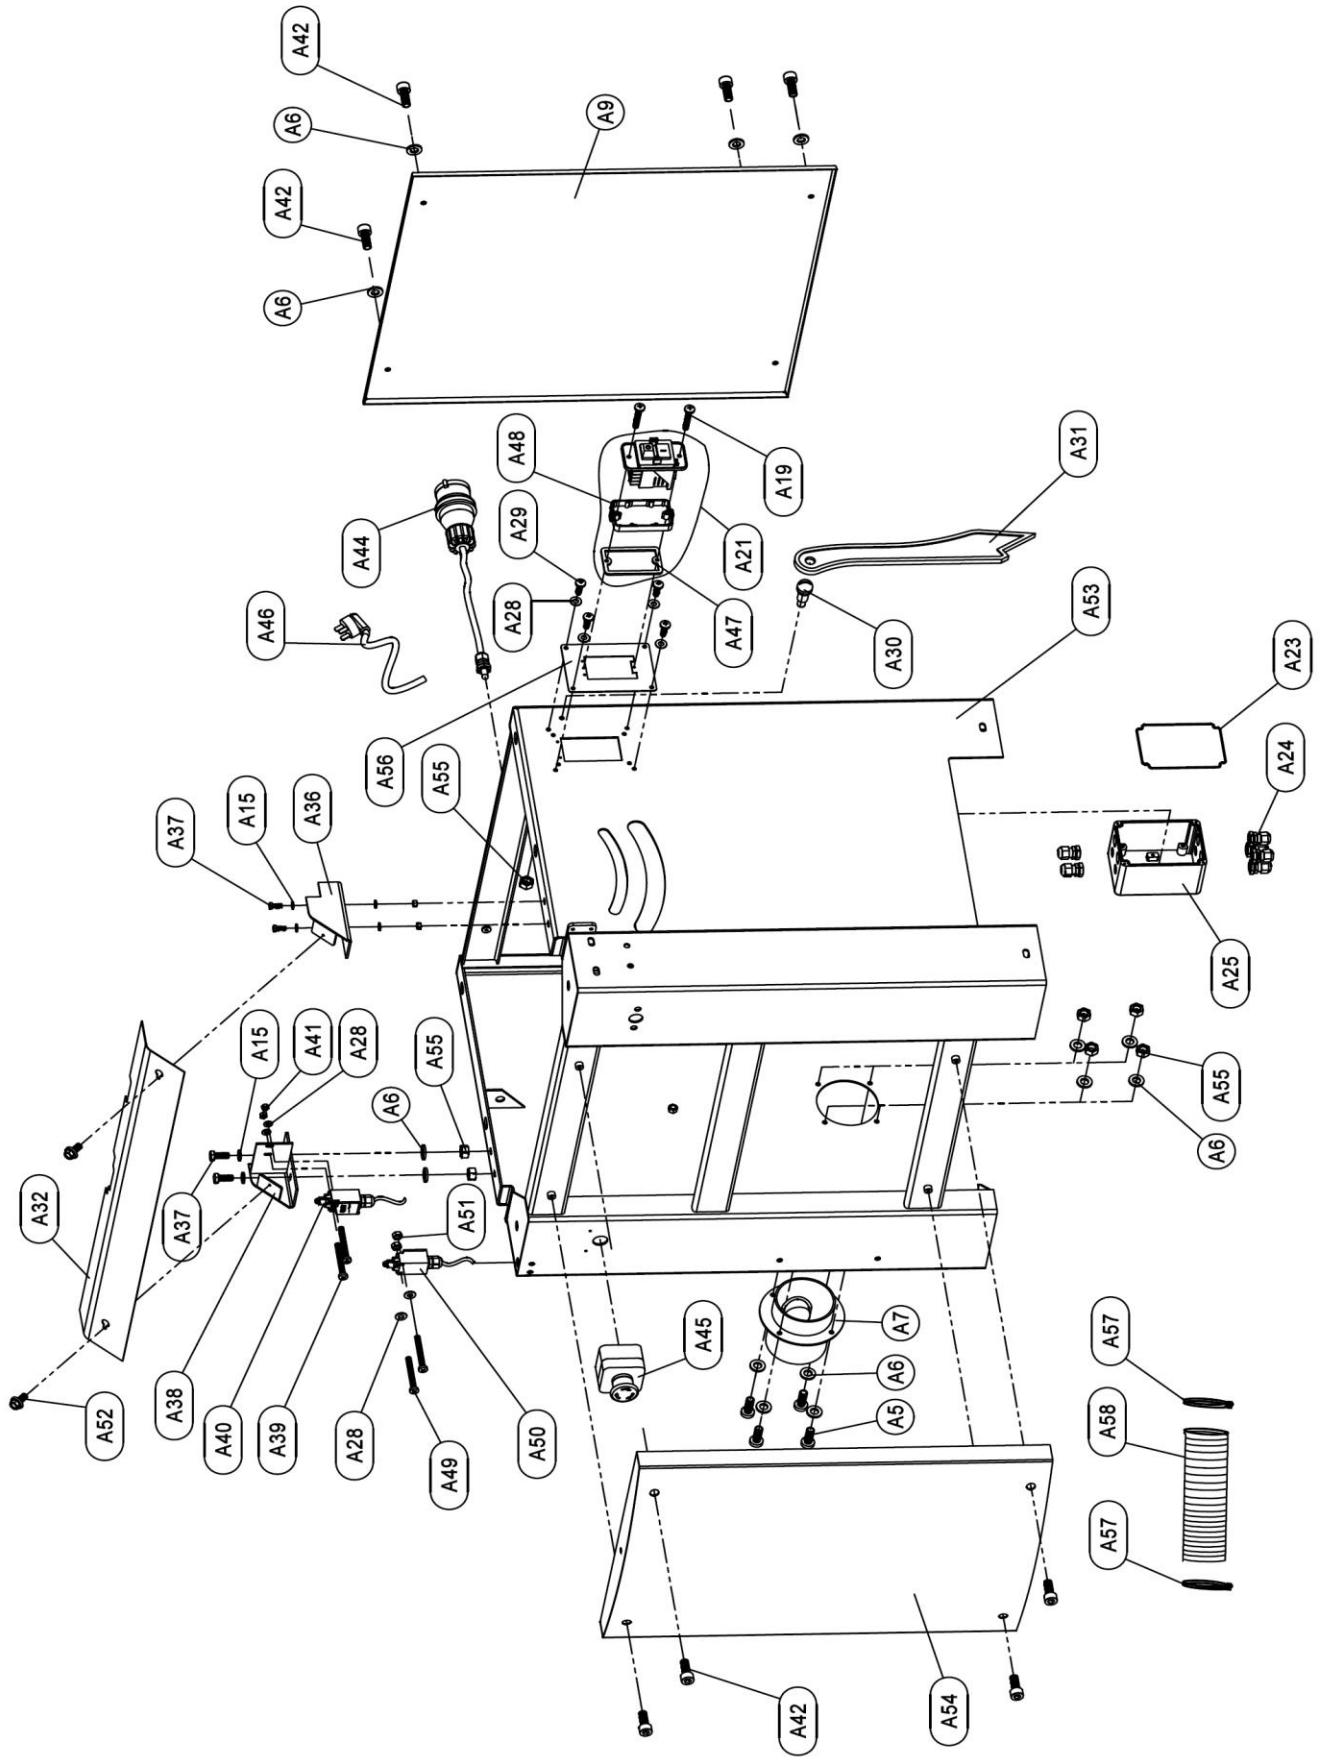

Parts List for JTSS-1600 Panel Saw ----- Part A

Index No.	Part No.	Description	Size	Qty.
A5	JTSS1600-A05	Pan Head Screw	M6x16	4
A6	JTSS1600-A06	Flat Washer	6mm	20
A7	JTSS1600-A07	Dust Port	Ø100mm	1
A9	JTSS1600-A09	Right Panel, Saw Base		1
A15	JTSS1600-A15	Washer	6mm	8
A19	JTSS1600-A19	Pan Head Screw	M4x25	2
A21	JTSS1600-A21T	Main Switch 400V	400V 50Hz	1
	JTSS1600-A21M	Main Switch 230V	230V 50Hz	1
A23	JTSS1600-A23	O-Ring		1
A24	JTSS1600-A24	Strain Relief		7
A25	JTSS1600-A25	Switch Box		1
A28	JTSS1600-A28	Washer 4mm	4mm	8
A29	JTSS1600-A29	Self-Tapping Screw	ST4.2x13	4
A30	JTSS1600-A30	Old Screw, Push Stick		1
A31	JTSS1600-A31	Push Stick		1
A32	JTSS1600-A32	Internal Guard		1
A36	JTSS1600-A36	Angle Bracket (Right)		1
A37	JTSS1600-A37	Hex Cap Screw	M6x16	4
A38	JTSS1600-A38	Angle Bracket (Left)		1
A39	JTSS1600-A39	Hex Head Screw	M4x35	2
A40	JTSS1600-A40	Limit Switch A (Normally open switch)	QKS7	1
A41	JTSS1600-A41	Hex Nut M4	M4	4
A42	JTSS1600-A42	Socket Head Cap Screw	M6x16	8
A44	JTSS1600-A44T	Plug 400V P551	3~400V 50Hz	1
	JTSS1600-A44M	Plug 230V P331	~ 230V 50Hz	1
A45	JTSS1600-A45	E-Stop Switch		1
A46	JTSS1600-A46M	Cord and Plug	~230V 50Hz	1
A47	JTSS1600-A47	Rubber Washer A (Switch KJD11)		1
A48	JTSS1600-A48	Rubber Washer B (Switch KJD11)		1
A49	JTSS1600-A49	Pan Head Screw	M4x35	4
A50	JTSS1600-A50	Limit Switch B (Normally closed switch)	QKS7	1
A51	JTSS1600-A51	Hex Nut	M4	2
A52	JTSS1600-A52	Hex Head Screw with Washer	M4x10	2
A53	JTSS1600-A53	Saw Base Frame		1
A54	JTSS1600-A54	Frame Door		1
A55	JTSS1600-A55	Hex Nut	M6	9
A56	JTSS1600-A56	Switch Plate		1
A57	JTSS1600-C130	Clamp	JDΦ90- Φ110	2
A58	JTSS1600-C131	Tube	Φ100x800mm	1
	JET-138R900	JET 3D Logo(not Shown)	138x57R900	1
	JTSS1600-001T	ID Label(not Shown)	400V 50Hz	1
	JTSS1600-001M	ID Label(not Shown)	230V 50Hz	1
	JTSS1600-C47T	Motor Label(not Shown)	400V 50Hz	1
	JTSS1600-C47M	Motor Label(not Shown)	230V 50Hz	1
	JTSS1600-WR	Warning Label(not Shown)		1

Parts Breakdown for JTSS-1600 Panel Saw -----Part B

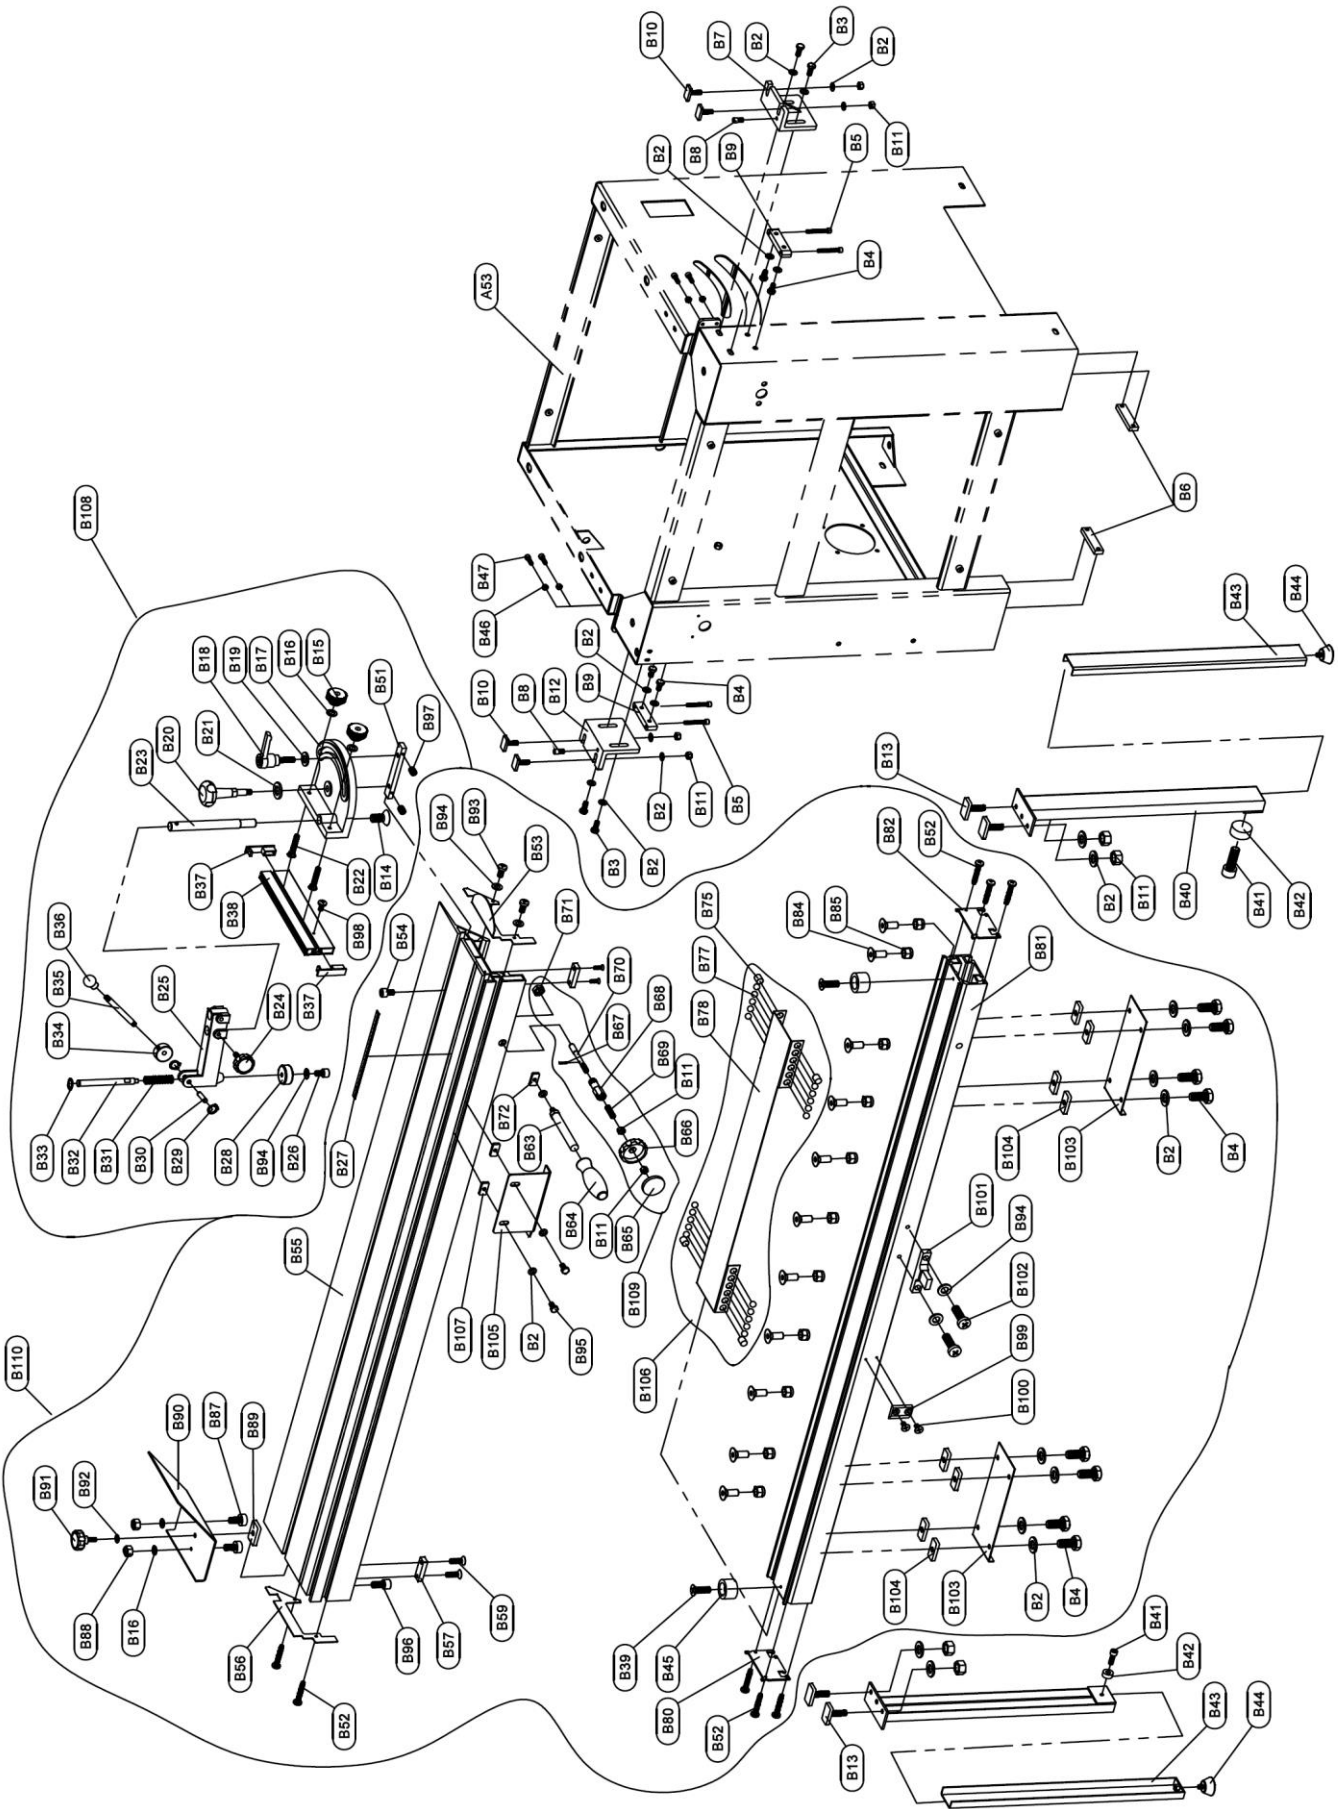

Parts List for JTSS-1600 Panel Saw ----- Part B


Index No.	Part No.	Description	Size	Qty.
B2	JTSS1600-B02	Flat Washer	8mm	28
B3	JTSS1600-B03	Hex Screw	M8x20	4
B4	JTSS1600-B04	Hex Screw	M8x16	14
B5	JTSS1600-B05	Socket Head Cap Screw	M6x45	4
B6	JTSS1600-B06	T- Base, Adjust		2
B7	JTSS1600-B07	Bracket-A, Sliding Carrier		1
B8	JTSS1600-B08	Socket Head Cap Screw	M8x12	2
B9	JTSS1600-B09	T- Base, Adjust		2
B10	JTSS1600-B10	T- Nut, Sliding Carrier		4
B11	JTSS1600-B11	Hex Nut M8	M8	10
B12	JTSS1600-B12	Bracket-B, Sliding Carrier		1
B13	JTSS1600-B13	T- Nut, Sliding Carrier		4
B14	JTSS1600-B14	Sunk Head Screw	M8x16	1
B15	JTSS1600-B15	Wing Nut		2
B16	JTSS1600-B16	Washer	6mm	4
B17	JTSS1600-B17	Mitre Gauge, Hold Down		1
B18	JTSS1600-B18	Ratchet Lever		1
B19	JTSS1600-B19	Flat Washer 10mm	10mm	1
B20	JTSS1600-B20	Star - Type Lock Handle		1
B21	JTSS1600-B21	Flat Washer	12mm	1
B22	JTSS1600-B22	Carriage Bolt	M6x30	2
B23	JTSS1600-B23	Stud, Hold Down		1
B24	JTSS1600-B24	Star - Type Knob, Hold Down		1
B25	JTSS1600-B25	Arm, Hold Down		1
B26	JTSS1600-B26	Socket Head Cap Screw	M5x8	1
B27	JTSS1600-B27	Scale, Sliding Table		1
B28	JTSS1600-B28	Disc, Hold Down		1
B29	JTSS1600-B29	Circle Ring	8mm	2
B30	JTSS1600-B30	Pin, Hold Down		1
B31	JTSS1600-B31	Spring, Hold Down		1
B32	JTSS1600-B32	Stud, Hold Down		1
B33	JTSS1600-B33	Circle Ring	12mm	1
B34	JTSS1600-B34	Eccentric, Hold Down		1
B35	JTSS1600-B35	Handle, Hold Down		1
B36	JTSS1600-B36	Handle Knob, Hold Down		1
B37	JTSS1600-B37	End Cap, Fence		2
B38	JTSS1600-B38	Fence, Mitre Gauge		1
B39	JTSS1600-B39	Flat type Screw	M6x18	6
B40	JTSS1600-B40	Upper Support		2
B41	JTSS1600-B41	Socket Head Cap Screw	M8x25	2
B42	JTSS1600-B42	Disc, Insert		2
B43	JTSS1600-B43	Lower Support		2
B44	JTSS1600-B44	Adjustable Disc		2
B45	JTSS1600-B45	Stop Base		2
B46	JTSS1600-B46	Flat Washer	6mm	6
B47	JTSS1600-B47	Socket Head Cap Screw	M6x20	4
B51	JTSS1600-B51	Screw Guide		1
B52	JTSS1600-B52	Taping Screw	ST4.2x25	8
B53	JTSS1600-B53	End Cap, Sliding Panel		1
B54	JTSS1600-B54	Socket Head Cap Screw	M5x8	1
B55	JTSS1600-B55	Sliding Panel Set		1
B56	JTSS1600-B56	End Cap, Sliding Panel		1
B57	JTSS1600-B57	Stop Plate		2
B59	JTSS1600-B59	Sunk Head Screw	M6x18	4

Parts List for JTSS-1600 Panel Saw ----- Part B

Index No.	Part No.	Description	Size	Qty.
B63	JTSS1600-B63	Push Handle		1
B64	JTSS1600-B64	Bush, Push Handle		1
B65	JTSS1600-B65	End Cap, Knob		1
B66	JTSS1600-B66	Star - Type Knob, Lock Pin		1
B67	JTSS1600-B67	Roll Pin	3x16	1
B68	JTSS1600-B68	Bush, Lock Pin		1
B69	JTSS1600-B69	Spring, Lock Pin		1
B70	JTSS1600-B70	Lock Pin		1
B71	JTSS1600-B71	Hex Nut	M14	1
B72	JTSS1600-B72	Lock Guide		1
B75	JTSS1600-B75	Insert, Ball Frame		4
B77	JTSS1600-B77	Ball	1/2"	20
B78	JTSS1600-B78	Ball Frame		1
B80	JTSS1600-B80	End Cap, Sliding Rail		1
B81	JTSS1600-B81	Sliding Table Rail		1
B82	JTSS1600-B82	End Cap, Sliding Rail		1
B84	JTSS1600-B84	Sunk Head Screw	M8x20	11
B85	JTSS1600-B85	Lock Nut	M8	11
B87	JTSS1600-B87	Thread Stud		2
B88	JTSS1600-B88	Hex Nut	M6	2
B89	JTSS1600-B89	T- Block		1
B90	JTSS1600-B90	Edge Shoe		1
B91	JTSS1600-B91	Star type Screw	M8x20	1
B92	JTSS1600-B92	Flat Washer	8mm	16
B93	JTSS1600-B93	Pan Head Cap Screw	M5x10	2
B94	JTSS1600-B94	Flat Washer	5mm	5
B95	JTSS1600-B95	Hex Bolt	M8x16	10
B96	JTSS1600-B96	Socket Head Cap Screw	M8x16	1
B97	JTSS1600-B97	Set Screw	M6x8	2
B98	JTSS1600-B98	Pan Head Screw	M4x8	1
B99	JTSS1600-B99	Limit Stop Block		1
B100	JTSS1600-B100	Flat type Screw	M4x8	2
B101	JTSS1600-B101	Stop Base		1
B102	JTSS1600-B102	Pan Head Screw	M5x16	2
B103	JTSS1600-B103	Plate		2
B104	JTSS1600-B104	Limit Block A		8
B105	JTSS1600-B105	Limit Block B		1
B106	JTSS1600-B106	Ball Frame Assembly (#B75, #B77, #B78)		1
B107	JTSS1600-B107	Limit Stop Block		2
B108	JTSS1600-B108	Mitre Gauge Assembly (#B14,thru #B39, #B51.#97)		1
B109	JTSS1600-B109	Handle Assembly (#B65,thru #B71)		1
B110	JTSS1600-B110	Sliding Table Assembly (#B52,thru #B104, #B106)		1

This diagram is an exploded view of a complex mechanical assembly, likely a vehicle's rear suspension or steering system. It features 128 individual components, each labeled with a callout number from C1 to C128. The components are arranged in a hierarchical manner, showing their relative positions and how they fit together. Key parts include a large housing (C138), a central shaft assembly (C1, C3, C5, C6, C63, C66, C68, C69, C71, C72, C76, C77, C78, C79, C80, C81, C82, C83, C84, C85, C86, C87, C88, C89, C90, C91, C92, C93, C94, C95, C96, C97, C98, C99, C100, C101, C102, C103, C104, C105, C106, C107, C108, C109, C110, C111, C112, C113, C114, C115, C116, C117, C118, C119, C120, C121, C122, C123, C124, C125, C126, C127, C128), a central spring (C121), a lower arm assembly (C129, C130, C131, C132, C133, C134, C135, C136, C137, C138, C139, C140, C141, C142, C143, C144, C145, C146, C147, C148, C149, C150, C151, C152, C153, C154, C155, C156, C157, C158, C159, C160, C161, C162, C163, C164, C165, C166, C167, C168, C169, C170, C171, C172, C173, C174, C175, C176, C177, C178, C179, C180, C181, C182, C183, C184, C185, C186, C187, C188, C189, C190, C191, C192, C193, C194, C195, C196, C197, C198, C199, C200, C201, C202, C203, C204, C205, C206, C207, C208, C209, C210, C211, C212, C213, C214, C215, C216, C217, C218, C219, C220, C221, C222, C223, C224, C225, C226, C227, C228, C229, C230, C231, C232, C233, C234, C235, C236, C237, C238, C239, C240, C241, C242, C243, C244, C245, C246, C247, C248, C249, C250, C251, C252, C253, C254, C255, C256, C257, C258, C259, C260, C261, C262, C263, C264, C265, C266, C267, C268, C269, C270, C271, C272, C273, C274, C275, C276, C277, C278, C279, C280, C281, C282, C283, C284, C285, C286, C287, C288, C289, C290, C291, C292, C293, C294, C295, C296, C297, C298, C299, C300, C301, C302, C303, C304, C305, C306, C307, C308, C309, C310, C311, C312, C313, C314, C315, C316, C317, C318, C319, C320, C321, C322, C323, C324, C325, C326, C327, C328, C329, C330, C331, C332, C333, C334, C335, C336, C337, C338, C339, C340, C341, C342, C343, C344, C345, C346, C347, C348, C349, C350, C351, C352, C353, C354, C355, C356, C357, C358, C359, C360, C361, C362, C363, C364, C365, C366, C367, C368, C369, C370, C371, C372, C373, C374, C375, C376, C377, C378, C379, C380, C381, C382, C383, C384, C385, C386, C387, C388, C389, C390, C391, C392, C393, C394, C395, C396, C397, C398, C399, C400, C401, C402, C403, C404, C405, C406, C407, C408, C409, C410, C411, C412, C413, C414, C415, C416, C417, C418, C419, C420, C421, C422, C423, C424, C425, C426, C427, C428, C429, C430, C431, C432, C433, C434, C435, C436, C437, C438, C439, C440, C441, C442, C443, C444, C445, C446, C447, C448, C449, C450, C451, C452, C453, C454, C455, C456, C457, C458, C459, C460, C461, C462, C463, C464, C465, C466, C467, C468, C469, C470, C471, C472, C473, C474, C475, C476, C477, C478, C479, C480, C481, C482, C483, C484, C485, C486, C487, C488, C489, C490, C491, C492, C493, C494, C495, C496, C497, C498, C499, C500, C501, C502, C503, C504, C505, C506, C507, C508, C509, C510, C511, C512, C513, C514, C515, C516, C517, C518, C519, C520, C521, C522, C523, C524, C525, C526, C527, C528, C529, C530, C531, C532, C533, C534, C535, C536, C537, C538, C539, C540, C541, C542, C543, C544, C545, C546, C547, C548, C549, C550, C551, C552, C553, C554, C555, C556, C557, C558, C559, C560, C561, C562, C563, C564, C565, C566, C567, C568, C569, C570, C571, C572, C573, C574, C575, C576, C577, C578, C579, C580, C581, C582, C583, C584, C585, C586, C587, C588, C589, C590, C591, C592, C593, C594, C595, C596, C597, C598, C599, C600, C601, C602, C603, C604, C605, C606, C607, C608, C609, C610, C611, C612, C613, C614, C615, C616, C617, C618, C619, C620, C621, C622, C623, C624, C625, C626, C627, C628, C629, C630, C631, C632, C633, C634, C635, C636, C637, C638, C639, C640, C641, C642, C643, C644, C645, C646, C647, C648, C649, C650, C651, C652, C653, C654, C655, C656, C657, C658, C659, C660, C661, C662, C663, C664, C665, C666, C667, C668, C669, C670, C671, C672, C673, C674, C675, C676, C677, C678, C679, C680, C681, C682, C683, C684, C685, C686, C687, C688, C689, C690, C691, C692, C693, C694, C695, C696, C697, C698, C699, C700, C701, C702, C703, C704, C705, C706, C707, C708, C709, C710, C711, C712, C713, C714, C715, C716, C717, C718, C719, C720, C721, C722, C723, C724, C725, C726, C727, C728, C729, C730, C731, C732, C733, C734, C735, C736, C737, C738, C739, C740, C741, C742, C743, C744, C745, C746, C747, C748, C749, C750, C751, C752, C753, C754, C755, C756, C757, C758, C759, C760, C761, C762, C763, C764, C765, C766, C767, C768, C769, C770, C771, C772, C773, C774, C775, C776, C777, C778, C779, C780, C781, C782, C783, C784, C785, C786, C787, C788, C789, C790, C791, C792, C793, C794, C795, C796, C797, C798, C799, C800, C801, C802, C803, C804, C805, C806, C807, C808, C809, C810, C811, C812, C813, C814, C815, C816, C817, C818, C819, C820, C821, C822, C823, C824, C825, C826, C827, C828, C829, C830, C831, C832, C833, C834, C835, C836, C837, C838, C839, C840, C841, C842, C843, C844, C845, C846, C847, C848, C849, C850, C851, C852, C853, C854, C855, C856, C857, C858, C859, C860, C861, C862, C863, C864, C865, C866, C8

Parts Breakdown for JTSS-1600 Panel Saw -----Part C

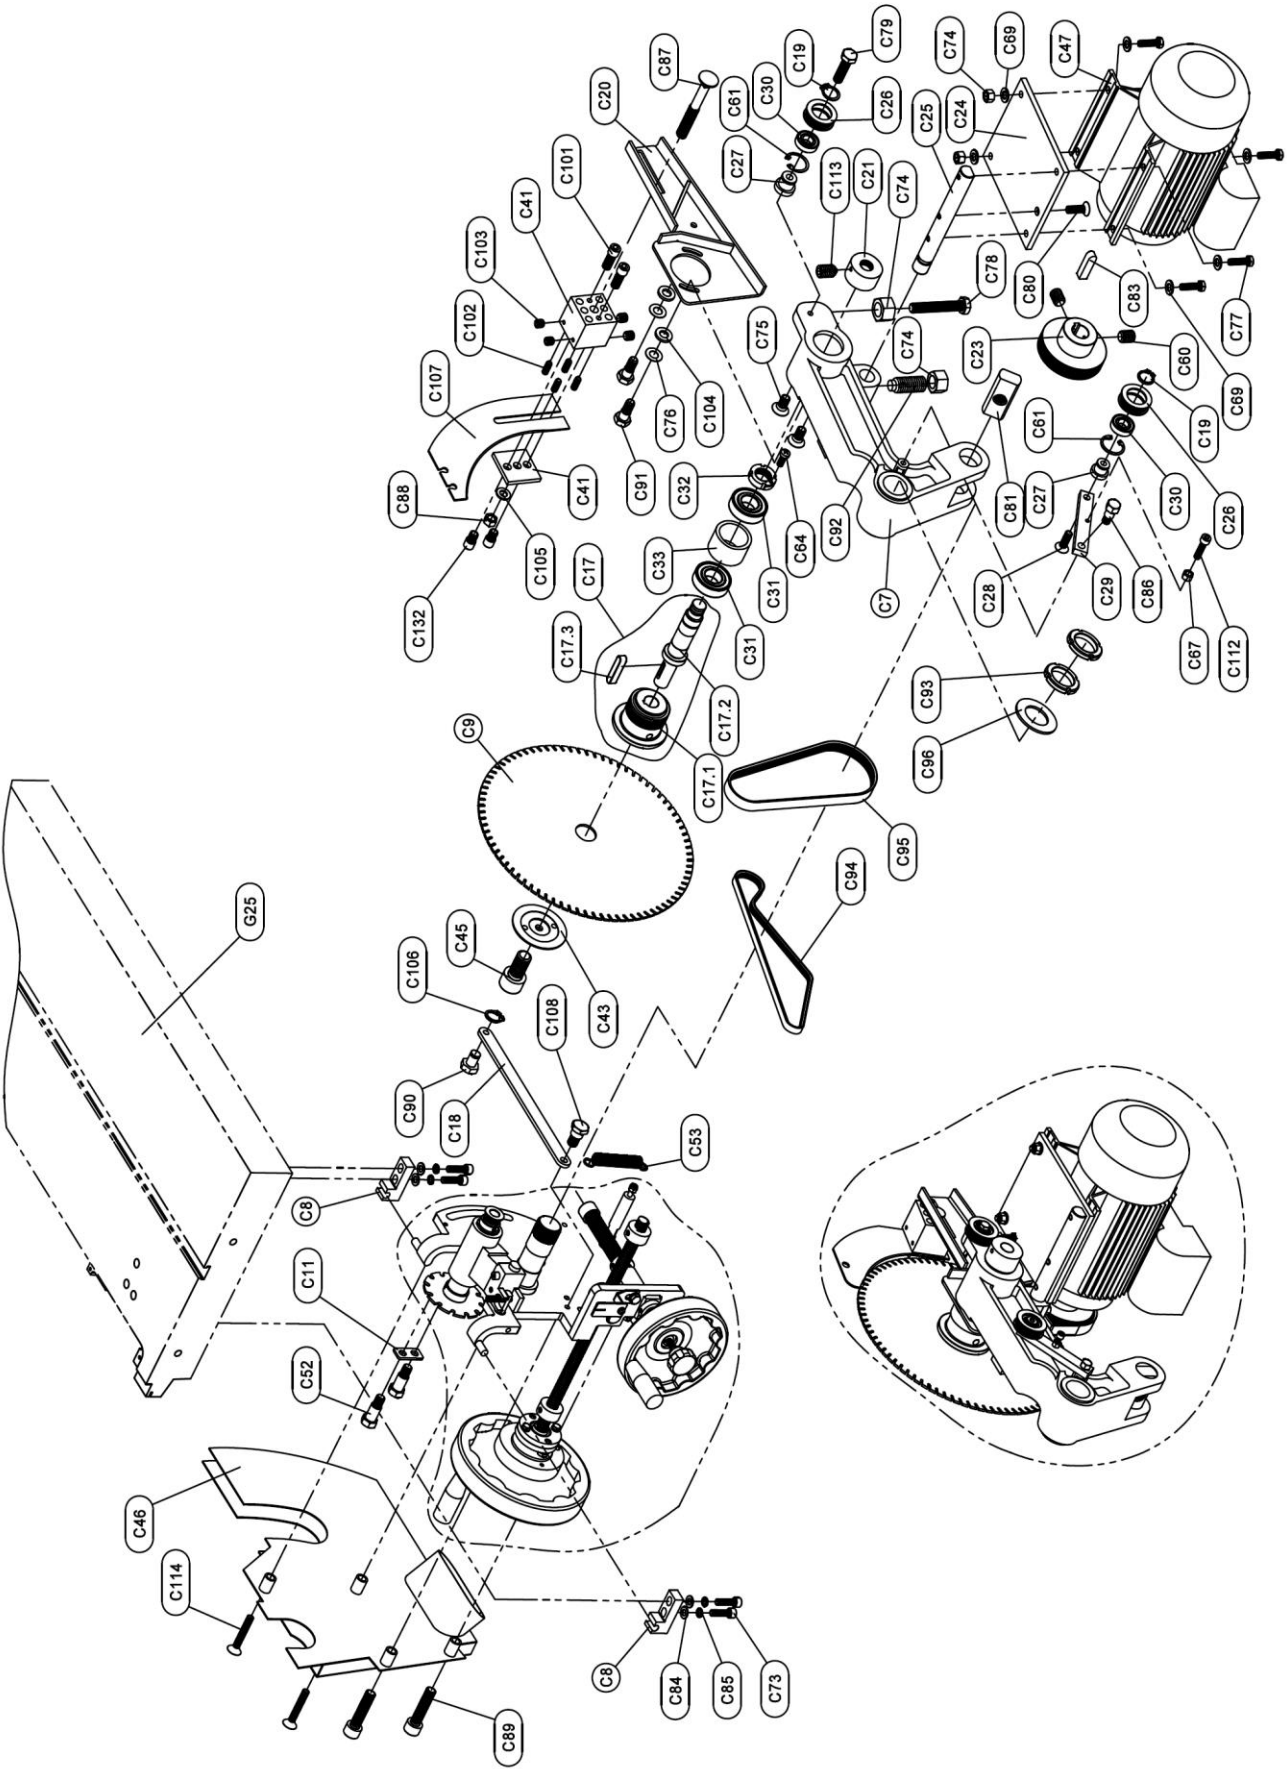

Parts List for JTSS-1600 Panel Saw ----- Part C

Index No.	Part No.	Description	Size	Qty.
C1	JTSS1600-C01	Frame - Blade		1
C2	JTSS1600-C02	Shaft		1
C3	JTSS1600-C03	Main Shaft		1
C4	JTSS1600-C04	Shaft Housing- Scoring Blade		1
C5	JTSS1600-C05	Shaft- Scoring Blade		1
C6	JTSS1600-C06	Pulley - Scoring Blade		1
C7	JTSS1600-C07	Gear House		1
C8	JTSS1600-C08	Rotating Support		2
C9	JTSS1600-C09	Main Blade		1
C10	JTSS1600-C10	Pointer		1
C11	JTSS1600-C11	Slide Piece		1
C12	JTSS1600-C12	Scoring Blade		1
C13	JTSS1600-C13	Bearing House		1
C14	JTSS1600-C14	Screw	M8x10	1
C15	JTSS1600-C15	Adjustment Shaft		1
C16	JTSS1600-C16	Lifting screw		1
C17	JTSS1600-C17	Spindle Assembly(#17.1 Thru #17.3)		1
C17.1	JTSS1600-C17.1	Spindle Pulley		1
C17.2	JTSS1600-C17.2	Spindle Body		1
C17.3	JTSS1600-C17.3	Key	A6x30	1
C18	JTSS1600-C18	Connecting Rod		1
C19	JTSS1600-C19	Circle Ring	C-15	4
C20	JTSS1600-C20	Frame Segment		1
C21	JTSS1600-C21	Pulley		1
C22	JTSS1600-C22	Hex Nut		1
C23	JTSS1600-C23	Pulley - Motor		1
C24	JTSS1600-C24	Motor Base		1
C25	JTSS1600-C25	Shaft		1
C26	JTSS1600-C26	Pulley		2
C27	JTSS1600-C27	Tension Shaft		1
C28	JTSS1600-C28	Sunken Head Screw	M8x25	1
C29	JTSS1600-C29	Tension Rod		1
C30	JTSS1600-C30	Bearing	6002RZ	2
C31	JTSS1600-C31	Bearing	6205RZ	2
C32	JTSS1600-C32	Round Nut	M25x1.5	1
C33	JTSS1600-C33	Spacer		1
C34	JTSS1600-C34	Eccentric Shaft		1
C35	JTSS1600-C35	Circle Nut		1
C36	JTSS1600-C36	Nut		1
C37	JTSS1600-C37	Positioning sleeve		1
C38	JTSS1600-C38	Thread		1
C39	JTSS1600-C39	Shaft, Spring		1
C40	JTSS1600-C40	Riving Knife Support		1
C41	JTSS1600-C41	Segment		1
C42	JTSS1600-C42	Flange, Scoring Blade		1
C43	JTSS1600-C43	Flange		1
C44	JTSS1600-C44	Set Screw	M8x20	1
C45	JTSS1600-C45	Socket Head Bolt--Left	M10x25-L	1
C46	JTSS1600-C46	Chip House		1
C47	JTSS1600-C47T	Motor 400V	3~400V 50Hz	1
	JTSS1600-C47M	Motor 230V	~230V 50Hz	1
	JTSS1600-C47MR	Running Capacitor (not shown)	450V / 50uf	1
	JTSS1600-C47MS	Starting Capacitor (not shown)	265V / 300uf	1
	JTSS1600-C47MF	Motor Fan (not shown)		1
	JTSS1600-C47MF	Motor Fan Cover (not shown)		1
C48	JTSS1600-C48	Flange		1
C49	JTSS1600-C49	Ball		1


Parts List for JTSS-1600 Panel Saw ----- Part C

Index No.	Part No.	Description	Size	Qty.
C50	JTSS1600-C50	Tube		1
C51	JTSS1600-C51	Wheel Handle		1
C52	JTSS1600-C52	Thread shaft		2
C53	JTSS1600-C53	Spring		1
C54	JTSS1600-C54	Washer		1
C55	JTSS1600-C55	Round Nut		1
C56	JTSS1600-C56	Spacer		1
C57	JTSS1600-C57	Circle Ring		1
C58	JTSS1600-C58	Thrust Bearing	AXK2035	1
C59	JTSS1600-C59	Washer		1
C60	JTSS1600-C60	Set Screw	M8x10	6
C61	JTSS1600-C61	Circle Ring	32	5
C62	JTSS1600-C62	Roll Pin	3x24	1
C63	JTSS1600-C63	Set Screw	M6x6	2
C64	JTSS1600-C64	Pan Head Screw	M4x10	1
C65	JTSS1600-C65	Set Screw	M8x12	1
C66	JTSS1600-C66	Bearing	6002-ZZ	2
C67	JTSS1600-C67	Lock Nut	M6	2
C68	JTSS1600-C68	Set Screw	M8x40	1
C69	JTSS1600-C69	Washer	8mm	6
C70	JTSS1600-C70	Hex Head Screw	M8x12	1
C71	JTSS1600-C71	Circle Ring	C-20	1
C72	JTSS1600-C72	Thread Assembly (#C121 Thru; #C124; #C38, #C49;#C50;#C62;#76)		1
C73	JTSS1600-C73	Socket Head Cap Screw	M8x30	4
C74	JTSS1600-C74	Hex Nut	M8	4
C75	JTSS1600-C75	Pan Head Screw	M6x12	2
C76	JTSS1600-C76	Flat Washer	6mm	3
C77	JTSS1600-C77	Hex Head Screw	M8x35	1
C78	JTSS1600-C78	Sunken Head Screw	M8x40	1
C79	JTSS1600-C79	Hex Head Screw	M6x20	2
C80	JTSS1600-C80	Allen Screw	M8x25	1
C81	JTSS1600-C81	Special Nut		1
C82	JTSS1600-C82	Set Screw	M6x6	1
C83	JTSS1600-C83	Flat Hey	8x25	1
C84	JTSS1600-C84	Flat Washer	8mm	5
C85	JTSS1600-C85	Spring Washer	8mm	5
C86	JTSS1600-C86	Shaft		1
C87	JTSS1600-C87	Carriage Bolt	M10x80C	1
C88	JTSS1600-C88	Hex Nut	M10	1
C89	JTSS1600-C89	Hex Head Screw	M8x16	1
C90	JTSS1600-C90	Sunken Head Screw		1
C91	JTSS1600-C91	Hex Head Screw		2
C92	JTSS1600-C92	Set Screw	M8x16	1
C93	JTSS1600-C93	Nut	M35x1	1
C94	JTSS1600-C94	Ribbed Belt --290J / Gates	4PJ736/290J-4P	1
C95	JTSS1600-C95	Ribbed Belt --220J / Gates	7PJ559/220J-7P	1
C96	JTSS1600-C96	Large Washer		1
C97	JTSS1600-C97	Handle		1
C98	JTSS1600-C98	Set Handle		1
C99	JTSS1600-C99	Key	A5x20	1
C100	JTSS1600-C100	R-Key	B5	1
C101	JTSS1600-C101	Socket Head Cap Screw	M8x20	2
C102	JTSS1600-C102	Set Screw	M8x20	4
C103	JTSS1600-C103	Set Screw	M6x6	4
C104	JTSS1600-C104	Spring Washer	6mm	2
C105	JTSS1600-C105	Flat Washer	10mm	1
C106	JTSS1600-C106	Circle Ring	C-8	1

Parts List for JTSS-1600 Panel Saw ----- Part C

C107	JTSS1600-C107	Riving Knife		1
C108	JTSS1600-C108	Long Screw		1
C112	JTSS1600-C112	Socket Head Screw	M6x25	1
C113	JTSS1600-C113	Set Screw	M6x10	2
C114	JTSS1600-C114	Socket Flat Screw	M6x40mm	2
C115	JTSS1600-C115	Plate for Pointer		1
C116	JTSS1600-C116	Flat Washer	5mm	1
C117	JTSS1600-C117	Pan Head Cap Screw	M5x6	1
C118	JTSS1600-C118	Socket Head Cap Screw	M10x20	1
C119	JTSS1600-C119	Socket Head Cap Screw	M8x20	1
C120	JTSS1600-C120	Socket Head Flat Screw	M10x20	1
C121	JTSS1600-C121	Flat Washer		1
C122	JTSS1600-C122	Hex Head Screw	M6x16	2
C123	JTSS1600-C123	Ball Plate		1
C124	JTSS1600-C124	Ball Plate		1
C125	JTSS1600-C125	Hex Head Screw	M8x16	2
C126	JTSS1600-C126	Key	6x20	1
C127	JTSS1600-C127	Flat Head Screw	M4x12	1
C128	JTSS1600-C128	Socket Flat Screw	M6x25	2
C129	JTSS1600-C129	Set Handle		1
C130	JTSS1600-C130	Clamp	JDΦ90- Φ110	2
C131	JTSS1600-C131	Tube	Φ100x800mm	1
C132	JTSS1600-C132	Socket Head Cap Screw	M8x10	2
C133	JTSS1600-C133	Dust Collection Port		1
C134	JTSS1600-C134	Pan Head Screw	M6X20	3
C136	JTSS1600-C136	Main Table		1
C137	JTSS1600-C137	Extension Table		1
C138	JTSS1600-C138	Scoring Blade Assembly (#C4Thru #C6; #C2,#C19,#C54,#C15,#C34,#C35, #63;#C65 thru #C68)		1


Parts Breakdown for JTSS-1600 Panel Saw -----Part D

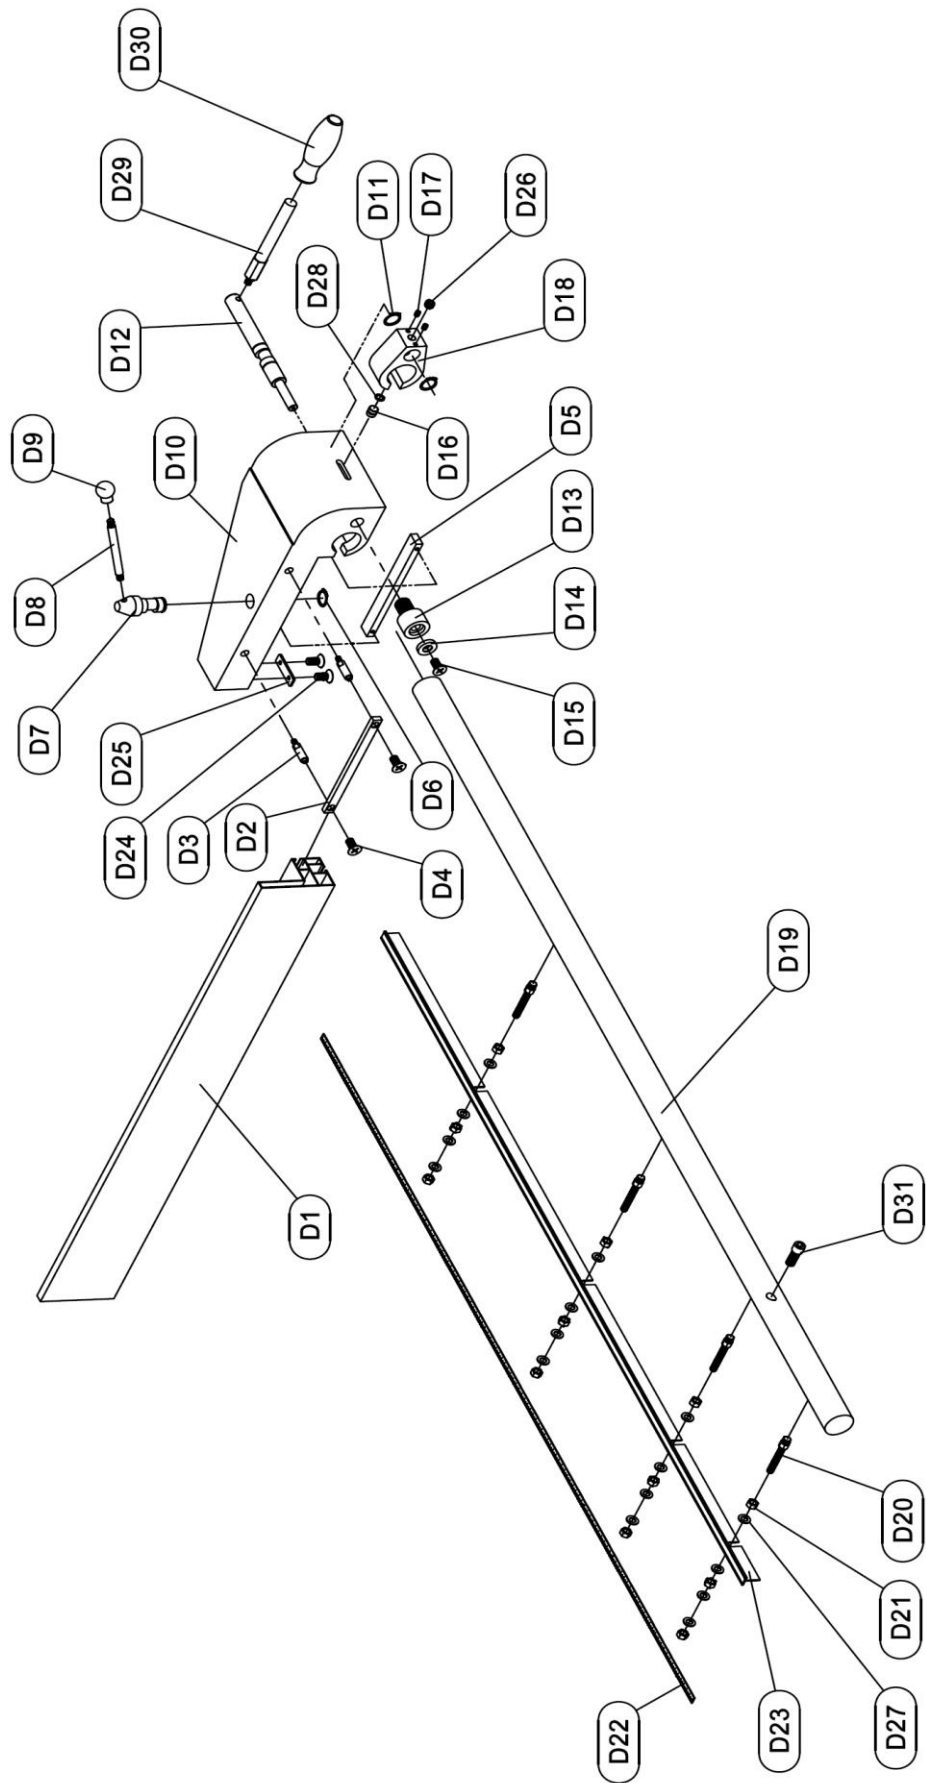

Parts List for JTSS-1600 Panel Saw ----- Part D

Index No.	Part No.	Description	Size	Qty.
D1	JTSS1600-D01	L Type Aluminum Baffle		1
D2	JTSS1600-D02	Locking Plate		1
D3	JTSS1600-D03	The Positioning Shaft		2
D4	JTSS1600-D04	Countersunk Head Screw	M5x16	4
D5	JTSS1600-D05	Connecting Plate		1
D6	JTSS1600-D06	Retaining Rings For Shafts	20	1
D7	JTSS1600-D07	L Type Aluminum Locking Shaft		1
D8	JTSS1600-D08	Handle		1
D9	JTSS1600-D09	Handball		2
D10	JTSS1600-D10	Slide Block		1
D11	JTSS1600-D11	Retaining Rings For Shafts	20	2
D12	JTSS1600-D12	Slide Block Shaft		1
D13	JTSS1600-D13	Thread Bushing		1
D14	JTSS1600-D14	Washer	5mm	1
D15	JTSS1600-D15	Countersunk Head Screw	M5x10	1
D16	JTSS1600-D16	The Locking Block Mandrel		1
D17	JTSS1600-D17	Inner Set Screw	M6x8	2
D18	JTSS1600-D18	Locking Block		1
D19	JTSS1600-D19	Side Guide		1
D20	JTSS1600-D20	Screw		4
D21	JTSS1600-D21	Nut	M8	12
D22	JTSS1600-D22	Track Scale		1
D23	JTSS1600-D23	The Scale Fixing Plate		1
D24	JTSS1600-D24	Countersunk Head Screw	M5x10	2
D25	JTSS1600-D25	The Bottom Baffle		1
D26	JTSS1600-D26	Set Screw	M12x8	1
D27	JTSS1600-D27	Flat Washer	8mm	16
D28	JTSS1600-D28	Rubber Washer	O-9x1.8	1
D29	JTSS1600-D29	Handle Shaft		1
D30	JTSS1600-D30	Handle		1
D31	JTSS1600-D31	Socket Head Cap Screw	M5x10	1

Parts Breakdown for JTSS-1600 Panel Saw-----Part E

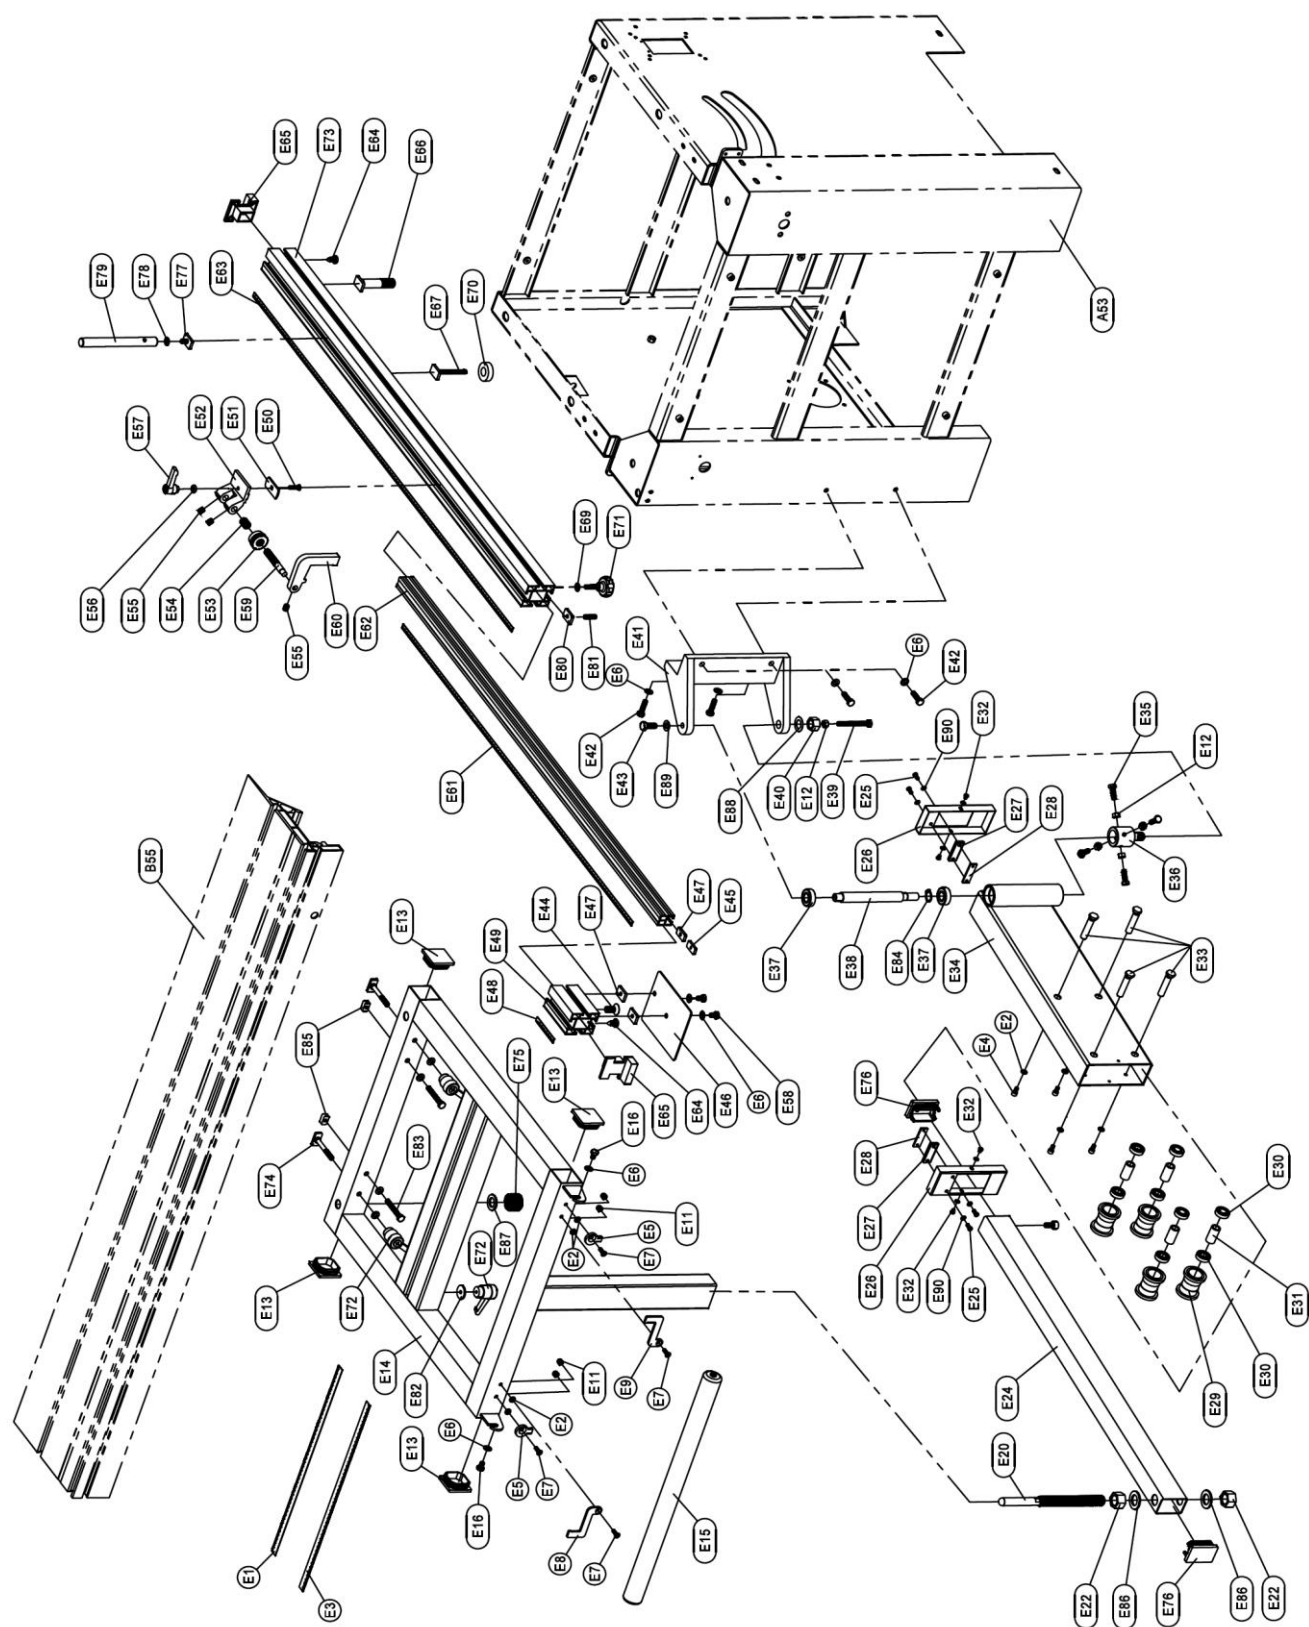


Parts List for JTSS-1600 Panel Saw ----- Part E

Index No.	Part No.	Description	Size	Qty.
E1	JTSS1600-E01	Scale, Cross Cut Table		1
E2	JTSS1600-E02	Flat Washer	6mm	4
E3	JTSS1600-E03	Scale, Cross Cut Table		1
E4	JTSS1600-E04	Socket Head Cap Screw	M6x12	5
E5	JTSS1600-E05	Eccentric Cam		2
E6	JTSS1600-E06	Flat Washer	8mm	14
E7	JTSS1600-E07	Sunk Head Screw	M6x18	4
E8	JTSS1600-E08	"Z" Lock Plate		1
E9	JTSS1600-E09	"Z" Lock Plate		1
E11	JTSS1600-E11	Lock Nut	M6	4
E12	JTSS1600-E12	Hex Nut	M8	5
E13	JTSS1600-E13	End Cap, Cross Cut Table		4
E14	JTSS1600-E14	Cross Cut Table		1
E15	JTSS1600-E15	Roller		1
E16	JTSS1600-E16	Hex Screw	M8x12	4
E20	JTSS1600-E20	Support Rod, Cross Cut Table		1
E22	JTSS1600-E22	Thin Hex Nut	M20	2
E24	JTSS1600-E24	Swing Arm, Extension		1
E25	JTSS1600-E25	Pan Head Screw	M5x12	4
E26	JTSS1600-E26	Insert, Swing Arm		2
E27	JTSS1600-E27	Woolen Sheet		2
E28	JTSS1600-E28	Block		2
E29	JTSS1600-E29	Roll		4
E30	JTSS1600-E30	Bearing	6001-2RZ	8
E31	JTSS1600-E31	Spacer, Roll		4
E32	JTSS1600-E32	Pan Head Screw	M5x6	4
E33	JTSS1600-E33	Eccentric Shaft		4
E34	JTSS1600-E34	Swing Arm		1
E35	JTSS1600-E35	Hex Screw	M8x25	4
E36	JTSS1600-E36	Stop Collar		1
E37	JTSS1600-E37	Bearing	6202-2RZ	2
E38	JTSS1600-E38	Shaft, Swing Arm		1
E39	JTSS1600-E39	Hex Bolt	M8x70	1
E40	JTSS1600-E40	Thin Nut	M16	1
E41	JTSS1600-E41	Support, Swing Arm		1
E42	JTSS1600-E42	Hex Screw	M8x30	4
E43	JTSS1600-E43	Hex Screw	M10x25	1
E44	JTSS1600-E44	Sunk Head Screw	M6x12	1
E45	JTSS1600-E45	T- Nut, Extension Fence		1
E46	JTSS1600-E46	Lock Plate		1
E47	JTSS1600-E47	T- Block M8		3
E48	JTSS1600-E48	Scale		1
E49	JTSS1600-E49	End, Extension Fence		1
E50	JTSS1600-E50	Carriage Bolt	M6x20	1
E51	JTSS1600-E51	Screw Guide		1
E52	JTSS1600-E52	Flip Stop Base		1
E53	JTSS1600-E53	Knurled Knob		1
E54	JTSS1600-E54	Spring, Flip Stop		1
E55	JTSS1600-E55	Set Screw	M5x6	3
E56	JTSS1600-E56	Spacer , Ratchet Lever		1
E57	JTSS1600-E57	Ratchet Lever, Flip Stop		1
E58	JTSS1600-E58	Hex Screw	M8x12	4

Parts List for JTSS-1600 Panel Saw ----- Part E

Index No.	Part No.	Description	Size	Qty.
E59	JTSS1600-E59	Stud, Flip Stop		1
E60	JTSS1600-E60	Flip Stop		1
E61	JTSS1600-E61	Scale A		1
E62	JTSS1600-E62	Extension Fence		1
E63	JTSS1600-E63	Scale B		1
E64	JTSS1600-E64	Taping Screw	ST4.2x9.5	2
E65	JTSS1600-E65	End Cap, Cross Cut Fence		2
E66	JTSS1600-E66	Lock Stud, Cross Cut Fence		1
E67	JTSS1600-E67	T- Block		1
E69	JTSS1600-E69	Flat Washer	8mm	2
E70	JTSS1600-E70	Spacer, Lock Handle		
E71	JTSS1600-E71	Star - Type Lock Handle		1
E72	JTSS1600-E72	Wing Nut	M8	3
E73	JTSS1600-E73	Cross Cut Fence		1
E74	JTSS1600-E74	T- Block		2
E75	JTSS1600-E75	Knurled Knob, Fence		1
E76	JTSS1600-E76	End Cap, Swing Arm		2
E77	JTSS1600-E77	T- Block, Hold Down		1
E78	JTSS1600-E78	Washer	12mm	1
E79	JTSS1600-E79	Stud, Hold Down		1
E80	JTSS1600-E80	Limit Block		1
E81	JTSS1600-E81	Set Screw	M8x8	1
E82	JTSS1600-E82	Flat Washer 8x3		1
E83	JTSS1600-E83	Hex Bolt	M8x60	2
E84	JTSS1600-E84	C-Ring	15	1
E85	JTSS1600-E85	Limit Block		2
E86	JTSS1600-E86	Flat Washer 20x3		2
E87	JTSS1600-E87	Flat Washer 18x3		1
E88	JTSS1600-E88	Flat Washer	16	1
E89	JTSS1600-E89	Flat Washer 10x2		1
E90	JTSS1600-E90	Flat Washer	5	4


Parts Breakdown for JTSS-1600 Panel Saw -----Part G

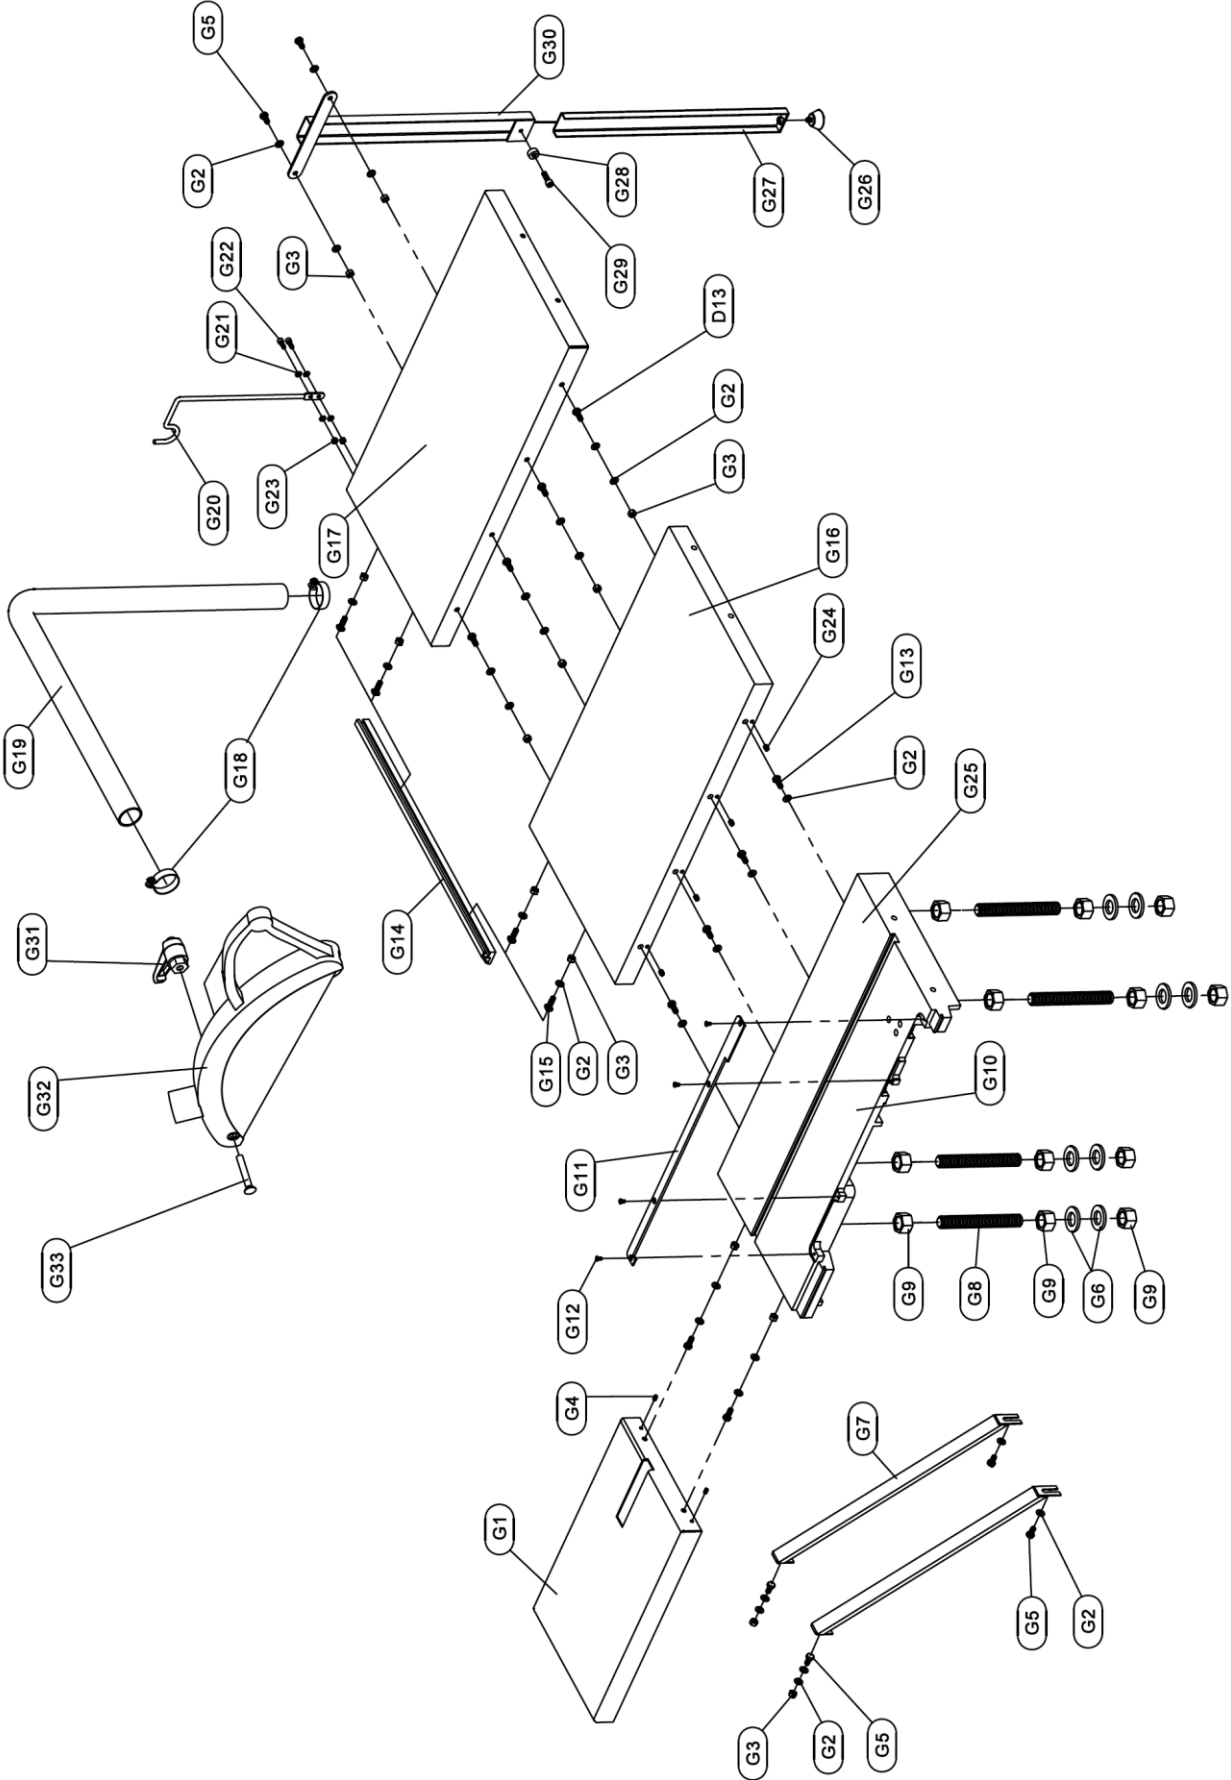

Parts List for JTSS-1600 Panel Saw -- Part G

Index No.	Part No.	Description	Size	Qty.
G1	JTSS1600-G01	Rear Extension Table		1
G2	JTSS1600-G02	Flat Washer	8mm	30
G3	JTSS1600-G03	Hex Nut	M8	14
G4	JTSS1600-G04	Set Screw	M6x10	2
G5	JTSS1600-G05	Hex Screw	M8x16	6
G6	JTSS1600-G06	Flat Washer	12mm	8
G7	JTSS1600-G07	Rea Table Support		2
G8	JTSS1600-G08	Set Screw	M12x90	4
G9	JTSS1600-G09	Hex Nut	M12	12
G10	JTSS1600-G10	Major Table		1
G11	JTSS1600-G11	Table Insert		1
G12	JTSS1600-G12	Sunk Head Screw	M5x10	4
G13	JTSS1600-G13	Hex Screw	M8x20	10
G14	JTSS1600-G14	Rear Rail		1
G15	JTSS1600-G15	Square Head Screw	M8x25	4
G16	JTSS1600-G16	Extension Table		1
G17	JTSS1600-G17	Steel Extension Table		1
G18	JTSS1600-G18	Hose Clamp	JD35-51	2
G19	JTSS1600-G19	Dust Hose 30mm Dia.X3240mm		1
G20	JTSS1600-G20	Dust Hose Support		1
G21	JTSS1600-G21	Flat Washer	6mm	2
G22	JTSS1600-G22	Socket Head Cap Screw	M6x16	2
G23	JTSS1600-G23	Hex Nut	M6	2
G24	JTSS1600-G24	Set Screw	M8x10	4
G25	JTSS1600-G25	Main Table		1
G26	JTSS1600-G26	Adjustable Disc		1
G27	JTSS1600-G27	Lower, Support		1
G28	JTSS1600-G28	Disc Insert		1
G29	JTSS1600-G29	Socket Head Cap Screw	M8x25	1
G30	JTSS1600-G30	Upper, Support		1
G31	JTSS1600-G31	Lock Handle for Guard		1
G32	JTSS1600-G32	Blade Guard Assembly		1
G33	JTSS1600-G33	Lock Bolt, Guard		1

Parts Breakdown for JTSS-1600 Panel Saw -- Mitre Gauge for Table----Part H

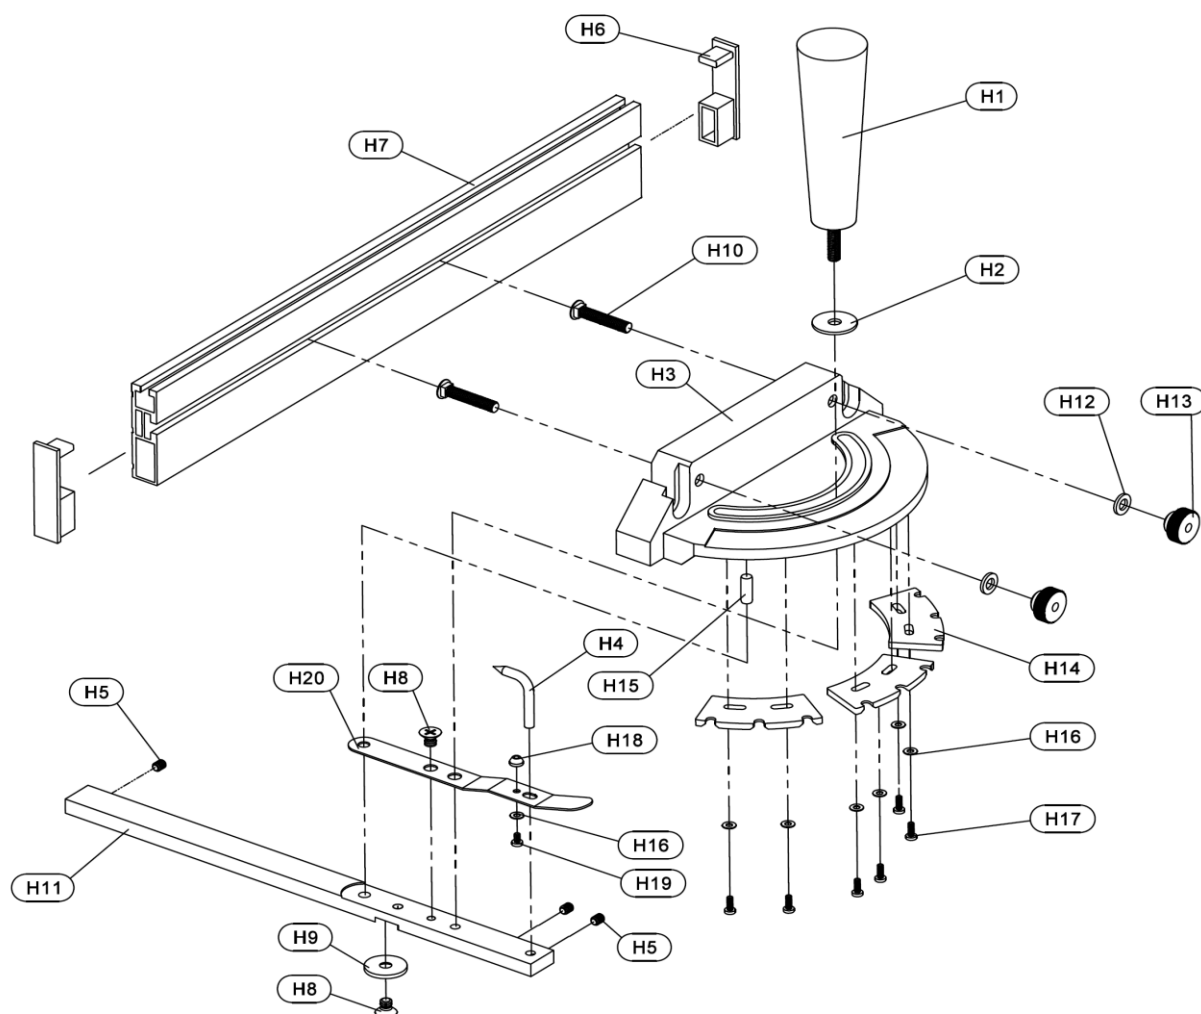


Parts List for JTSS-1600 Panel Saw - Mitre Gauge for Table ---- Part H

Index No.	Part No.	Description	Size	Qty.
H1	JTSS1600-H01	Mitre Gauge Knob		1
H2	JTSS1600-H02	Flat Large Washer	6mm	1
H3	JTSS1600-H03	Mitre Gauge Base		1
H4	JTSS1600-H04	Indicator		1
H5	JTSS1600-H05	Set Screw	M5x6	3
H6	JTSS1600-H06	End Cap, Gauge Fence		2
H7	JTSS1600-H07	Gauge Fence		1
H8	JTSS1600-H08	Sunk Head Screw	M6x8	2
H9	JTSS1600-H09	Roller, Gauge		1
H10	JTSS1600-H10	Carriage Bolt	M6x30	2
H11	JTSS1600-H11	Miter Gauge Rod		1
H12	JTSS1600-H12	Washer	6mm	2
H13	JTSS1600-H13	Knurled Nut		2
H14	JTSS1600-H14	Angle Stop Plate		3
H15	JTSS1600-H15	Pin	6x16	1
H16	JTSS1600-H16	Flat Washer	3mm	7
H17	JTSS1600-H17	Pan Head Cap Screw	M3x8	6
H18	JTSS1600-H18	Angle Pin		1
H19	JTSS1600-H19	Flat Washer	M3x5	1
H20	JTSS1600-H20	Spring Plate		1

Wiring Diagram for JTSS-1600 Panel Saw

10000044T..... 3 ~ 400V, 50Hz

3~400V, 50Hz

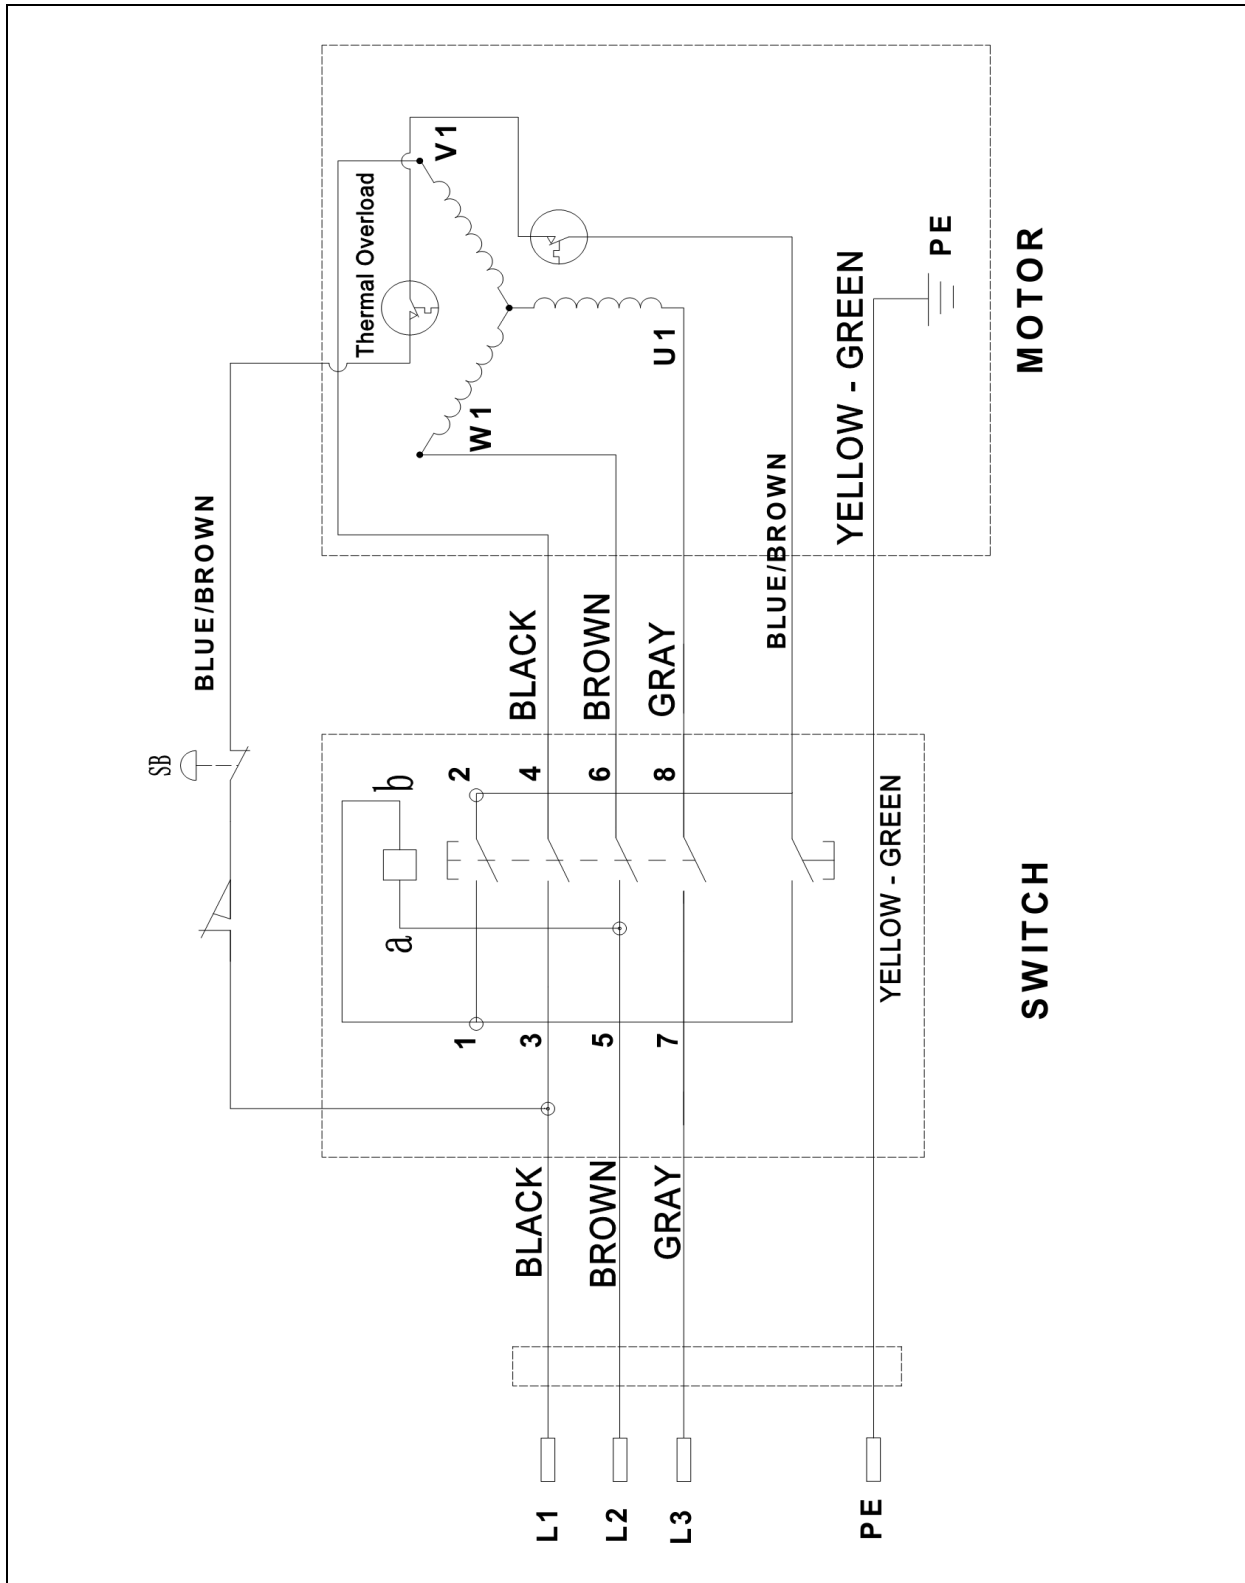

~230V, 50Hz

